GPX®

USER'S GUIDE

V: 530-01

PD701

Portable DVD Player

For the most up-to-date version of this User's Guide, go to **www.gpx.com**

Warnings and Precautions

- **CAUTION**: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ***PRÉCAUTION:*** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS****: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur est utilisé pour déconnecter le système.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12.

Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.
  La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or back of the apparatus.
  Attention marquage est situé à l'arrière ou à l'arrière de l'appareil
- The marking information is located at the rear or back of apparatus.
  Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

Portable DVD Player

Features

- Plays DVD, DVD±R/RW, CD, CD-R/RW, JPEG CD
- 7" TFT LCD display
- Aspect ratio: 16:9
- 3.5mm audio/video output
- Stereo headphone jack
- Built-in stereo speakers
- Full-function remote
- Multi-language on-screen display
- NTSC video system
- Built-in rechargeable battery

Included

- Remote control + 2 AAA batteries
- 3.5mm to RCA audio/video adapter
- One set of stereo earbuds
- AC/DC power adapter
- 12V DC car adapter

Table of Contents

Portable DVD Player 4
Features
Included

Table of Contents 5

Introduction 6

Setup 8
Power
Battery Power
Remote
Charging the Built-in Battery

DVD and CD 9
Loading a Disc
Playing a Loaded Disc
Programming a Loaded Disc

Setup Menu 10
Accessing the Setup Menu
Setup Menu Contents

Audio/Video Output 11
Using the 3.5mm Audio/Video Output

Company Information 12
International Support
Contact Information
Green Initiative

Introduction

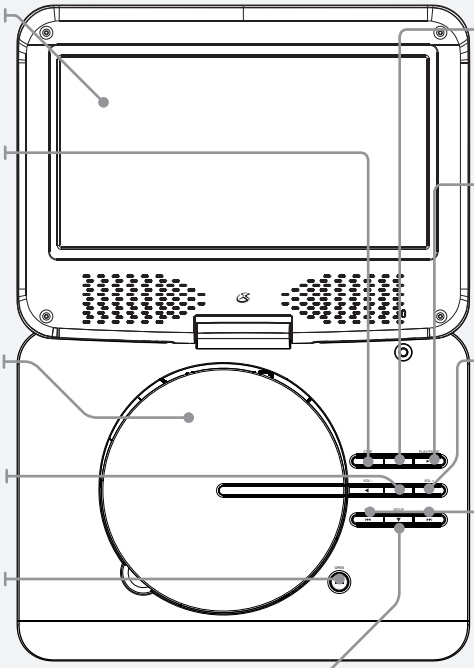

LCD DISPLAY

STOP
Press to stop a loaded disc during play.

DISC DOOR

OK
Press to make selections in the on-screen menu.

OPEN
Press to open the DISC DOOR.

SETUP/ARROW (▼)
Press and hold to access the setup menu. Press to navigate on-screen menus.

ARROW (▲)
Press to navigate on-screen menus.

PLAY/PAUSE
Press to play or pause the loaded disc.

VOLUME/ARROW (◀ ▶)
Press and hold to adjust the volume. Press to navigate on-screen menus.

REV/FWD
Press to skip between chapters or tracks. Press and hold to search through an individual chapter or track.



CHARGE INDICATOR
Turns red when the portable DVD player is charging.

POWER INDICATOR
Turns green when the portable DVD player is powered on.



STEREO HEADPHONE JACK

AUDIO/VIDEO OUTPUT

POWER
Adjust to turn the power on or off.

DC POWER INPUT

DISPLAY MODE
Press to adjust the brightness or color of the LCD DISPLAY. Press and hold to turn the display off and on.

MENU
Press to access the loaded DVD's menu.

SETUP
Press to access the setup menu.

MUTE
Press to mute the volume.

STOP
Press to stop a loaded disc during play.

TITLE
Press to access the title menu of a loaded DVD.

REV/FWD
Press to skip between chapters or tracks. Press and hold to search through an individual chapter or track.

OK/PLAY/PAUSE
Press to make selections on the current menu or to play or pause a loaded disc.

ARROW
Press to navigate loaded discs or the system menu.

NUMBER KEYPAD

PROGRAM/ANGLE
Press to program a loaded disc to play chapters or tracks in a specified order. On supported DVDs, press and hold to view alternate angles.

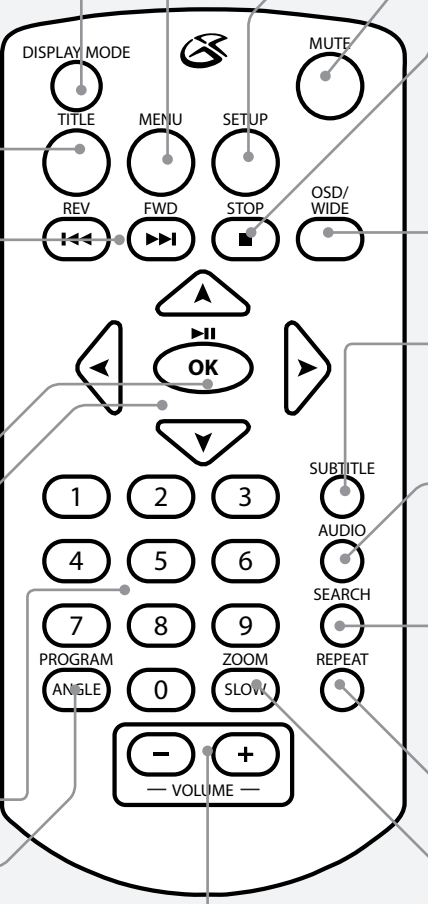

VOLUME
Press to adjust the volume.

OSD/WIDE
Press to view information in the on-screen display. Press and hold to switch between 4:3PS, 4:3LB, and 16:9.

SUBTITLE
Press to adjust the current subtitle settings.

AUDIO
Press to adjust the current audio settings.

SEARCH
Press to search the loaded disc for a specific title, chapter, or track.

REPEAT
Press to repeat a single chapter, title, track, entire disc, or create a repeating loop.

ZOOM/SLOW
Press to zoom in or out on a playing DVD. Press and hold to view a playing DVD in slow motion.

Setup

Power

DC power input: requires an AC/DC adapter (included)

*The **POWER INDICATOR** will turn green whenever the portable DVD player is powered on.*

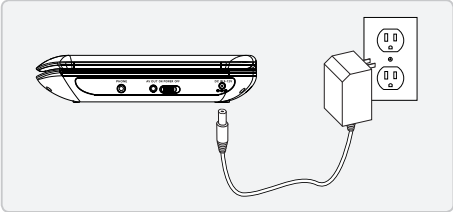

Battery Power

DC battery power: built-in rechargeable battery

*The **CHARGE INDICATOR** will turn red whenever the built-in rechargeable battery is charging.*

*The **POWER INDICATOR** will turn green whenever the portable DVD player is powered on.*

Charging the Built-in Battery

1. Plug the included AC/DC power adapter into the **DC POWER INPUT** on the portable DVD player and an AC power outlet.
2. Adjust the **POWER** switch to the off position.

   *The **CHARGE INDICATOR** will turn red whenever the built-in rechargeable battery is charging.*

Remote

Requires 2 AAA batteries (included)

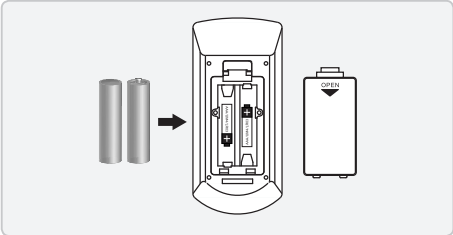

DVD and CD

Loading a Disc

1. Press the **OPEN** button to open the **DISC DOOR**.
2. Load a disc into the portable DVD player, label side facing up.
3. Close the **DISC DOOR**.

   After a disc is loaded, it will begin playing automatically.

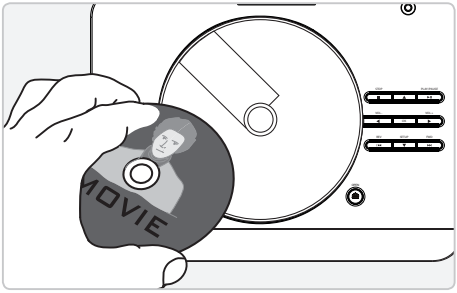

Playing a Loaded Disc

1. Follow the instructions for Loading a Disc.
2. If the disc does not begin playing automatically, press the **PLAY/PAUSE** button.

Programming a Loaded Disc

1. Follow the instructions for Loading a Disc and Playing a Loaded Disc.
2. While the loaded disc is playing, press the **PROGRAM** button on the remote.
3. Use the **ARROW** buttons to select a program slot.
4. Use the **NUMBER KEYPAD** to enter in the chapter and title, or track.

   Titles and chapters, or tracks will play in the order they are listed.
5. Repeat step 3 until the desired titles and chapters, or tracks are programmed.
6. Use the **ARROW** buttons to highlight the on-screen PLAY button. Press the **OK** button to begin playing the programmed disc.

Note: This unit is not compatible with MP3 CDs.

Setup Menu

Accessing the Setup Menu

1. Press and hold the **SETUP** button on the portable DVD player or press the **SETUP** button on the remote to access the setup menu.

Setup Menu Contents

System Setup

TV System
- NTSC
- PAL

Screen Saver
- ON
- OFF

TV Type
- 4:3PS
- 4:3LB
- 16:9

Default
- Restore

Language Setup

OSD Language
- Use to adjust the on-screen display language.

Audio Lang
- Use to adjust the audio language of the loaded DVD.

Subtitle Lang
- Use to adjust the subtitle language of the loaded DVD.

Menu Lang
- Use to adjust the DVD menu language of the loaded DVD.

Video Setup

Brightness

Contrast

Hue

Saturation

Speaker Setup

Downmix
- LT/RT
- Stereo

Audio/Video Output

Using the 3.5mm Audio/Video Output

Requires a 3.5mm to 3 x RCA audio/video adapter (included) and an RCA audio/video cable (not included).

1. Connect the 3.5mm to 3 x RCA audio/video adapter to the **3.5mm AUDIO/VIDEO OUTPUT** on the portable DVD player.
2. Connect the RCA audio/video cable to the 3.5mm to 3 x RCA audio/video adapter and the RCA stereo audio inputs and composite video input on a television.
3. Audio and video played through the portable DVD player will now be output through the connected television.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.gpx.com.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.gpx.com.

Contact Information

Email Support: prodinfo@dpiinc.com
Email Parts: partsinfo@dpiinc.com
Phone Support: 1-888-999-4215
Website: www.gpx.com

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.gpx.com

Green Initiative

MADE GREEN
protect for today • sustain for tomorrow

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'
On a continual basis DPI, Inc. is making efforts to sustain the environment and improve the recyclability of its products and packaging.

Focusing on "protecting for today and sustaining for tomorrow" DPI, Inc. has committed to reducing packaging size, increasing the usage of recyclable plastics, and ensuring that packaging and manuals are made with up to 85% recycled material. In addition to material consideration, DPI, Inc. has also focused on the finer details that positively impact the environment such as employing the usage of soy-based inks.

DPI, Inc. also ensures that the factories that produce the company's wide variety of consumer electronics adhere to environmentally friendly air and water restrictions. This is yet another example that every step of the way DPI, Inc. is making efforts to lessen any impact on the environment.

In 2011 DPI, Inc. also began conversations with Energy Star in order to ensure that the consumer electronics being produced meet high standards of energy efficiency. The ultimate goal is keeping energy costs for consumers low while providing quality, feature-rich products.

Copyright © 2010 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice