



# AUTOSAVERR88

TAILLIGHT



## Product Specifications:

**Surface finish:** smoke

**Location:** Mounts using factory mounting locations


**Weather Sealed:** Completely weather sealed to keep the elements out

**Package Include:** 1 Pair Tail Lights (Left & Right Side)

## Installation:


### Step 1

1. Make sure the lamp switch is in the off position, then open the tailgate.
2. Remove the (2) rear lamp assembly screws near the tailgate latch and pull out the lamp assembly.
3. Disconnect the socket connectors.

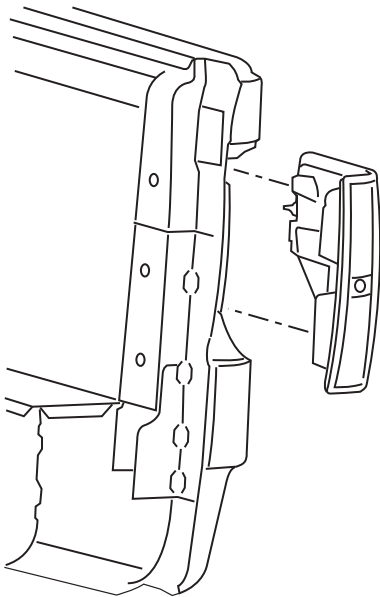

### Step 2

1. Press the tab and turn the bulb sockets counterclockwise to remove sockets from the taillamp housing.
2. Take the new taillamp housing and insert sockets turn the sockets clockwise into the taillamp housing until it clicks.
3. Connect the socket connectors
4. Replace the rear lamp assembly and tighten the screws.
5. Close the tailgate.

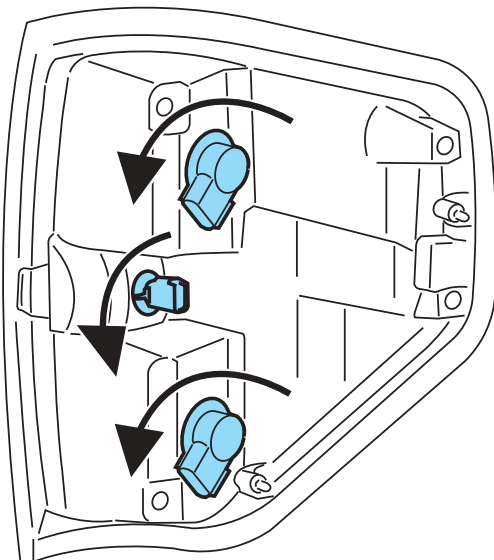

- ① Stop/Turn/Sidemarker/Taillamp:3057K
- ② Back-up:921

# Wiring Diagram:

