

# INSTALLATION INSTRUCTIONS FOR STAINLESS STEEL COUNTERTOPS

## Galvanized Hat Channels

(3 channels are supplied with 30" wide countertops as shown.  
2 Hat Channels Are Supplied With 25" Countertops)

A = Angle Bracket (Provided)  
B = Galvanized Hat Channels  
(Attached Underside of Countertop)

### TOOLS RECOMMENDED:

- Screw Gun
- Drill Bits
- Self-Tapping Sheet Metal Screws (Not Included)
- Wood Screws (Not Included)


**STEP 1:** Place Countertop onto Cabinet Base. Make sure the Countertop is level and in correct position.

**STEP 2:** Secure to cabinet base with  $\frac{3}{4}$ " x  $\frac{3}{8}$ " self tapping sheet metal screws (not included) through the cabinet framing members or 2" x 2" x 3" metal angles (not included). Screws should be run into the support channels and never into the underside of the countertop.

**IMPORTANT NOTE: SCREWS ARE TO BE AFFIXED TO HAT CHANNELS ONLY!  
NOT DIRECTLY TO UNDERSIDE OF COUNTERTOP.**

For Additional Assistance,  
Please call Customer Service at:  
**1-800-645-3166**

### Underside View of Countertop

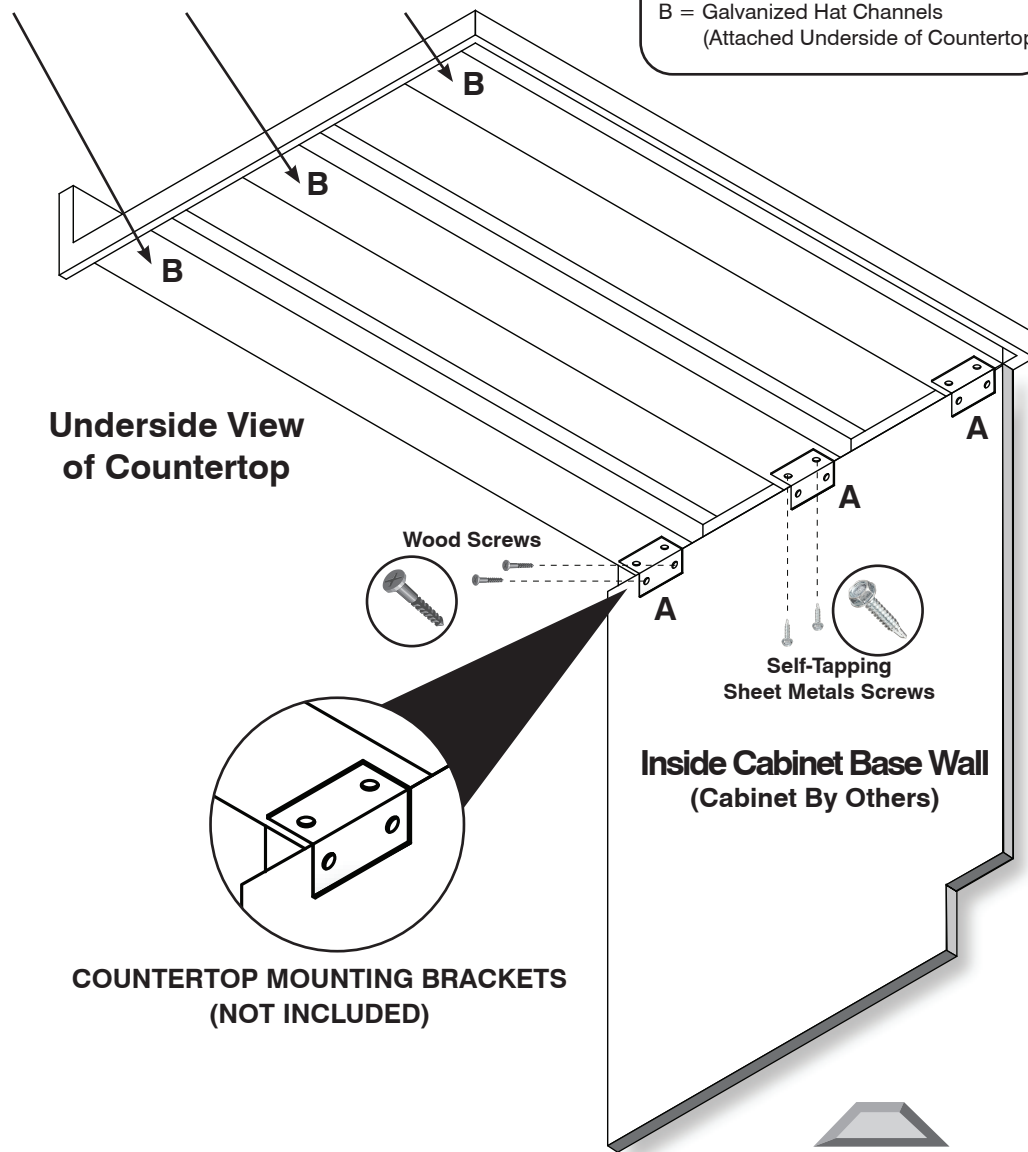

COUNTERTOP MOUNTING BRACKETS  
(NOT INCLUDED)

Countertops manufactured by ADVANCE TABCO are designed and constructed for Food Preparation, Cooking, and the like. ADVANCE TABCO does not recommend product use for activities employing harsh and active chemicals. Consult factory regarding unusual applications. Revised 8/2021

**ADVANCE TABCO®**  
SMART FABRICATION™