

Rods & Tabs

ASSEMBLY INSTRUCTIONS

CAUTION


INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Please note:

- Please read instructions BEFORE assembly.
- These instructions cite installation of one rod at a time.
- These instructions cite installation of rods & tabs onto outside of wire shelves. Rods & tabs can be installed along middle area of wire shelves as well.


Step 1 - Attach rod to desired location.

- Hook rod onto outside of top wire shelf.
- Make sure rod is parallel with posts of shelf unit.

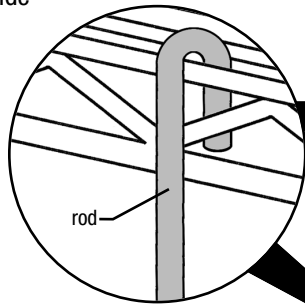

Step 2 - Attach tab to rod and shelf.


- Slide tab notch onto rod.
- Push tab up and onto bottom of shelf truss.

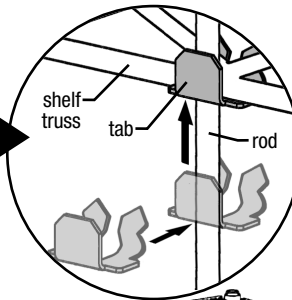

Step 3 - Attach remaining tabs onto rod.

Repeat Step 2, attaching tabs where rod intersects with adjacent wire shelves remaining.

To install more rods & tabs, repeat Steps 1 through 3.

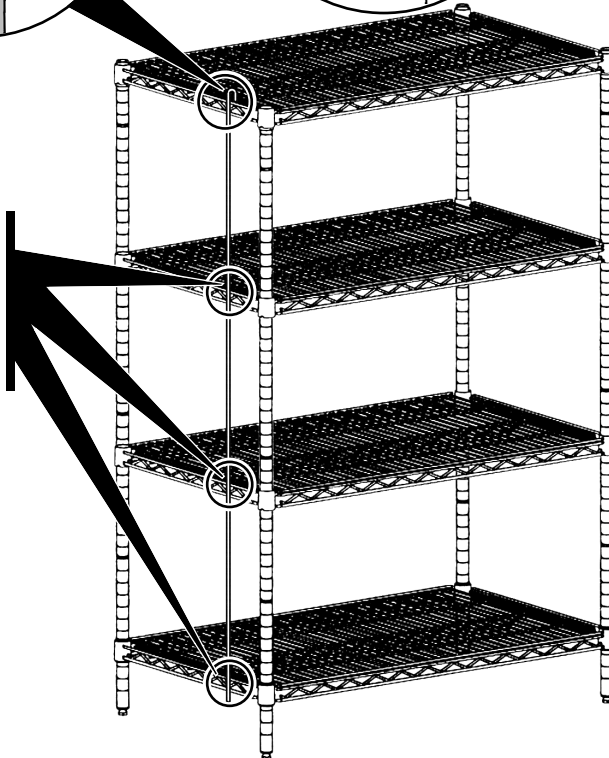

(End) Assembly is complete.

EG10071 Revised 09/23