

STEP 7

Position Pedestal onto Base Shelf and secure with (4) 1/4" x 20 1/2" Truss Head Screws and Nuts provided. (See Figure 5 & 5A)



Figure 5A

STEP 8

Install faucet, drain and drain to sink body.

STEP 9

Position Hand sink Body onto Pedestal and secure with (4) 1/4" x 1/2" Truss Head Screws and Nuts provided. (See Figures 6 & 6A)

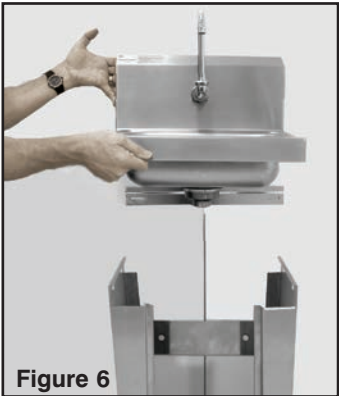


Figure 6



Figure 6A

STEP 10

If required, Remove "Break-Away" tabs at bottom of sides using metal shears to accommodate floor molding. (See Figures 7 & 7A)

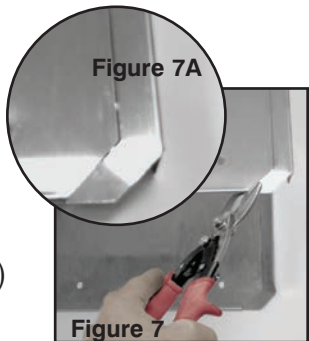


Figure 7

6

STEP 11

Secure rear brace to wall. (See Figure 8)

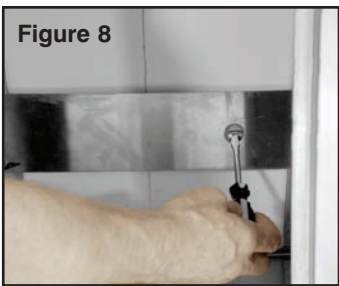


Figure 8

STEP 12

Connect drain and supply line from Foot Valve to Faucet.

STEP 13

Remove aerator and flush water system.

STEP 14

Adjust cold water at front of Foot Valve. (See Figure 9)



Figure 9

STEP 15

Check all water and drain connections for leaks.

STEP 16

Install Front panel to Pedestal. (See Figures 10 & 10A)



Figure 10



Figure 10A

7



**INSTALLATION INSTRUCTIONS
for
PEDESTAL HAND SINKS**



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

WARNING: Equipment that includes a faucet may expose you to chemicals, including lead, that are known to the State of California to cause cancer or birth defects or other reproductive harm. For more Info., visit www.p65warnings.ca.gov.

© ADVANCE TABCO, SEPTEMBER 2018

CONTENTS INCLUDE:

- (1) Hand Sink with Pedestal
- (1) Foot Valve
- (1) Floor Template
- (4) 1/4 - 20 x 3/4" Hex Head Bolts
- (8) 1/4 - 20 x 1/2" Truss Head Screws
- (8) 1/4 - 20 Hex Nuts
- (1) K-121 Faucet
- (1) K-6 Basket Drain
- (1) Wall Clip

TOOLS REQUIRED:

- Tape Measure
- Flat Head Screw Driver
- 7/16" Open End Wrench
- 3/8" Open End Wrench
- Adjustable Wrench
- Drill Motor & Bits
- 48" Level
- Adhesive Tape
- Safety Glasses

2

INSTRUCTIONS:

STEP 1

Position Floor Template at desired location. Tape in place and drill holes as required for mounting hardware (Not Included). (See Figure 1)

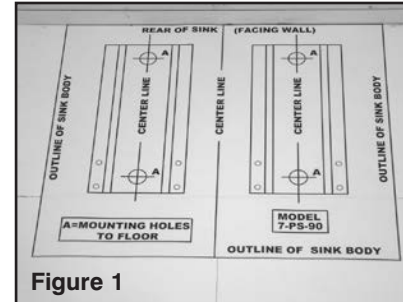


Figure 1

STEP 2

Mark a "plumb" line from the centerline of the Floor Template extending approximately 48" A.F.F. (Above Finished Floor). (See Figure 2). Center Wall Clip on plumb line at a point 41-1/2" A.F.F. level and secure Wall Clip (Hardware not Included). (See Figure 2A)

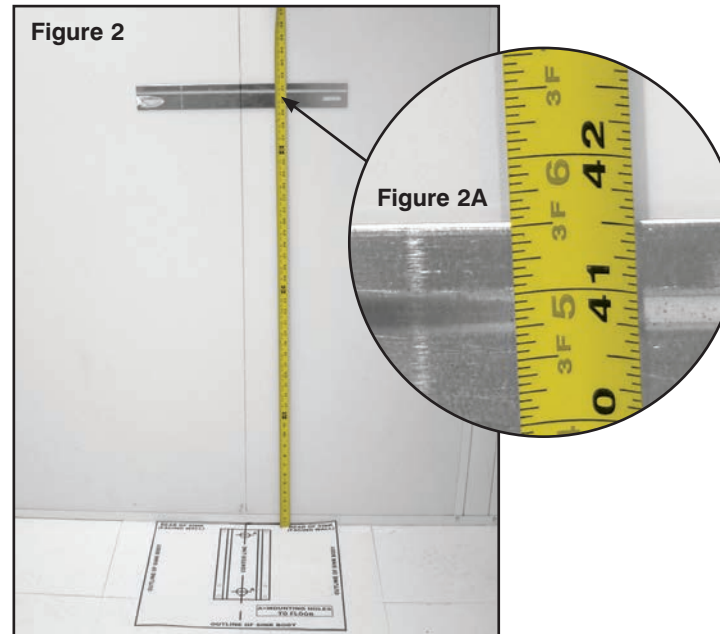


Figure 2

Figure 2A

3

STEP 3

Disassemble Pedestal Base - unbolt sink body from Pedestal. Remove Front Door Panel and disconnect Foot Valve & Base Shelf.

STEP 4

Install Base Shelf to Floor. (See Figure 3)

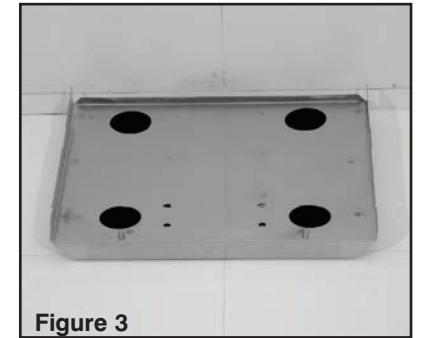


Figure 3

STEP 5

Position and Secure Foot Valve to Base Shelf with (4) 1/4 -20 x 3/4" Hex Head Bolts provided. (See Figure 4)

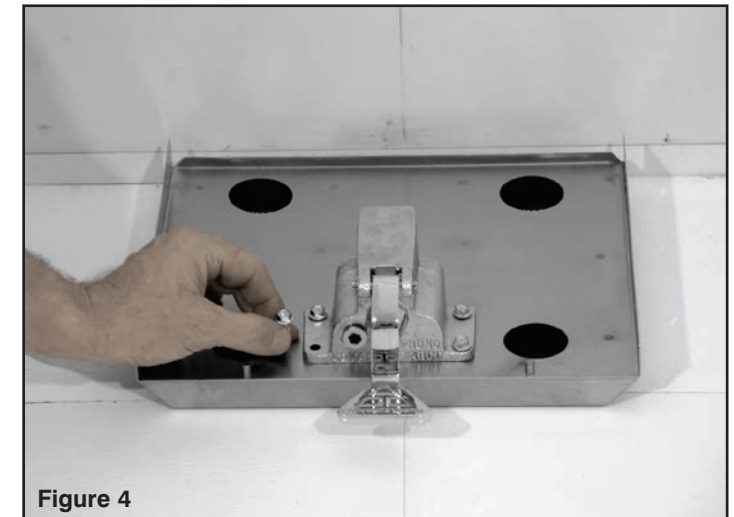


Figure 4

STEP 6

Pre plumb hot and cold water supply to foot valve in accordance with local plumbing codes.

4