


Top-Mount Countertop Drop-In Self-Rim Design Sinks

INSTALLATION INSTRUCTIONS

FOR MOUNTING SINK ONTO UNDERSIDE OF COUNTERTOP
(ALSO KNOWN AS “BOTTOM MOUNT”), SEE PAGE 3.

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.
SAVE YOUR BOX AND ALL PACKING MATERIALS.
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

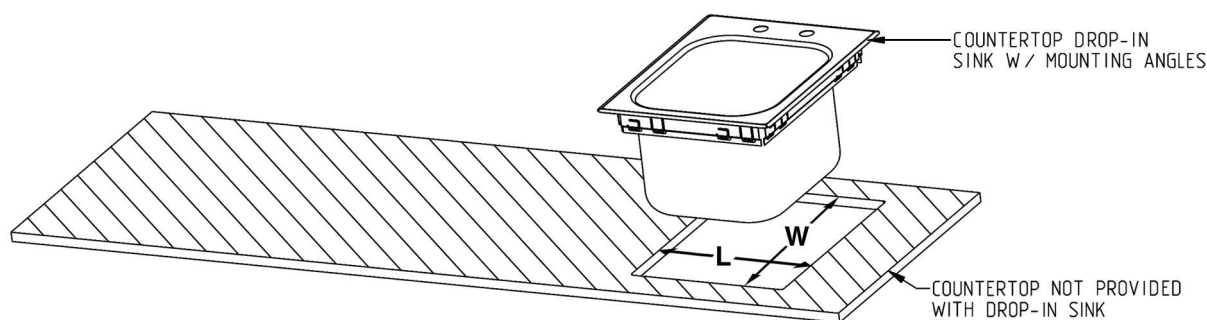

Top-Mount Cutout Dimensions

model # cutout dimensions
(width x length)

One-Compartment Sinks

SR10-14-5-1	17 $\frac{1}{2}$ " x 11 $\frac{1}{4}$ "
SR10-14-9.5-1	17 $\frac{1}{2}$ " x 11 $\frac{1}{4}$ "
SR12-14-9.5-1	17 $\frac{1}{2}$ " x 13 $\frac{1}{4}$ "
SR14-10-5-1	13 $\frac{1}{2}$ " x 15 $\frac{1}{4}$ "
SRU14-10-5-1	13 $\frac{1}{2}$ " x 15 $\frac{1}{4}$ "
SR14-10-9.5-1	13 $\frac{1}{2}$ " x 15 $\frac{1}{4}$ "
SR14-12-9.5-1	15 $\frac{1}{2}$ " x 15 $\frac{1}{4}$ "
SR14-16-9.5-1	19 $\frac{1}{2}$ " x 15 $\frac{1}{4}$ "
SR16-14-9.5-1	17 $\frac{1}{2}$ " x 17 $\frac{1}{4}$ "
SR16-19-8-1	23 $\frac{3}{4}$ " x 17"
SR16-19-13.5-1	23 $\frac{3}{4}$ " x 17"
SR18-24-13.5-1	27 $\frac{1}{2}$ " x 19"
SR19-16-8-1	19 $\frac{1}{2}$ " x 21"
SR19-16-13.5-1	19 $\frac{1}{2}$ " x 21"
SR20-12-6.5-1	15 $\frac{1}{2}$ " x 21 $\frac{1}{4}$ "
SR22-22-13.5-1	25 $\frac{1}{2}$ " x 23 $\frac{1}{4}$ "
SR24-18-13.5-1	21 $\frac{1}{2}$ " x 25"
SR24-24-13.5-1	27 $\frac{1}{2}$ " x 25"

model # cutout dimensions
(width x length)

Two-Compartment Sinks

SR10-14-9.5-2	17 $\frac{1}{2}$ " x 23 $\frac{1}{4}$ "
SR12-14-9.5-2	17 $\frac{1}{2}$ " x 27 $\frac{1}{4}$ "
SR14-16-9.5-2	19 $\frac{1}{2}$ " x 31 $\frac{1}{4}$ "
SR16-19-8-2	23 $\frac{3}{4}$ " x 34 $\frac{1}{4}$ "
SR16-19-13.5-2	23 $\frac{3}{4}$ " x 34 $\frac{1}{4}$ "
SR18-24-13.5-2	27 $\frac{1}{2}$ " x 38 $\frac{1}{4}$ "
SR22-22-13.5-2	25 $\frac{1}{2}$ " x 47 $\frac{1}{4}$ "
SR24-24-13.5-2	27 $\frac{1}{2}$ " x 50 $\frac{1}{4}$ "

Three-Compartment Sinks

SR10-14-9.5-3	17 $\frac{1}{2}$ " x 35 $\frac{1}{4}$ "
SR12-14-9.5-3	17 $\frac{1}{2}$ " x 41 $\frac{1}{4}$ "
SR14-16-9.5-3	19 $\frac{1}{2}$ " x 47 $\frac{1}{4}$ "
SR16-19-8-3	23 $\frac{3}{4}$ " x 52 $\frac{1}{4}$ "
SR16-19-13.5-3	23 $\frac{3}{4}$ " x 52 $\frac{1}{4}$ "
SR18-24-13.5-3	27 $\frac{1}{2}$ " x 58 $\frac{1}{4}$ "


(continued on page 2)

Top-Mount Countertop Drop-In Self-Rim Design Sinks


INSTALLATION INSTRUCTIONS

Step 1 - Cut the hole for the sink.


Refer to the "Cutout Dimensions" chart on front page.

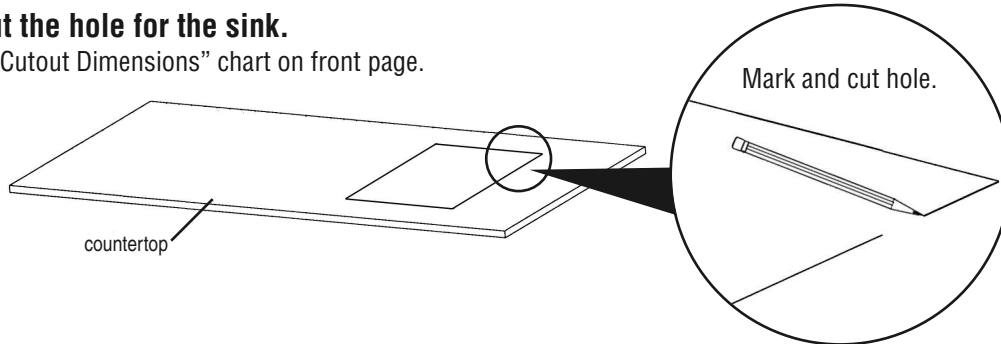

Step 2 - Caulk under the outside edge of the top flange.

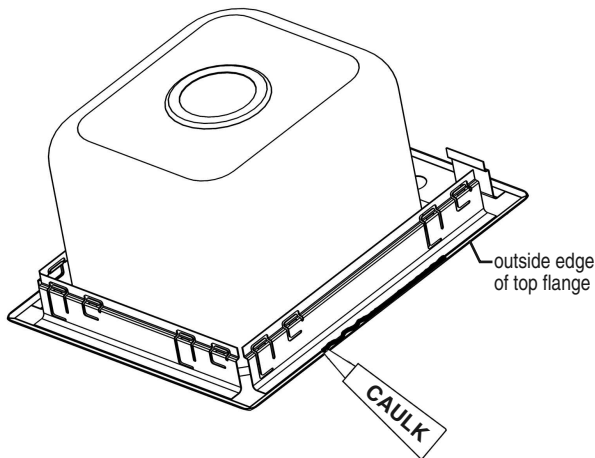

Step 3 - Carefully place the sink inside the cutout.

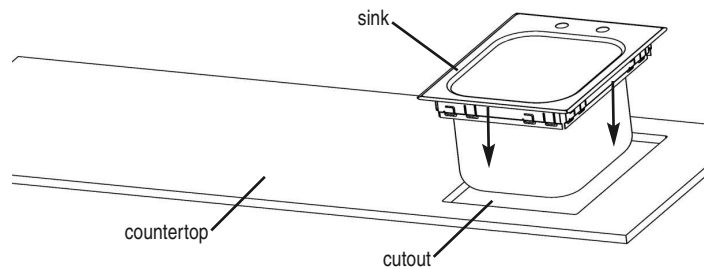


Step 4 - Secure sink.

Using a flat screwdriver, twist applicable tabs out and up to secure the sink.

These tabs are for $\frac{3}{4}$ "- to 1"-thick countertops.

These tabs are for sheet metal.

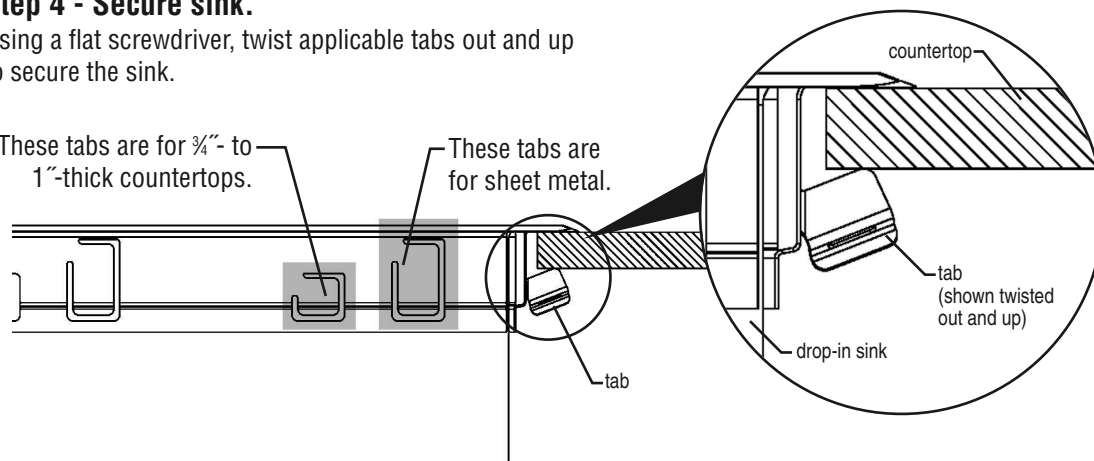


(End)

Bottom-Mount Countertop Self-Rim Design Sinks

INSTALLATION INSTRUCTIONS

FOR MOUNTING SINK ONTO TOP SIDE OF COUNTERTOP
(ALSO KNOWN AS “TOP MOUNT”), SEE FRONT PAGE.

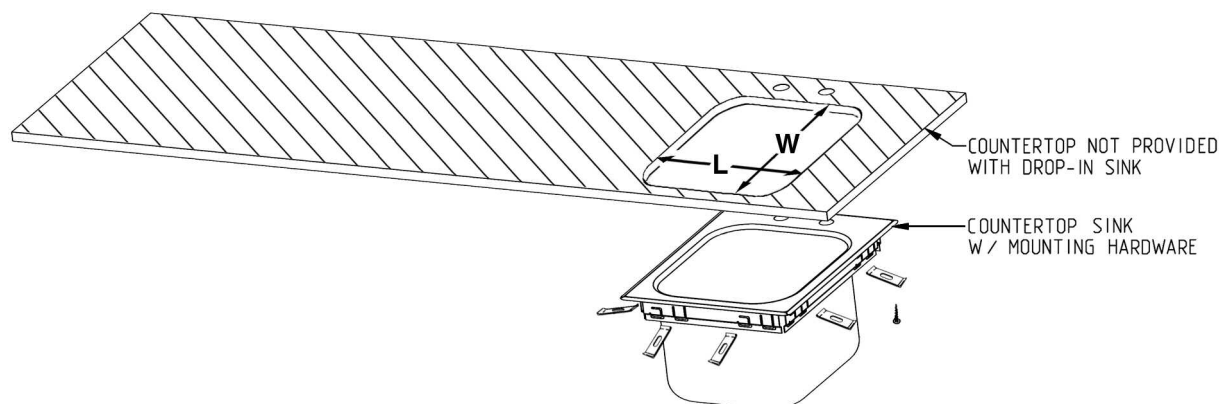

Bottom-Mount Cutout Dimensions

sink model #	cutout dimensions (width x length)	corner radius
One-Compartment Sinks		
SR10-14-5-1	14 ¹³ / ₁₆ " x 10 ¹³ / ₁₆ "	3 ⁵ / ₈ "
SR10-14-9.5-1	14 ¹³ / ₁₆ " x 10 ¹³ / ₁₆ "	3 ⁵ / ₈ "
SR12-14-9.5-1	14 ³ / ₈ " x 12 ³ / ₈ "	3 ¹ / ₄ "
SR14-10-5-1	10 ¹³ / ₁₆ " x 14 ¹³ / ₁₆ "	3 ⁵ / ₈ "
SRU14-10-5-1	n/a	n/a
SR14-10-9.5-1	10 ¹³ / ₁₆ " x 14 ¹³ / ₁₆ "	3 ⁵ / ₈ "
SR14-12-9.5-1	12 ³ / ₈ " x 14 ³ / ₈ "	3 ¹ / ₄ "
SR14-16-9.5-1	16 ³ / ₈ " x 14 ³ / ₈ "	3 ⁵ / ₈ "
SR16-14-9.5-1	14 ³ / ₈ " x 16 ³ / ₈ "	3 ⁵ / ₈ "
SR16-19-8-1	20 ³ / ₈ " x 16 ³ / ₈ "	4"
SR16-19-13.5-1	20 ³ / ₈ " x 16 ³ / ₈ "	4"
SR18-24-13.5-1	24 ³ / ₈ " x 18 ³ / ₈ "	4"
SR19-16-8-1	16 ³ / ₈ " x 20 ³ / ₈ "	4"
SR19-16-13.5-1	16 ³ / ₈ " x 20 ³ / ₈ "	4"
SR20-12-6.5-1	12 ³ / ₈ " x 20 ³ / ₈ "	1 ¹ / ₈ "
SR22-22-13.5-1	see template	
SR24-18-13.5-1	18 ³ / ₈ " x 24 ³ / ₈ "	4"
SR24-24-13.5-1	24 ¹ / ₁₆ " x 24 ¹ / ₁₆ "	4 ¹ / ₄ "

sink model #	cutout dimensions (width x length)	corner radius
Two-Compartment Sinks		
SR10-14-9.5-2	14 ¹³ / ₁₆ " x 23"	3 ⁵ / ₈ "
SR12-14-9.5-2	14 ³ / ₈ " x 26 ³ / ₈ "	3 ¹ / ₄ "
SR14-16-9.5-2	16 ³ / ₈ " x 30 ³ / ₈ "	3 ⁵ / ₈ "
SR16-19-8-2	20 ³ / ₈ " x 34 ¹ / ₄ "	4"
SR16-19-13.5-2	20 ³ / ₈ " x 34 ¹ / ₄ "	4"
SR18-24-13.5-2	24 ³ / ₈ " x 38 ¹ / ₂ "	4"
SR22-22-13.5-2	see template	
SR24-24-13.5-2	24 ¹³ / ₁₆ " x 50 ¹ / ₄ "	4 ¹ / ₄ "
Three-Compartment Sinks		
SR10-14-9.5-3	14 ¹³ / ₁₆ " x 35"	3 ⁵ / ₈ "
SR12-14-9.5-3	14 ³ / ₈ " x 40 ³ / ₈ "	3 ¹ / ₄ "
SR14-16-9.5-3	16 ³ / ₈ " x 46 ³ / ₈ "	3 ⁵ / ₈ "
SR16-19-8-3	20 ³ / ₈ " x 52 ¹ / ₄ "	4"
SR16-19-13.5-3	20 ³ / ₈ " x 52 ¹ / ₄ "	4"
SR18-24-13.5-3	24 ³ / ₈ " x 58 ¹ / ₄ "	4"


(continued on back page)

Bottom-Mount Countertop Self-Rim Design Sinks


INSTALLATION INSTRUCTIONS

Step 1 - Cut the hole for the sink.

- Refer to the cutout template included with sink.
- Referring to "BOTTOM MOUNTING" verbiage on the template, transfer the dimensions to the countertop (do not forget the faucet holes).
- Cut the hole.
- Finish the edge of the cutout, using a router and desired router bit.

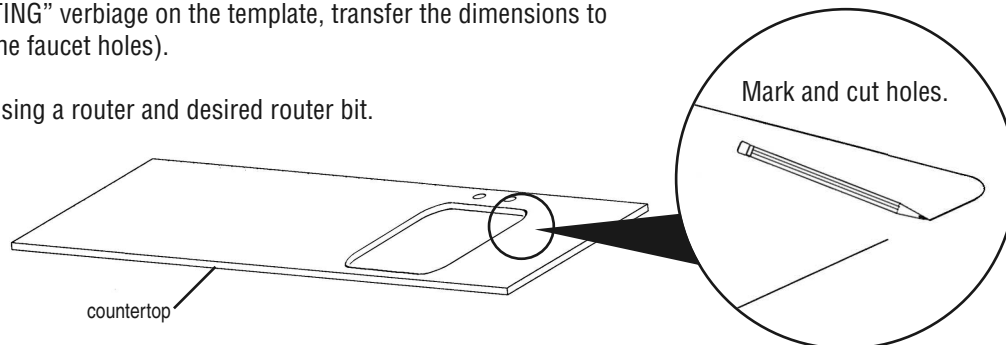


Step 2 - Caulk the top of the flange.

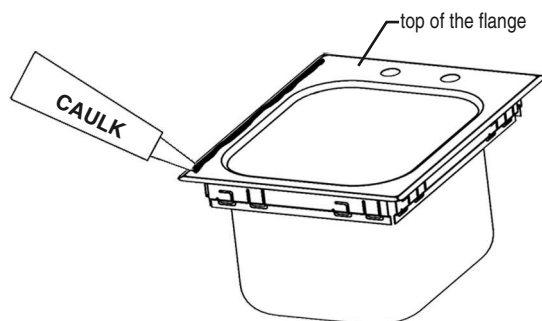


Step 3 - Place the sink under the cutout.

A second person, or a temporary prop, might be needed to hold the sink in place.

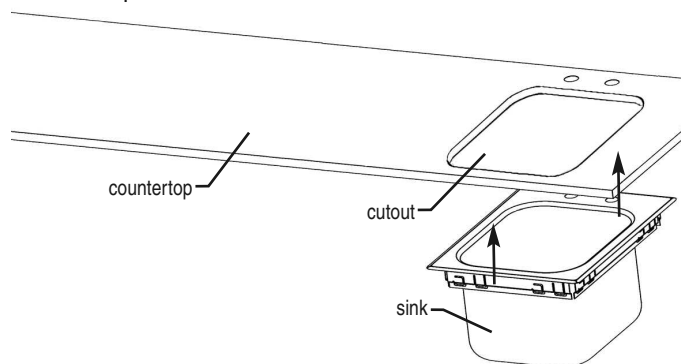

Step 4 - Secure sink.

Use kit #362188 (sold separately) as shown.
Screws, washers, etc. not included.

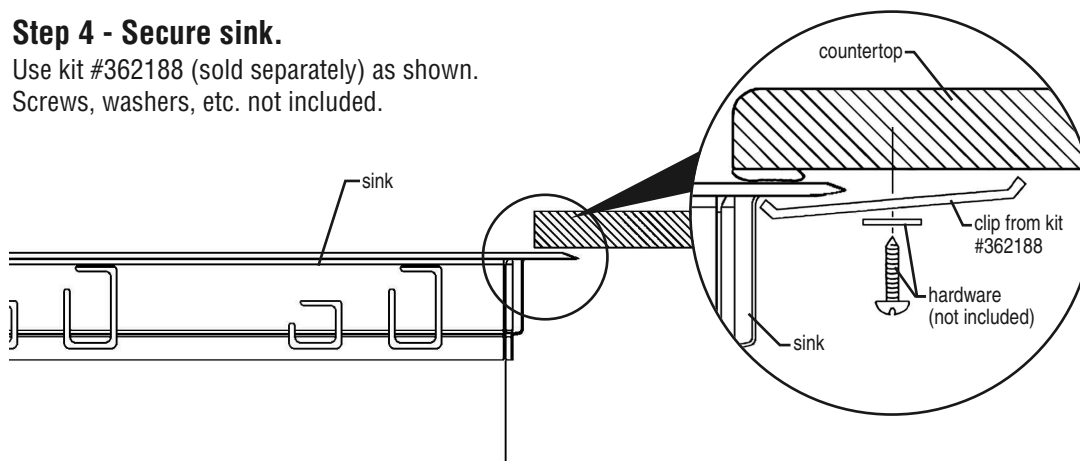

(End)