

INSTALLATION INSTRUCTIONS

CETM-0086



Notes

Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

All mirrors are asymmetrical design for better view range.


If missing parts or any damage found, please take a picture and contact us.

Reference the vehicle owner's manual to adjust the new mirrors.

INSTALLATION INSTRUCTIONS

Step 1:

1. Remove (1) 10mm bolt securing the door handle.
2. Remove (4) Philips screws securing the door trim panel.
3. Pull the door trim panel up to release from door panel.
5. Disconnect the door harness.
6. Remove the door trim panel.

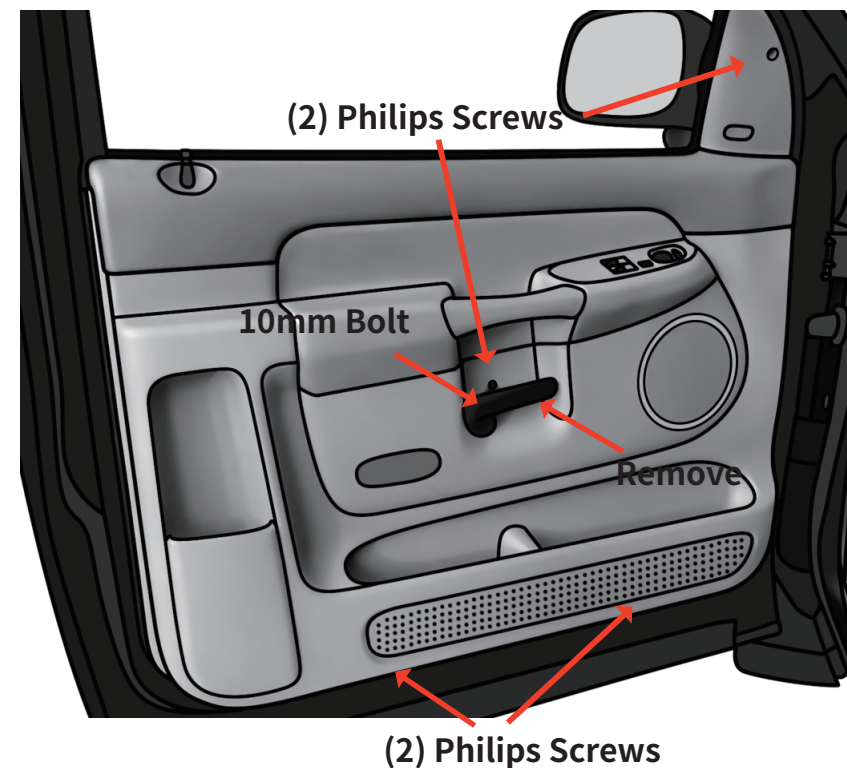

INSTALLATION INSTRUCTIONS

Step 2:

1. Disconnect mirror harness connector.
2. Remove the foam pad from door panel.
3. Remove (3) 10mm hex nuts securing the factory mirror.
4. Carefully remove factory mirror.

Step 3:

1. Attach the foam pad to the new mirror mounting base.
2. Take the new mirror, feed studs and harness through the existed holes on door panel.
3. Install (3) provided hex nuts to secure the new mirror. Torque to **80 lb in**
4. Connect mirror harness.

Step 4:


1. Connect the door harness.
2. Reinstall the door trim panel back to position.
3. Reinstall (4) Philips screws.
5. Reinstall the door handle and secure with (1) 10mm bolt.

Step 5:

1. Repeat above steps on the passenger side.
2. Carefully check all mirrors functions before first drive.

INSTALLATION INSTRUCTIONS

Reference Wire Diagram:

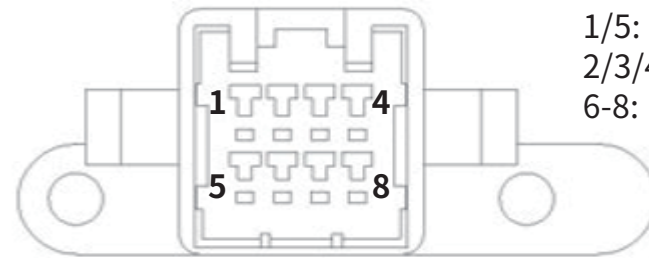

1/5: Mirror Heater
2/3/4: Mirror Motor
6-8: Not Used