



PB (PROUD) PRE-CONSTRUCTION BOARD INSTALLATION GUIDE


PB Pre-construction Board Installation guide

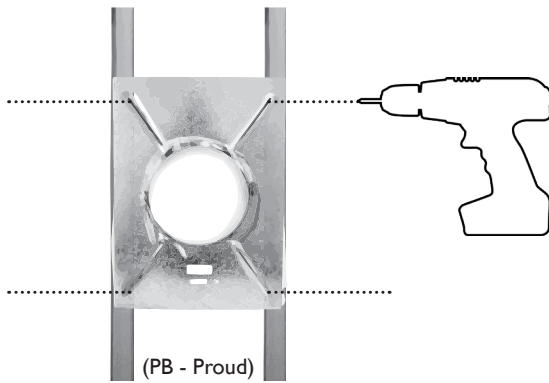


- 1 After determining the installation area for the speaker, secure the PB board to the wall studs while making sure that the inner rim of the PB board extrudes away from the wall and not into the wall as shown in step 2.

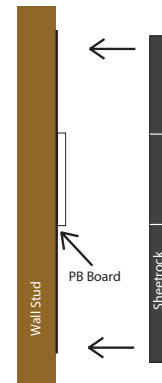


- 2 Once the PB board is secured, cut a hole large enough to accommodate the rim of the PB board in the sheetrock panel.

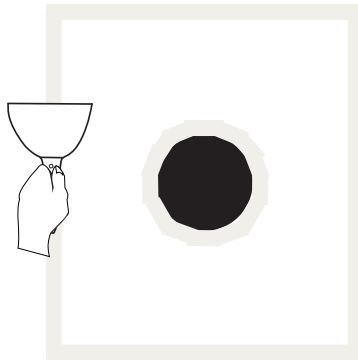

- 3 Secure sheetrock panel to the studs and apply mesh tape and joint compound to hide the installation seams. Make sure to apply joint compound up to the rim of the PB board.

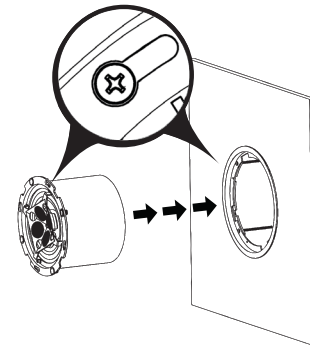

- 4 Depending on the model of speaker being installed, a bracket may need to be installed prior to speaker installation. If required perform this step now. (QXC bracket shown).

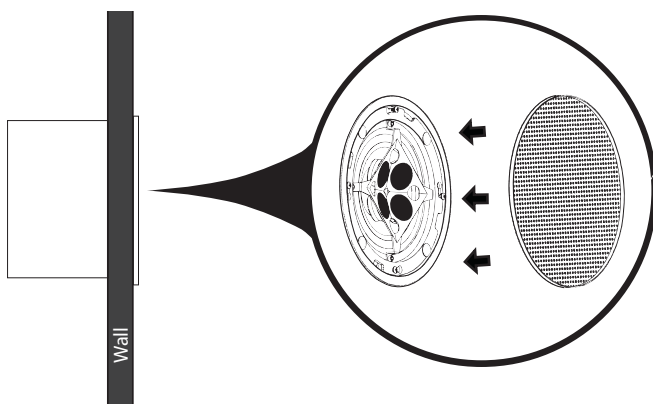

- 5 Attached the grille to complete the installation. If desired, grilles can be painted prior to installation to better match the installation environment.