

## For Add-On Units

**Step 5:**  
Following steps 1 and 2, assemble add-on shelving using only two posts.

**Step 6:**  
Two S-hooks included per shelf. Place hooks over shelf edge of free-standing unit and lower adjoining shelf edge of add-on unit onto hooks. Repeat with remaining shelves.



## For Units With Casters

**Step 7:**  
Following steps 1 and 2, assemble shelving and turn upside down.

**Step 8:**  
Slip rubber wheel bumpers over the bottom of each post, push swivel stem casters into bottom of each post. Seat securely.



Edgewood, New York 11717-8380

WS7-98



## Installation Instructions for WIRE SHELVING



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

ADVANCE TABCO Wire Shelving is recommended for practical storage applications. ADVANCE TABCO does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.




## Installation Requirements

### Contents:

- (2) or (4) Chrome plated/epoxy coated wire shelves as per items in box.
- (4) Plastic tapered split sleeves (per shelf)
- (4) upright posts with adjustable feet

### Step 1:

Place plastic tapered split sleeves onto each post at the selected height for bottom shelf. Make sure wider end of sleeve is facing towards bottom of shelf. (Posts are numbered for convenience in leveling shelf.) (Illustration 1)

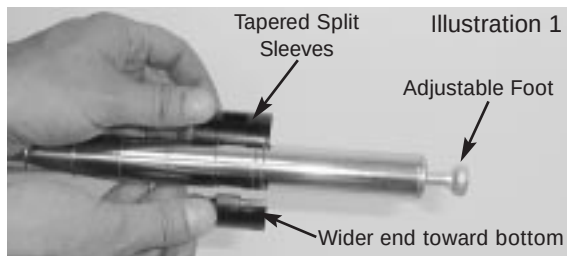

### Step 2:

Place bottom shelf on its side and slide (4) upright posts through holes in corner of shelf. Push shelf down onto sleeve until shelf fits tight. (If necessary, tap lightly with rubber mallet.)



### Step 3:

Slide remainder of shelving onto posts. Place plastic tapered split sleeves on numbered posts at desired position. Push shelving down onto plastic sleeves until tight. (If necessary, tap lightly with rubber mallet.) (Illustration 3)



### Step 4:

Stand wire shelf unit upright. Adjust feet to level unit. (Illustration 4)

