



ROVSUN

HA231-30










INSTRUCTION MANUAL

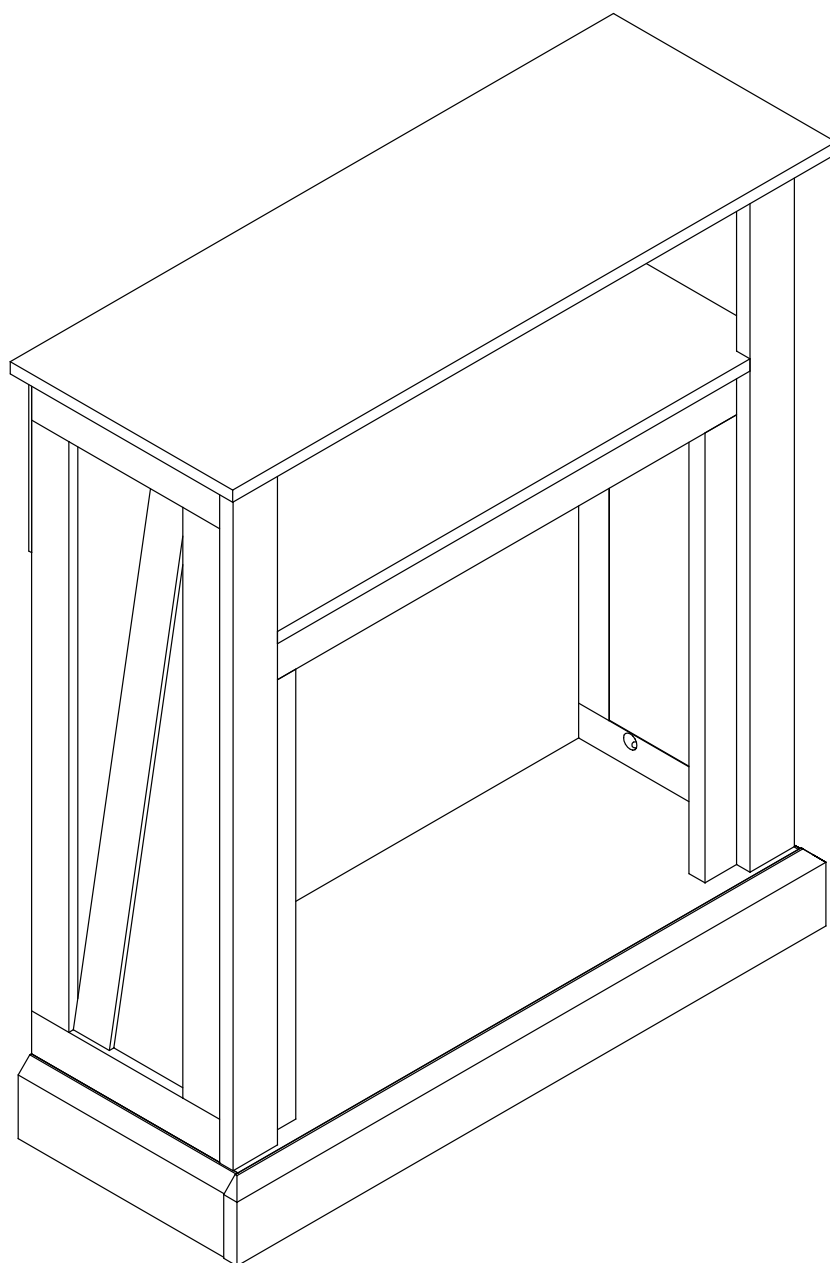


MADE IN CHINA

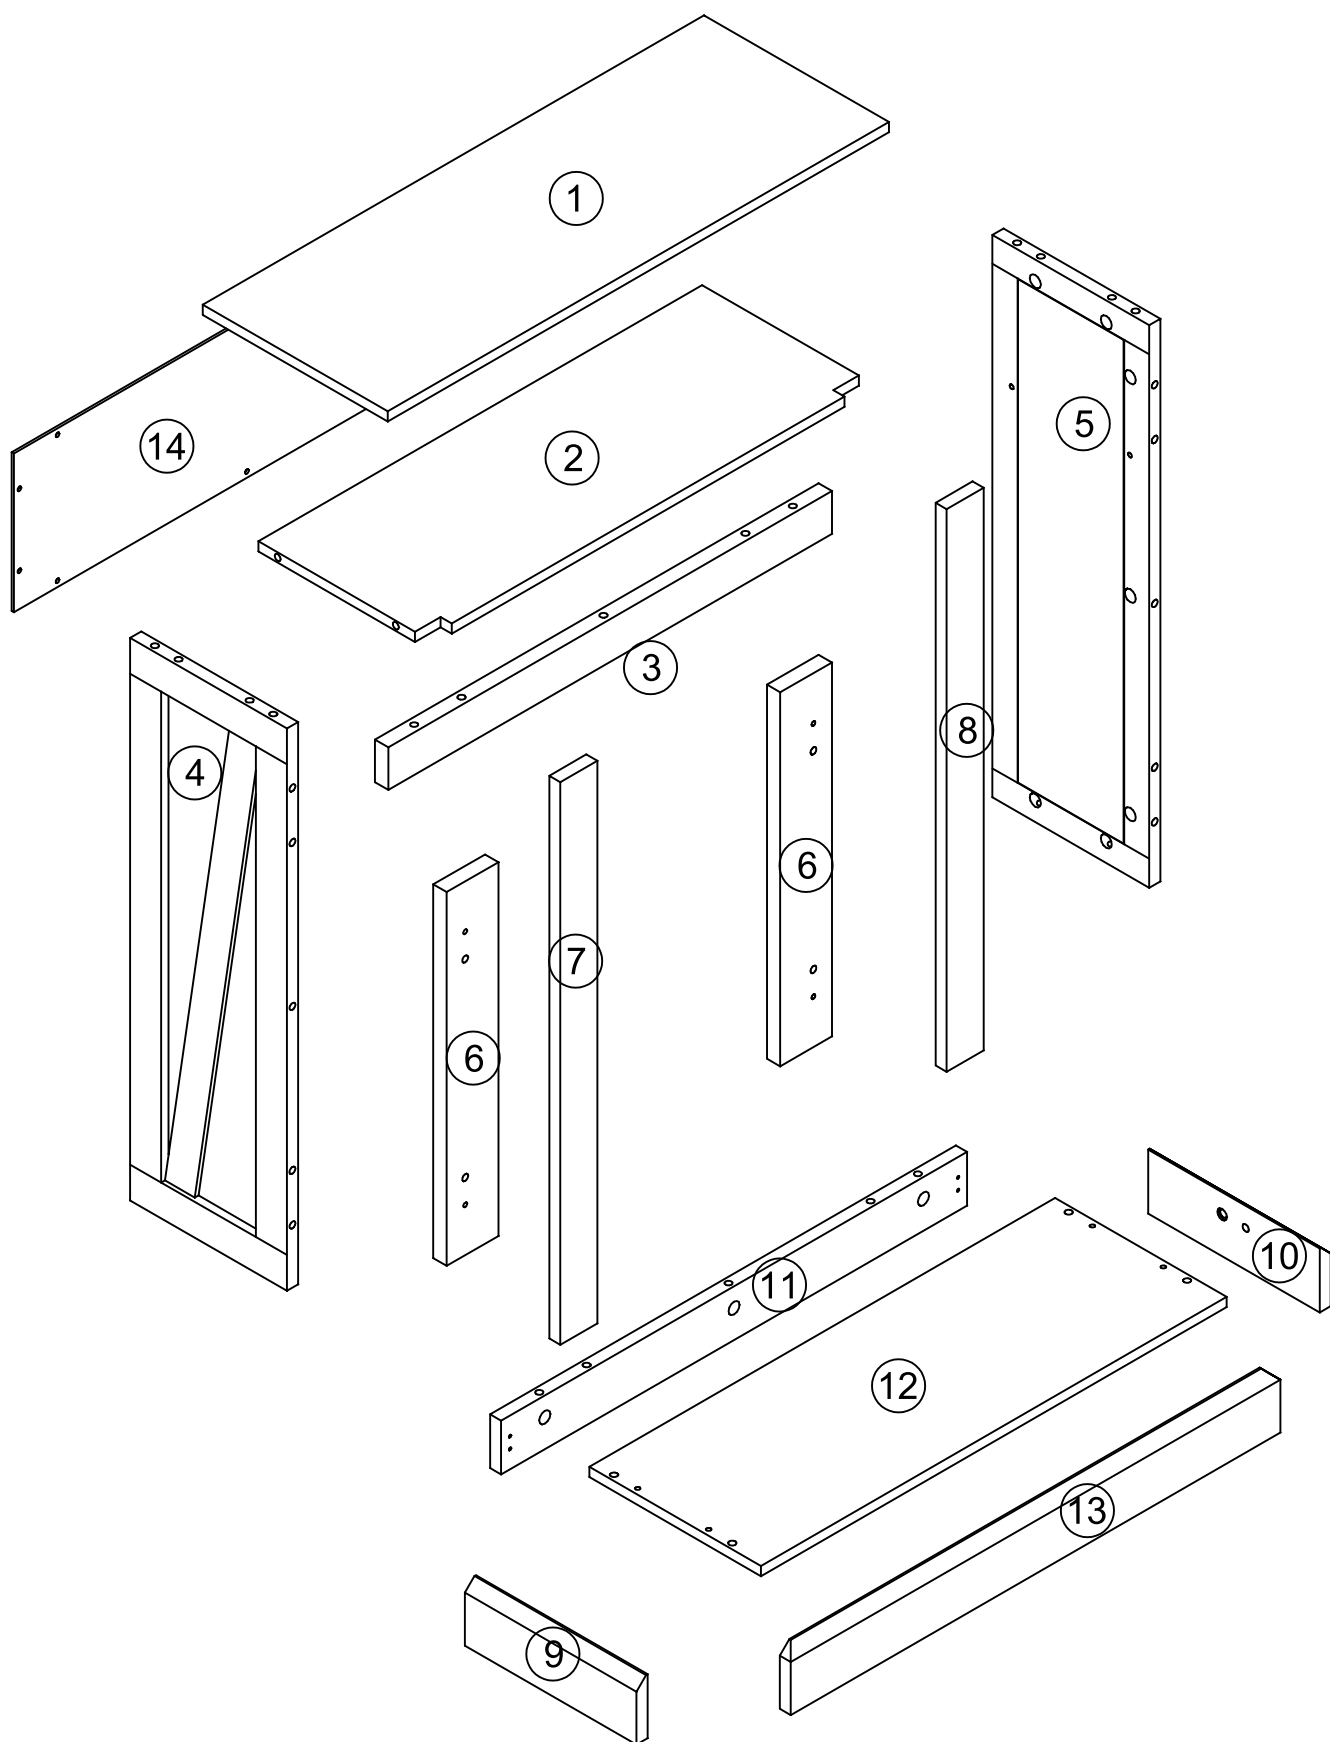

PACKAGE CONTENT (A)		
CODR	DESCRIPTION	QTY
1	Panel assembly	1
2	Fixed laminate	1
3	Middle cross bar	1
4	Left side panel	1
5	Right side panel	1
6	Middle vertical bar	2
7	Left side bar	1
8	Right side bar	1
9	Left standing water	1
10	Right standing water	1
11	Rear standing water	1
12	floor	1
13	Front standing water	1
14	Back plate	1

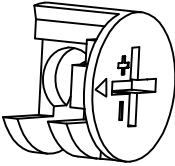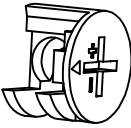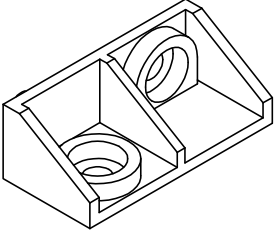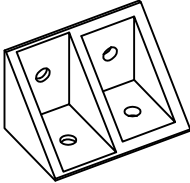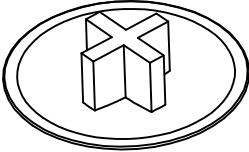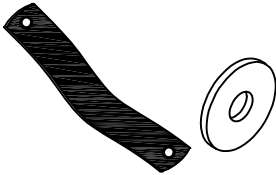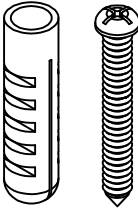
A  24X+1X	B Ø15  20X+1X	C Ø12  4X	D Ø8x30mm  16X+1X
E Ø8x20mm  4X	F  5X	G  10X	H  4X
I  2X	J  20X+1X	K  11X+1X	L  4X
M  6X	N  1X+2X	O  1X+1X	

Step 1

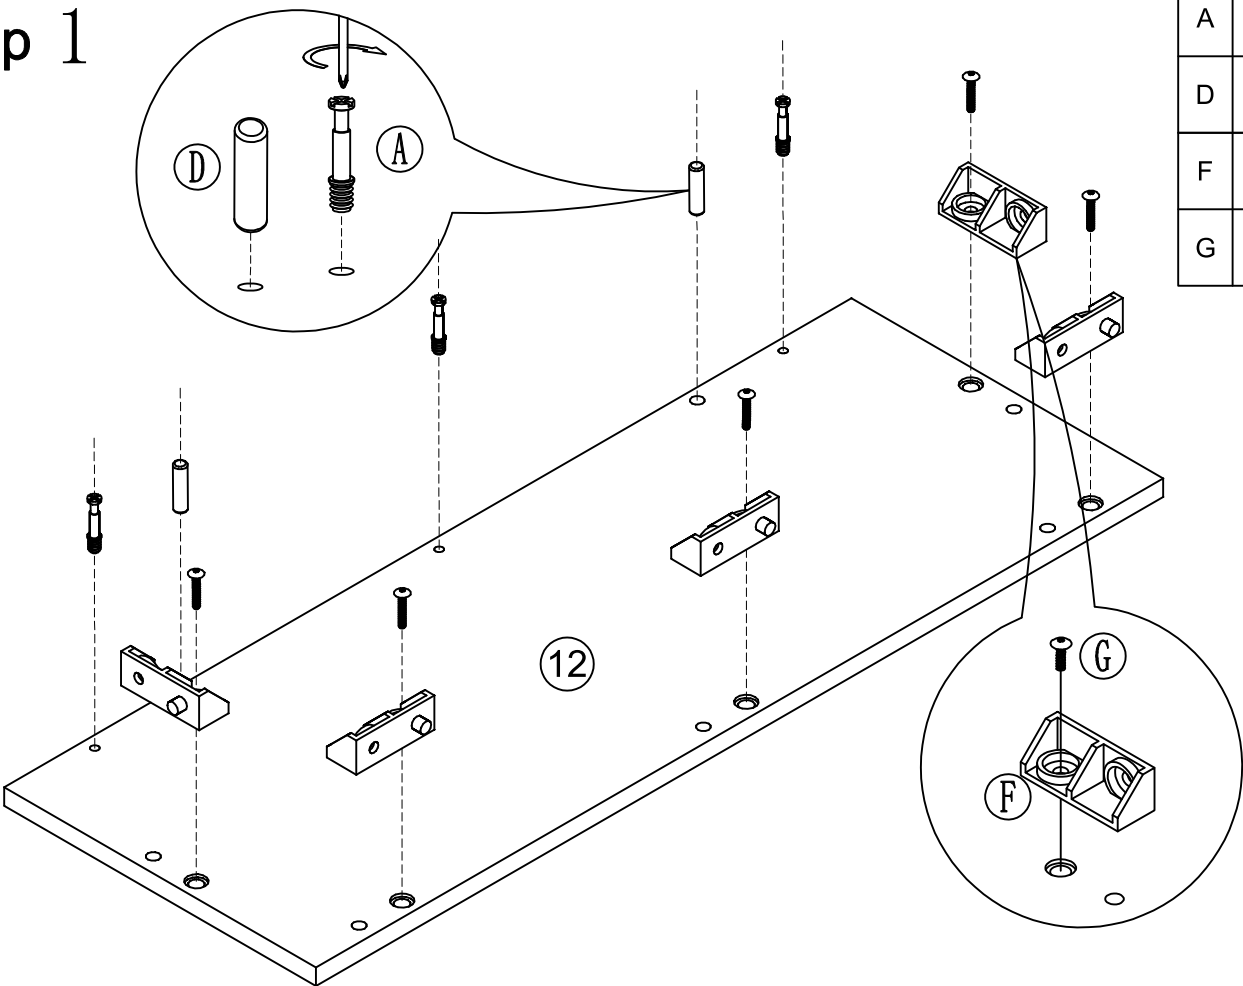

A		3
D		2
F		5
G		5


Step 2

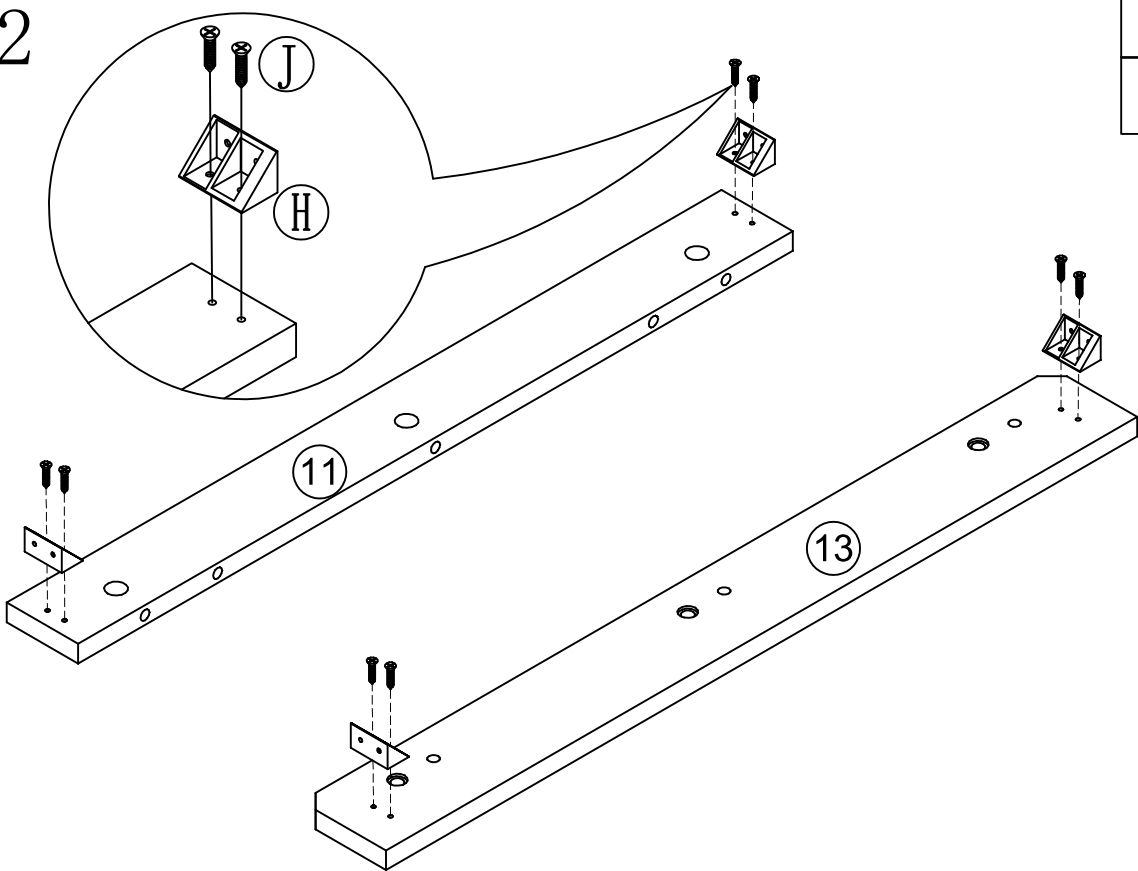

H		4
J		8


Step 3

B		3
G		5

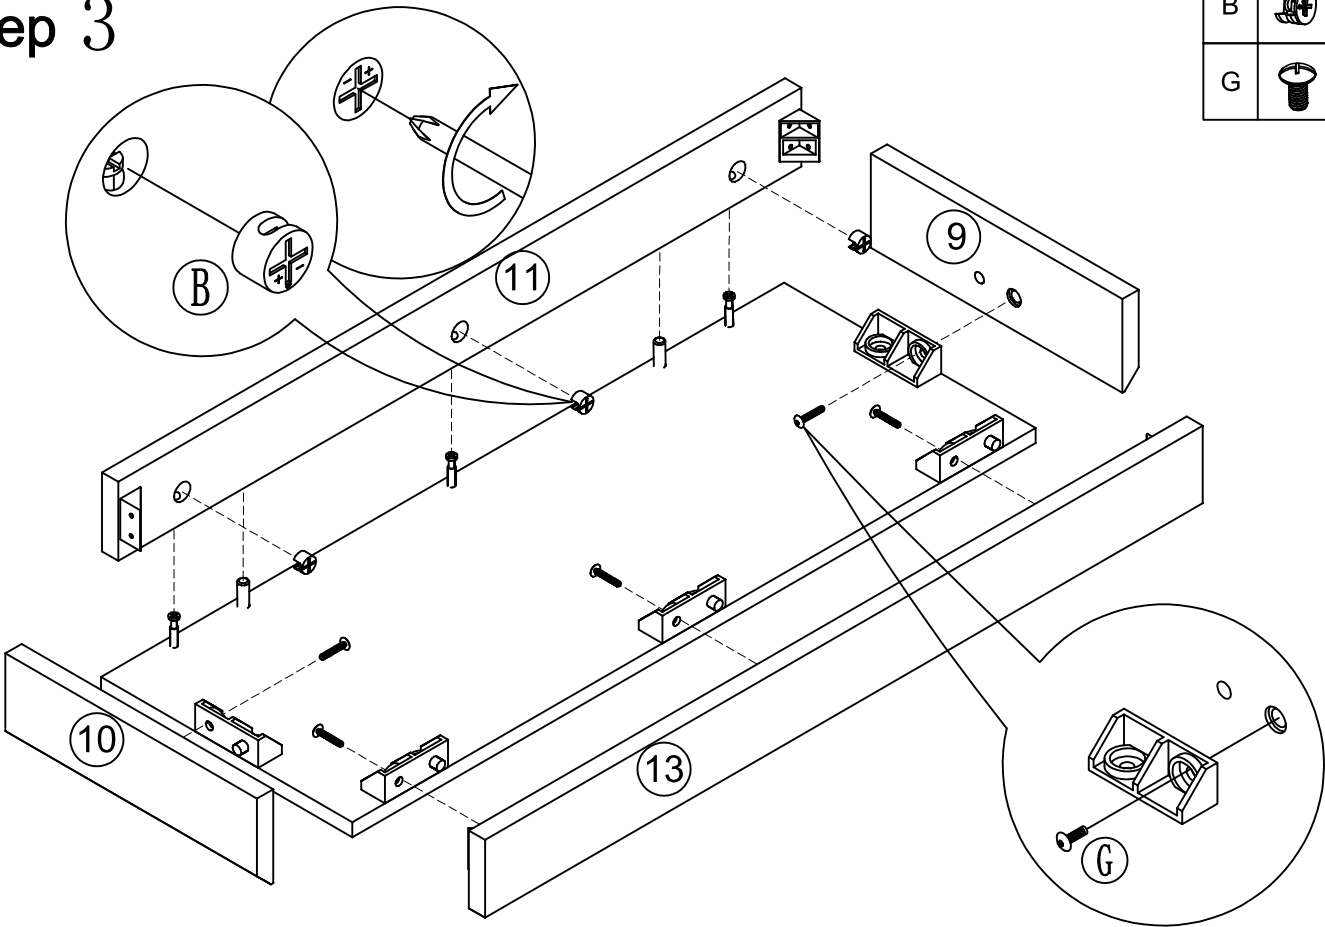


Step 4

J		8
---	---	---

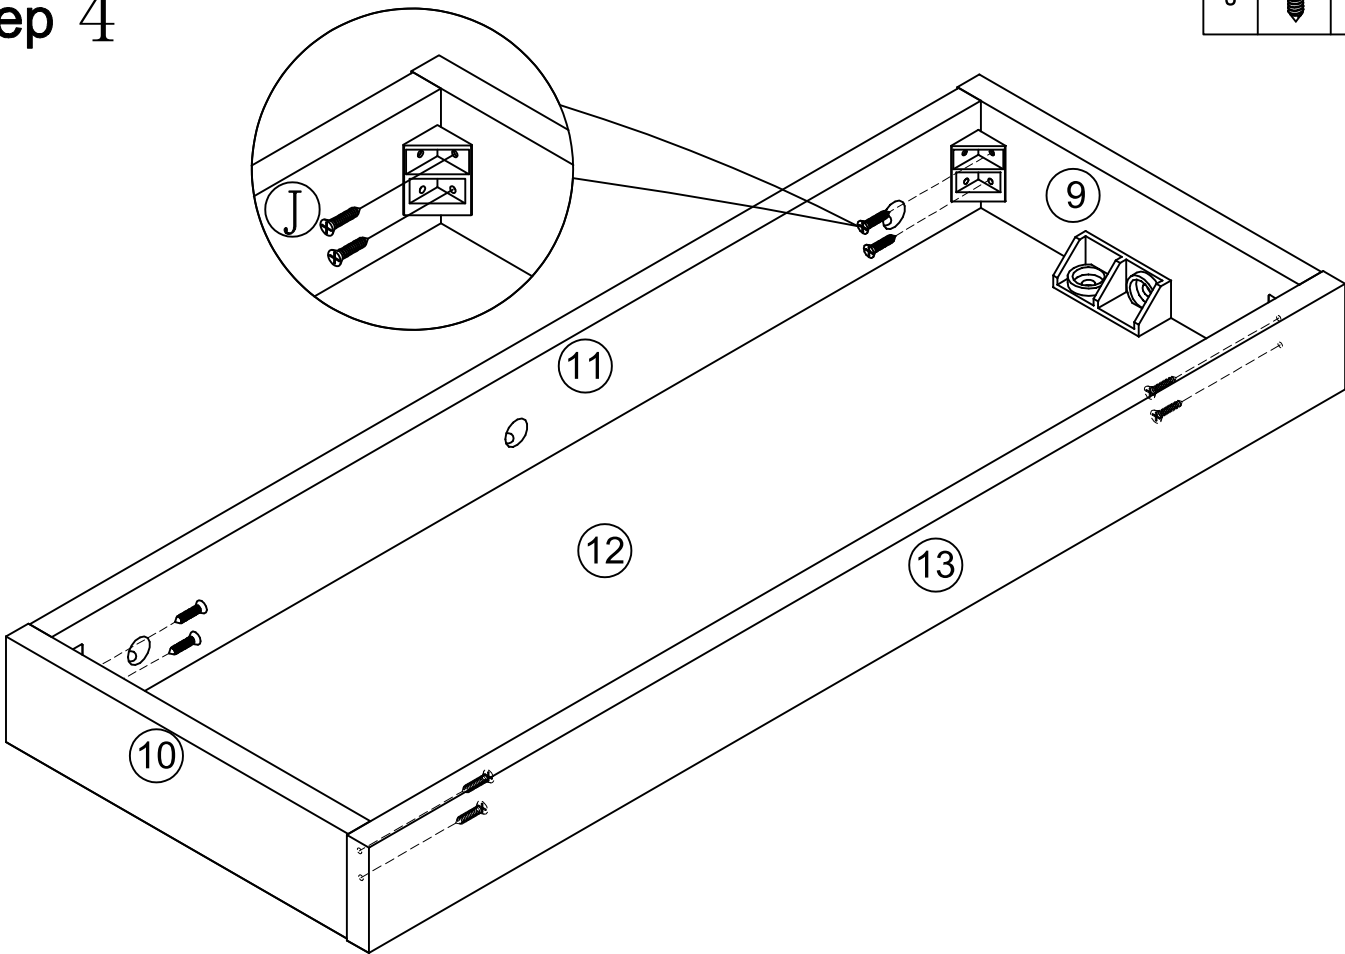


Step 5

A		3
B		3
D		2

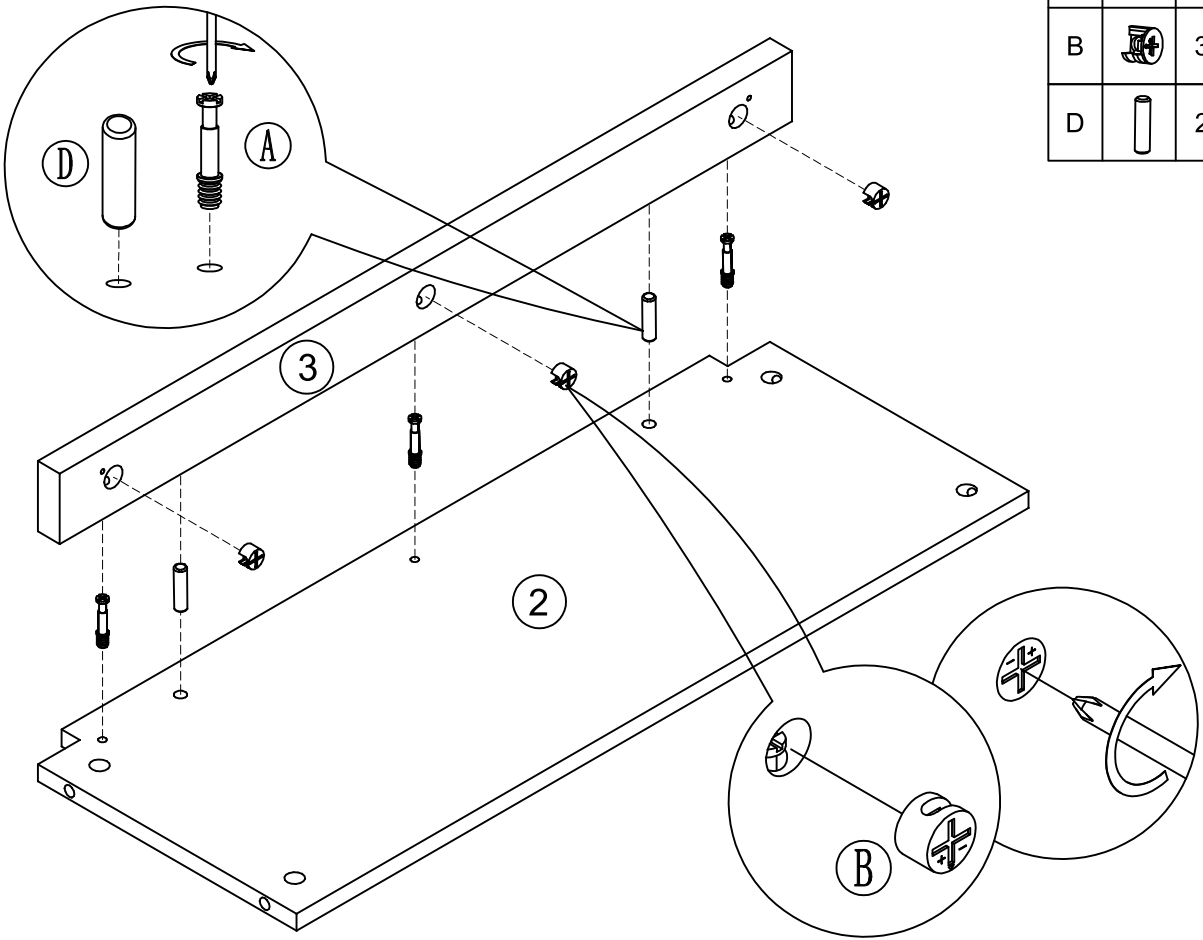


Step 6


A		6
D		4

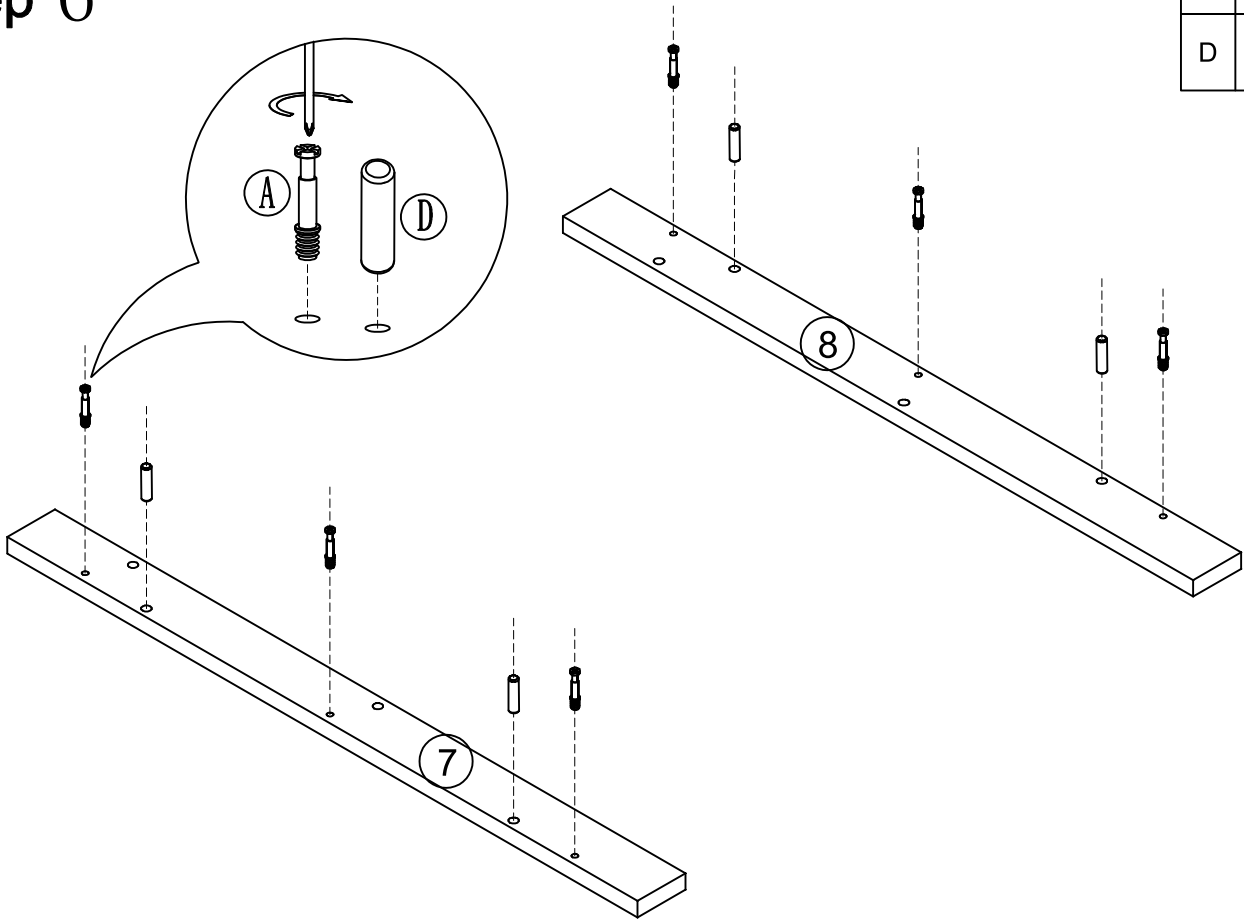

Step 7

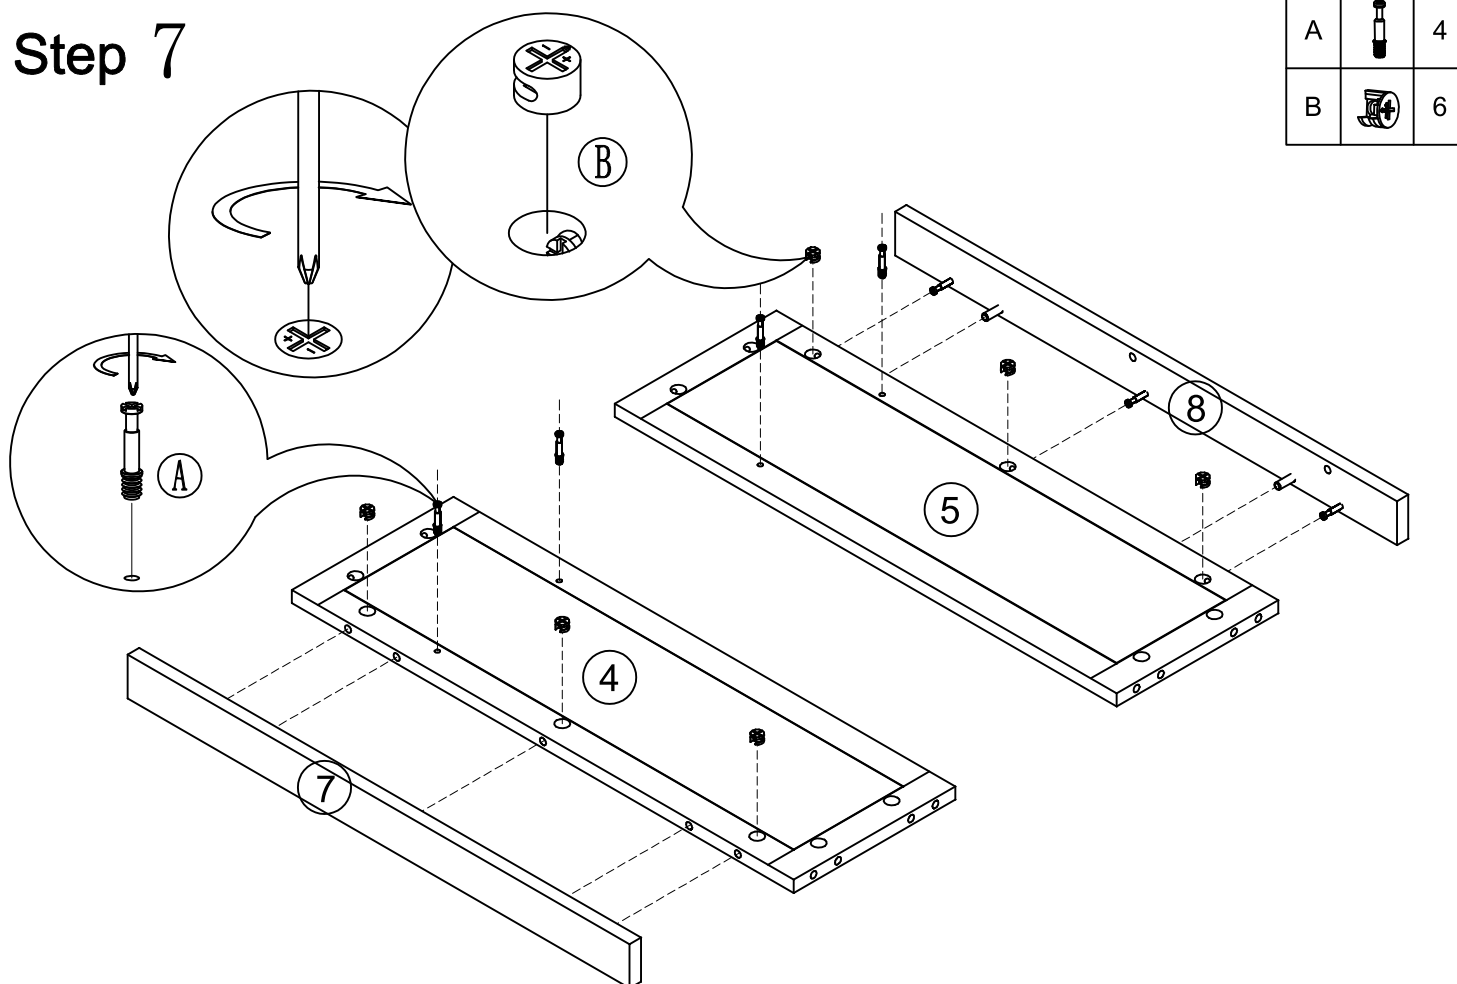

Step 8

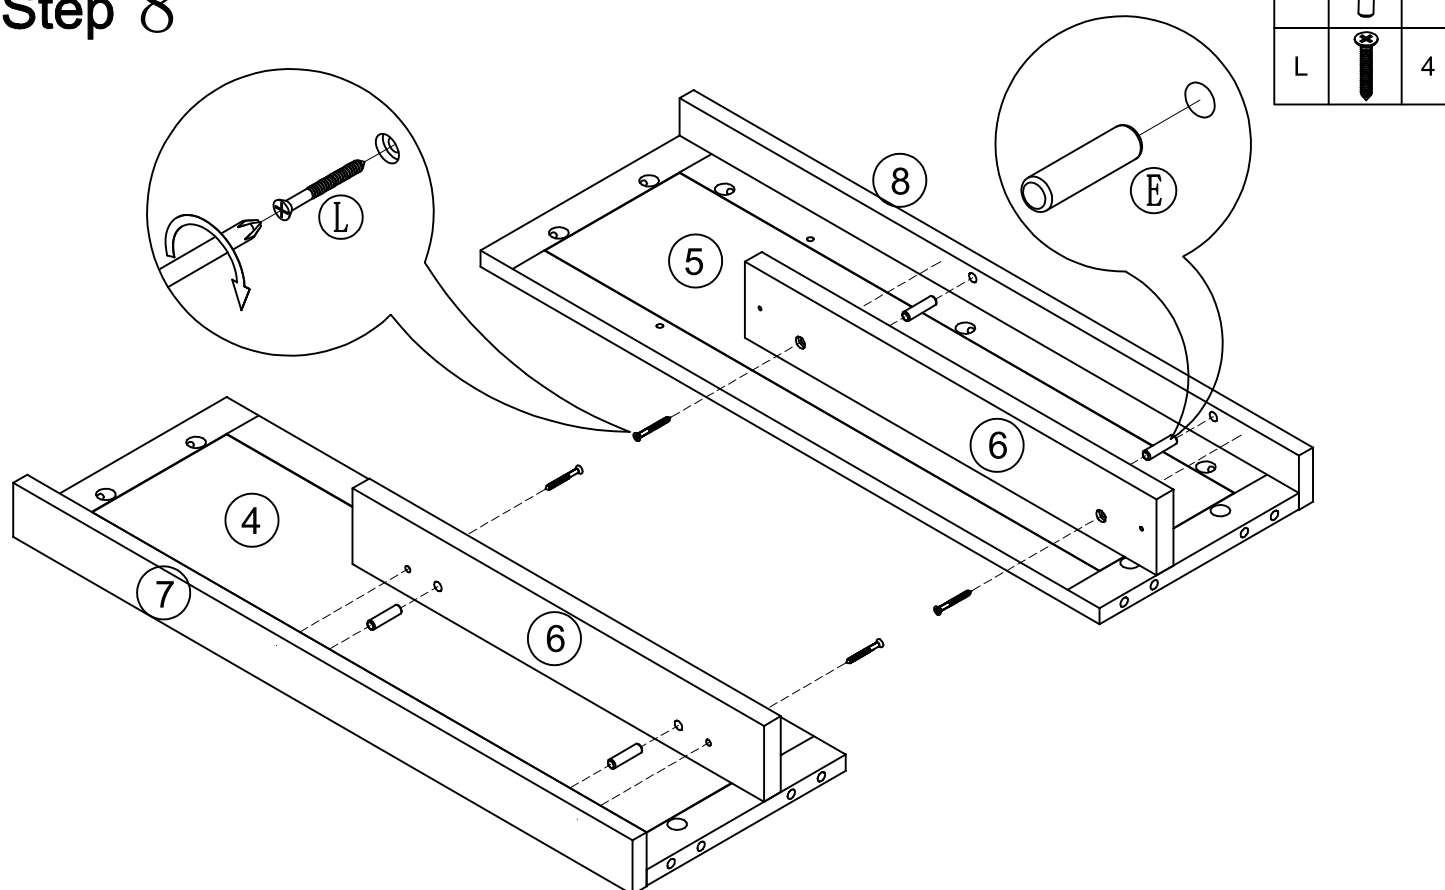


Step 9

C



4

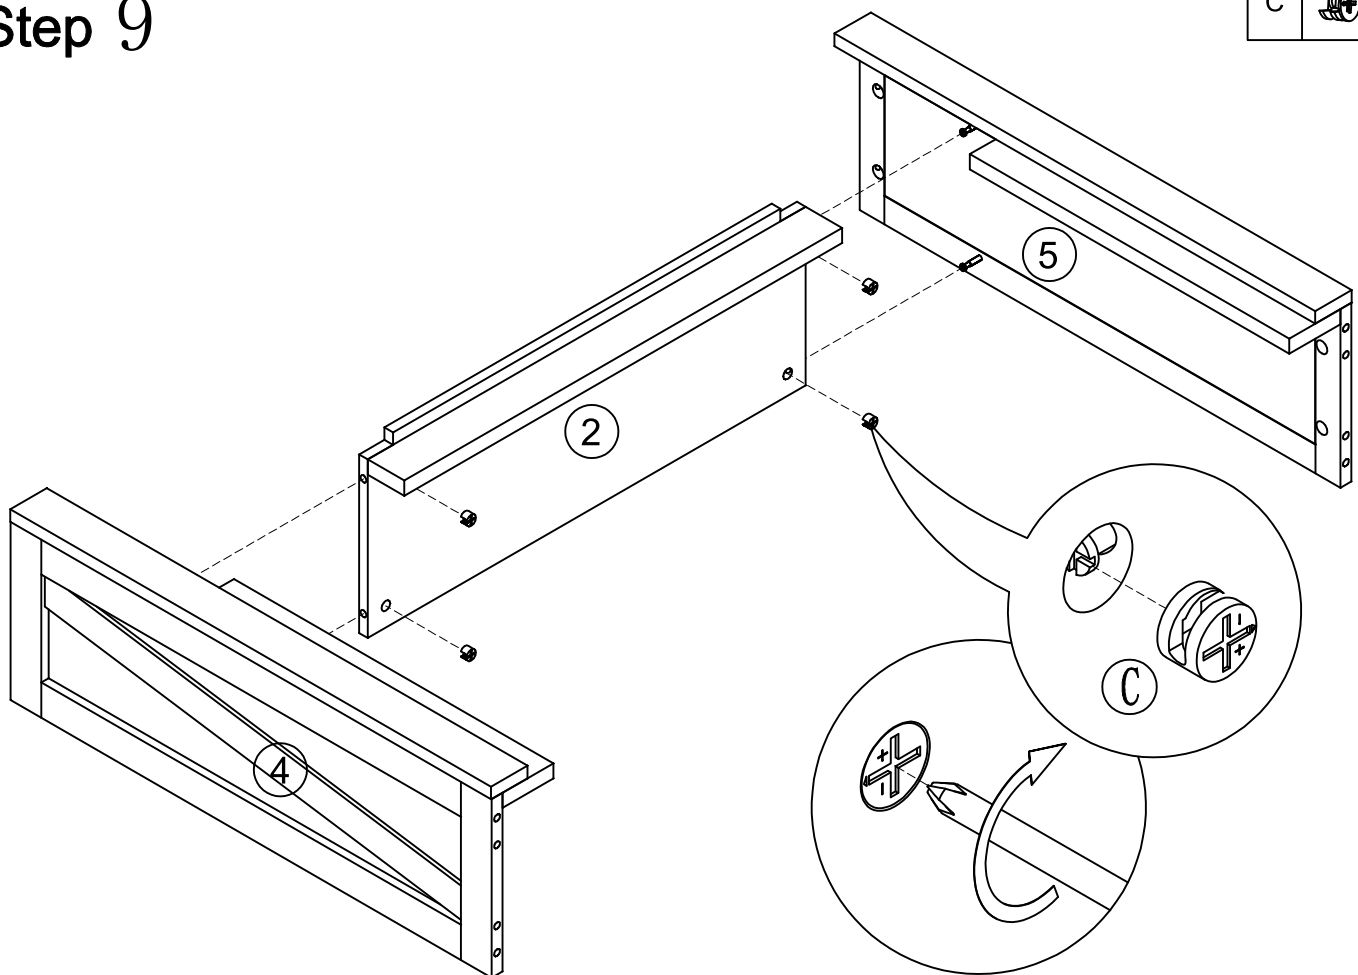

Step 10

A




8

D




8

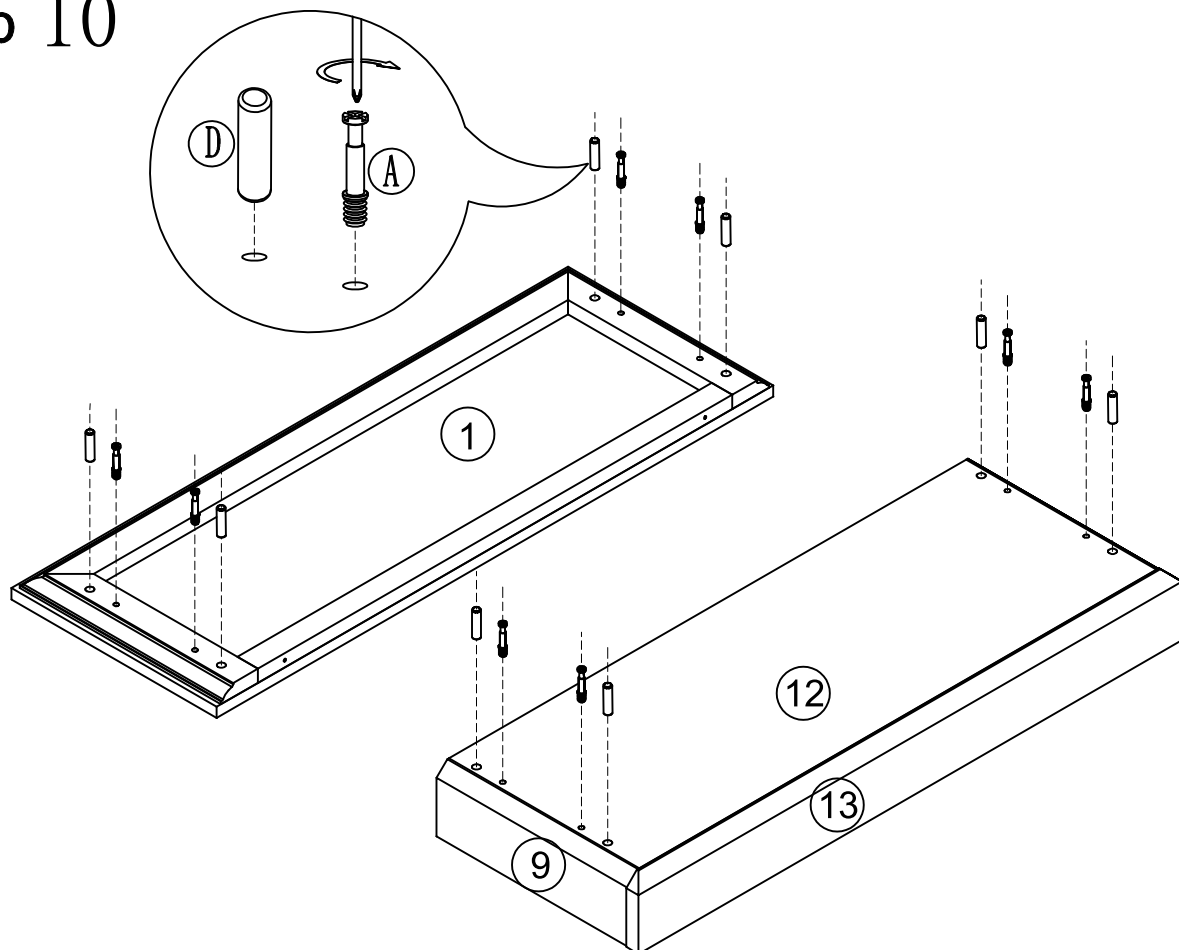



Step 11

B		8
---	---	---

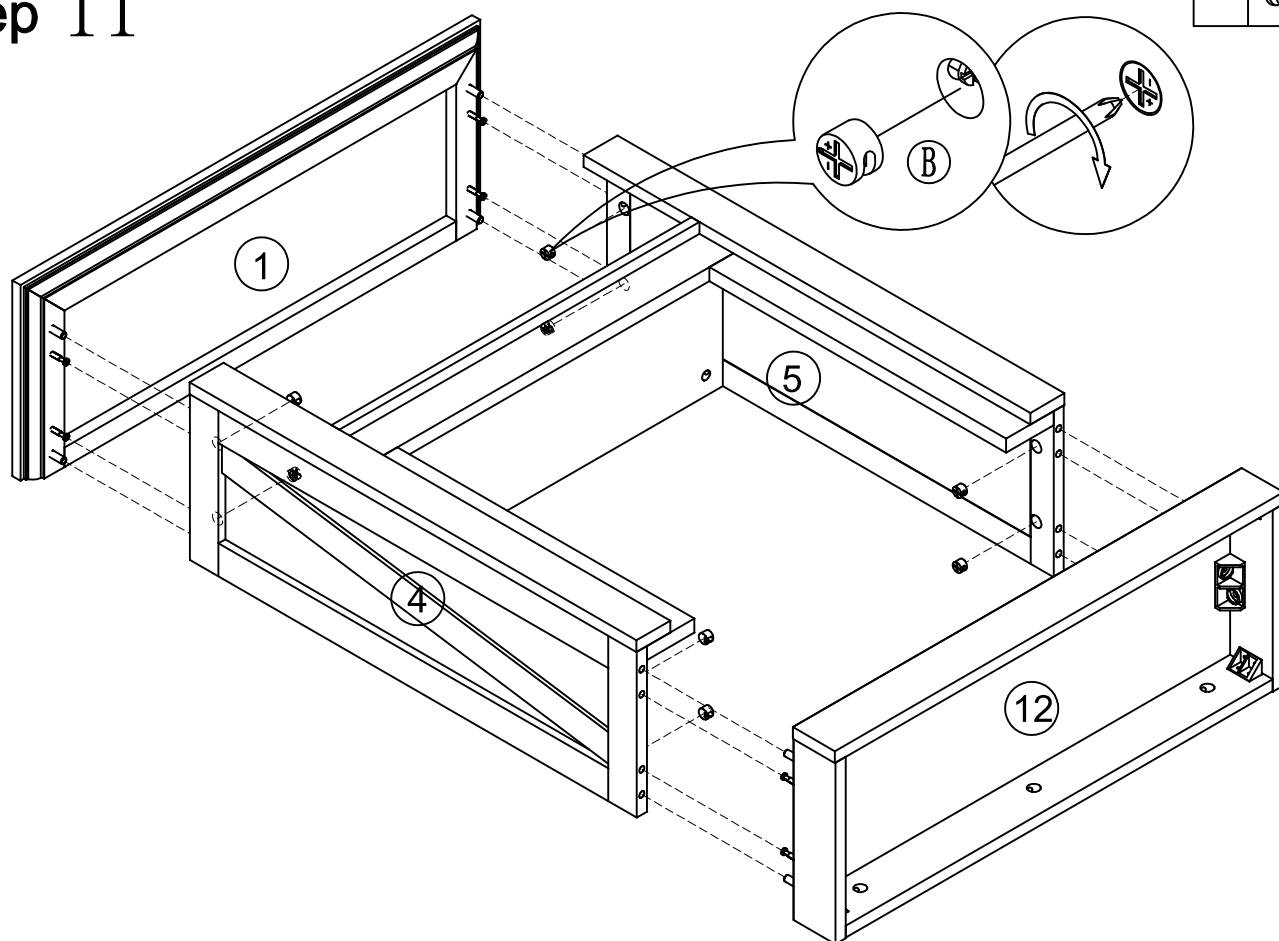

Step 12

I		2
J		4

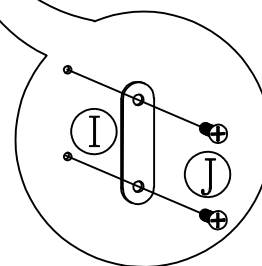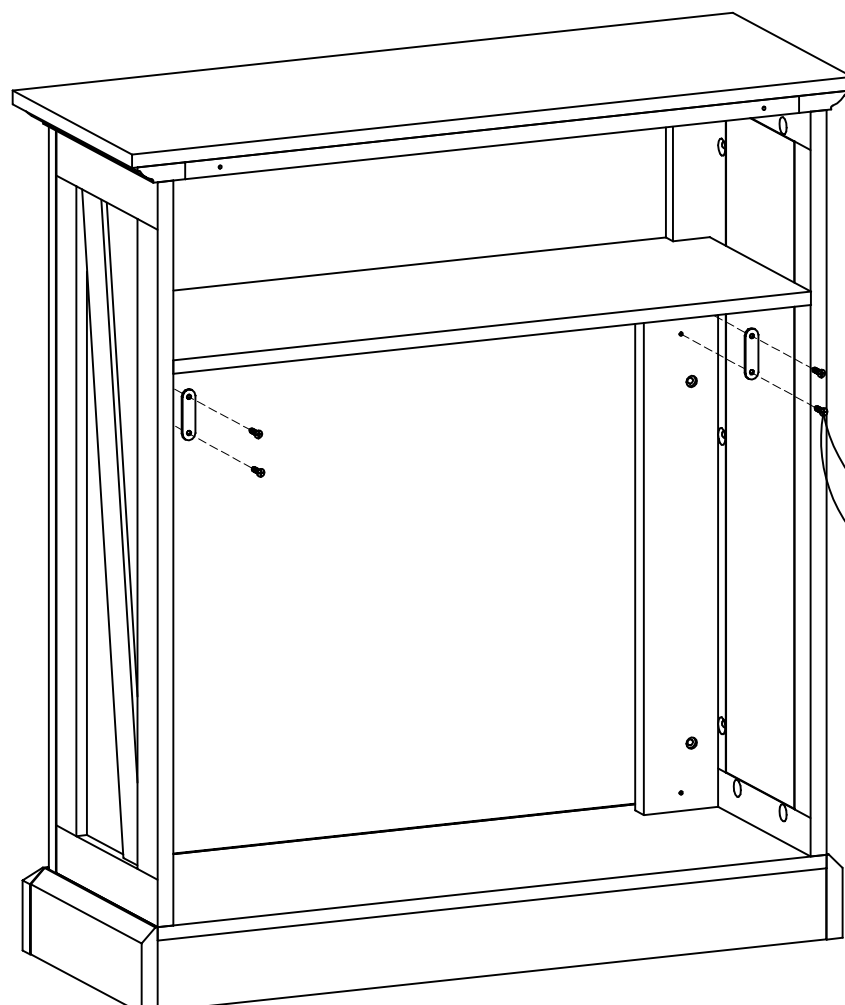


Step 13

M



6

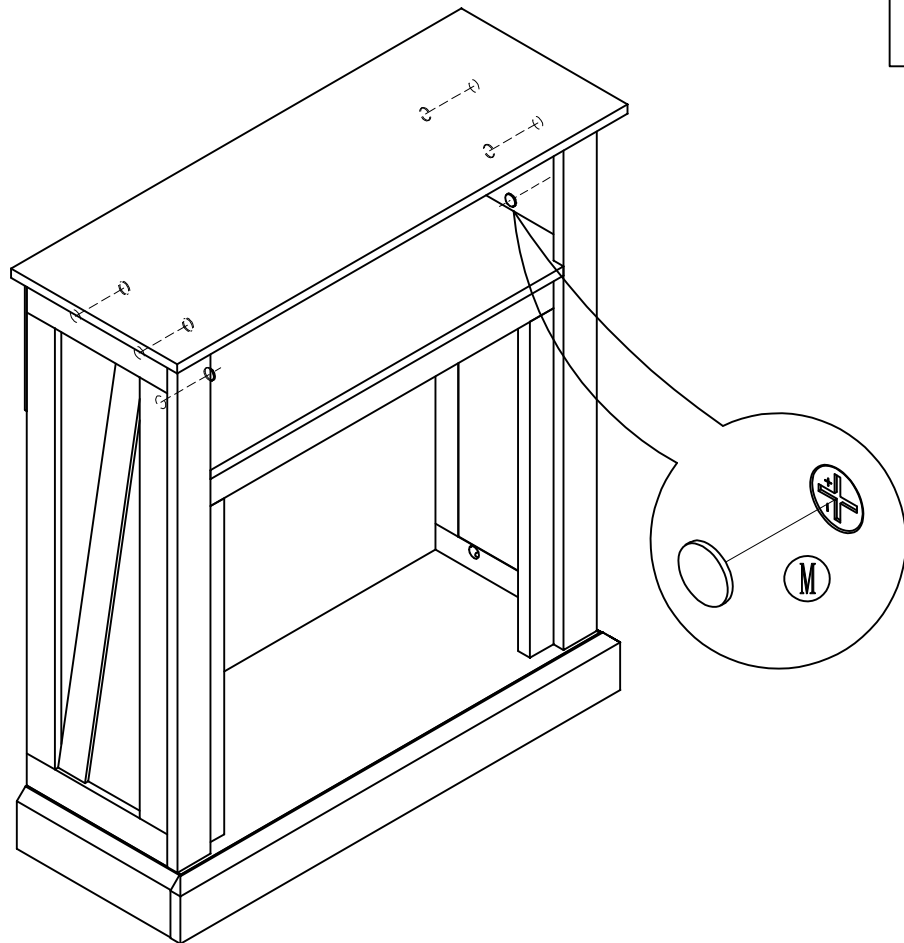


Step 14


K



10

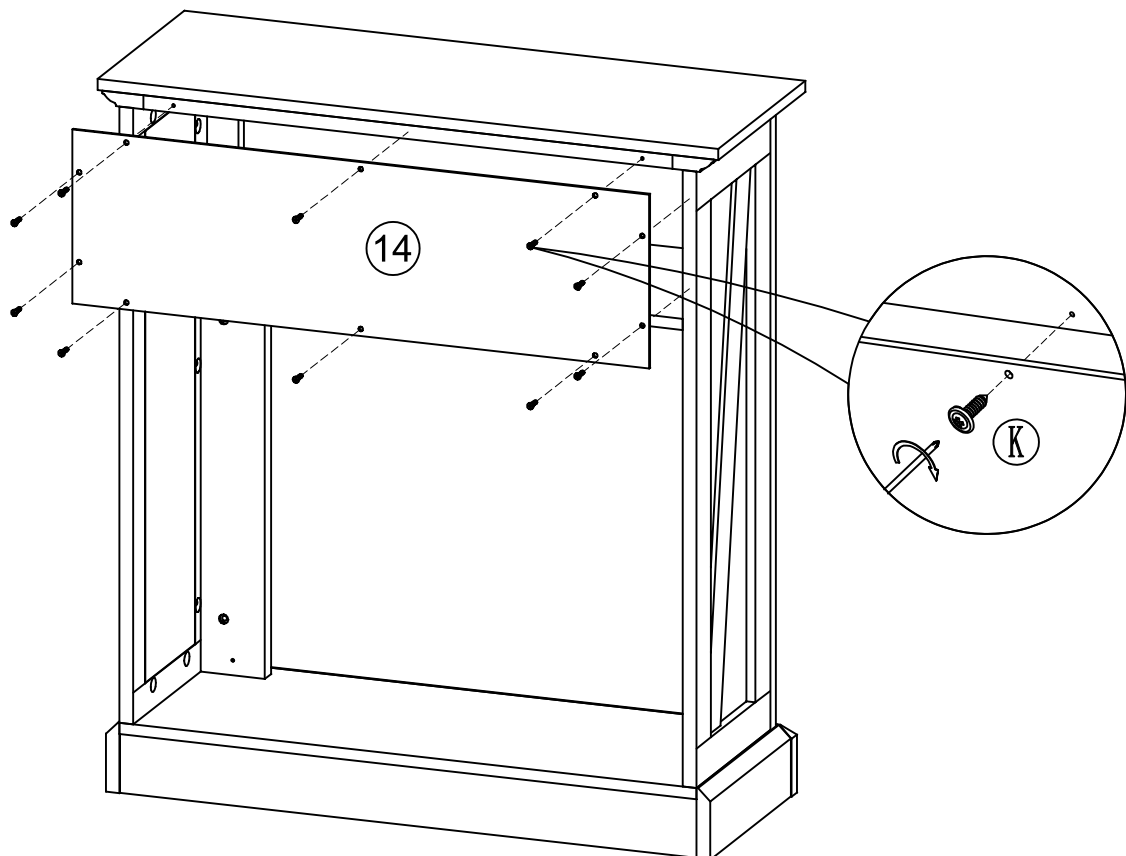

Step 15

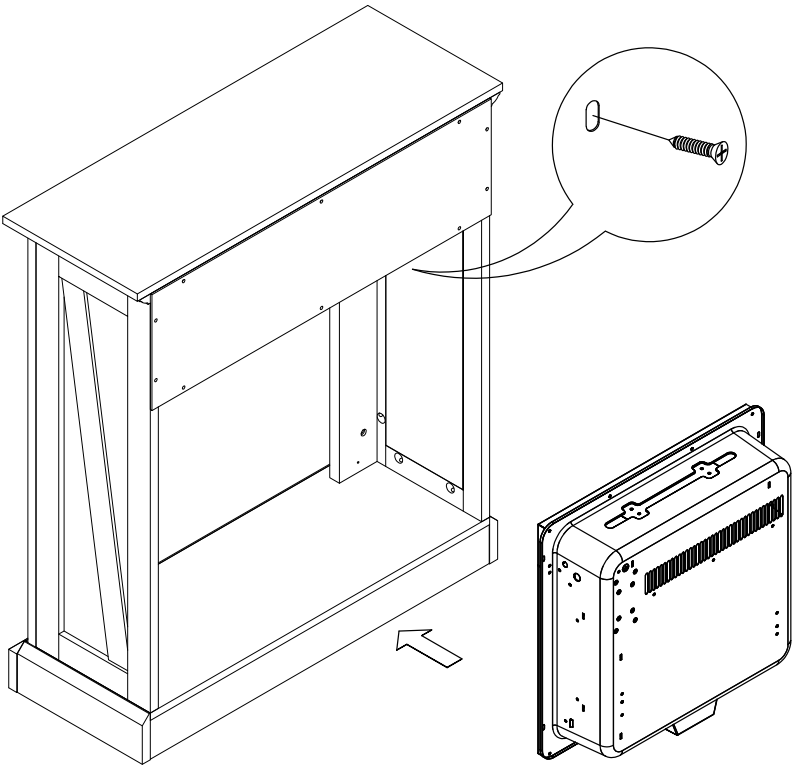


FIREPLACE INSTALLATION

If you decide to install the fireplace into the mantel, carefully set the unit from the back of the mantel and center it in the opening. Check the alignment and attach the unit to the mantel by inserting screws through the drilled holes on the trim to the mantel.


NOTE: Do not attempt to install the unit from the front of the mantel. It will not fit.

Step 16

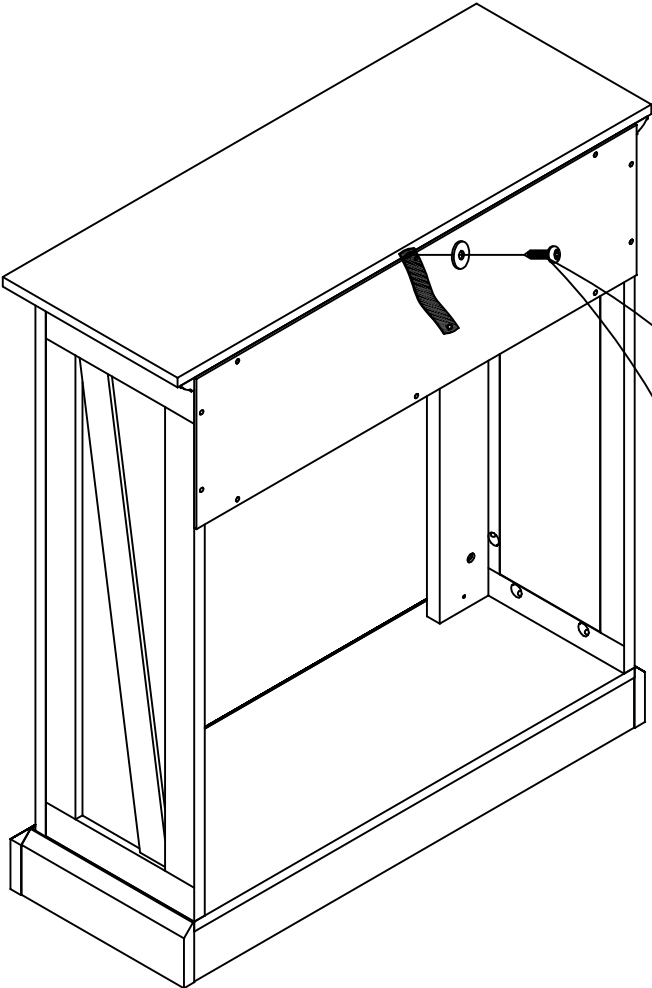

N		1
K		1
N		1

Step 17

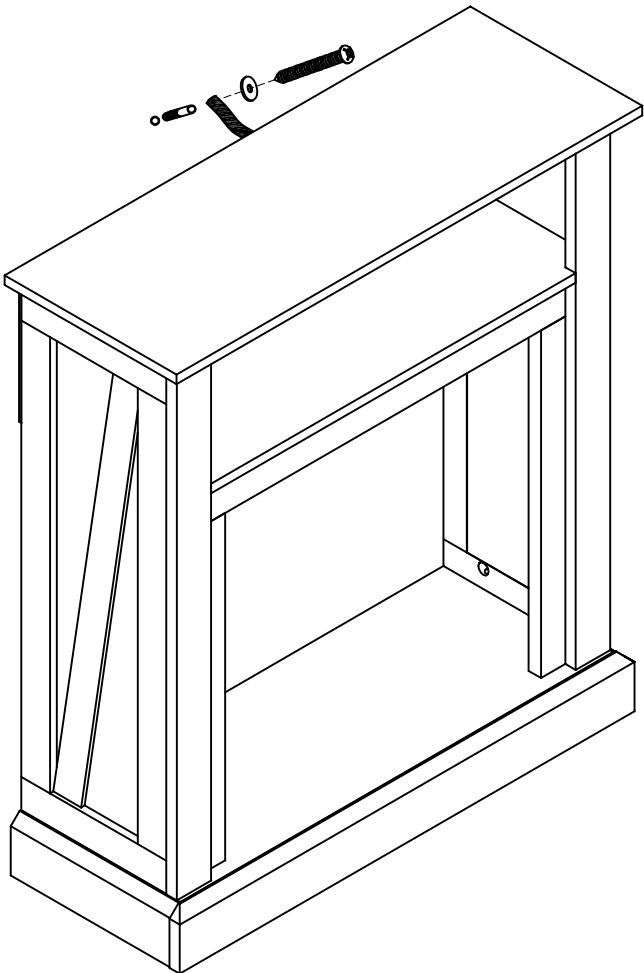

O		1
N		1

