




# SUBTERRANEAN Installation Guide

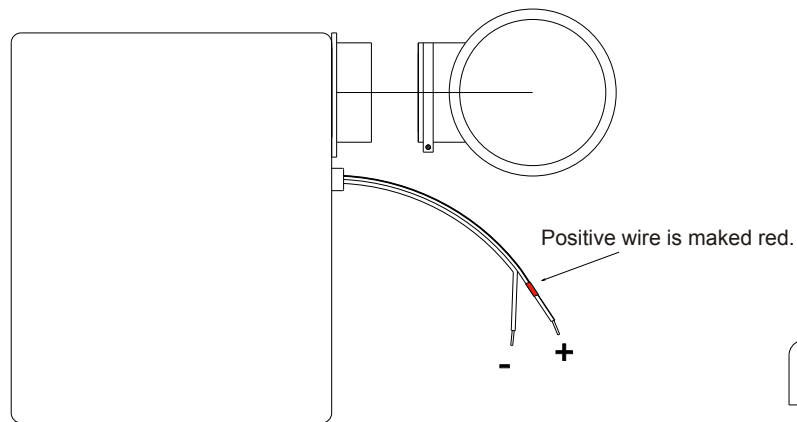

## Instructions

1. Install 90° elbow with port hub to subwoofer flange as indicated.
2. Locate the burial location and then remove earth approximately 3' x 3' x 1.5' deep.
3. Place gravel or playground sand on the bottom of the hole and place sub.
4. Place playground sand around sub to top of the enclosure. Pack well.
5. Cover enclosure with soil etc to blend with landscaping ensuring minimum of 4" clearance from the soil to the bottom of the port hub.

NOTE: Gravel provides some drainage and the sand makes removal of sub much easier if required.

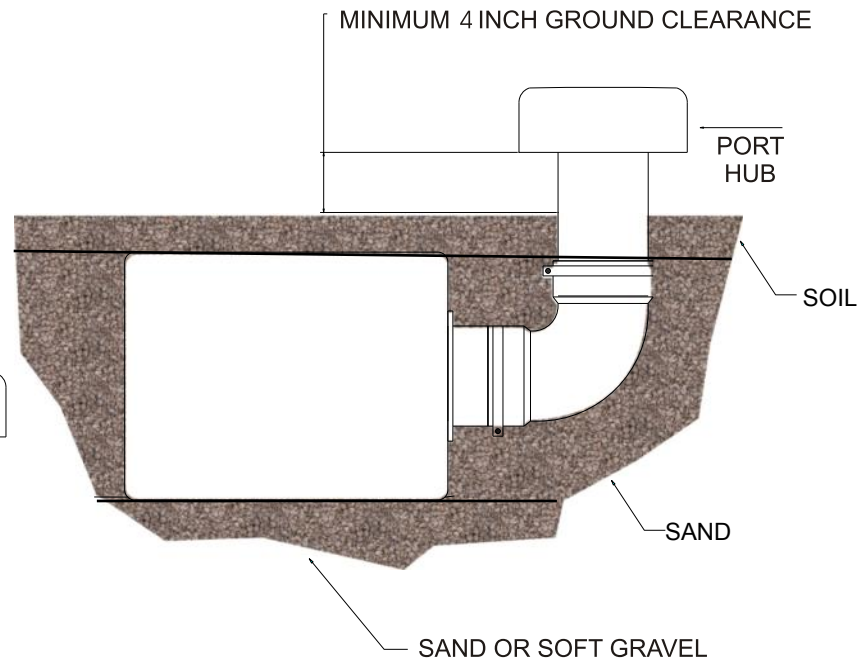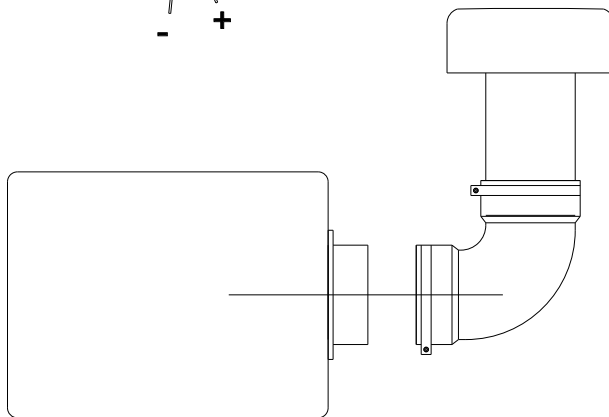

535 Airpark Rd  
Napa, CA 94558  
P: 1-707-265-6343 F: 1-707-265-6334

[www.jamesloudspeaker.com](http://www.jamesloudspeaker.com)

JAMES LOUDSPEAKER	
SUBTERRANEAN	
INSTRUCTION MANUAL	
P/N: -	DWR #: -
REVISED BY:	
DRAWN BY: M. PARK	FILE:
DATE: 07-11-06	SCALE:
APPROVED:	
DRAFTING APPROVED:	
DO NOT SCALE DRAWING	
DRAWING NOT TO BE USED FOR CNC	
TOLERANCES: ANG: %%P = .5% D FRACT. %%P = 1/32	
DECIMALS: .XX %%P = .01 .XXX %%P = .005	
REVISION: C	

