

Rear License Plate Bracket Kit

QP.MMR-1805

(1) Contents:



(2) Tools required:

A. 13mm Socket Wrench;

B. 13mm Wrench;



(3) Installation time:

About 1.5 hours, 1-2 persons needed.


(Installation time is different according to individual person)

(4) Installation instruction:

Step 1:


Remove the spare tire from the vehicle. Remove the (8)13mm bolts holding the factory tire carrier in place.

Remove the 3rd brake light wiring grommet and remove the harness and plug from the vehicle.

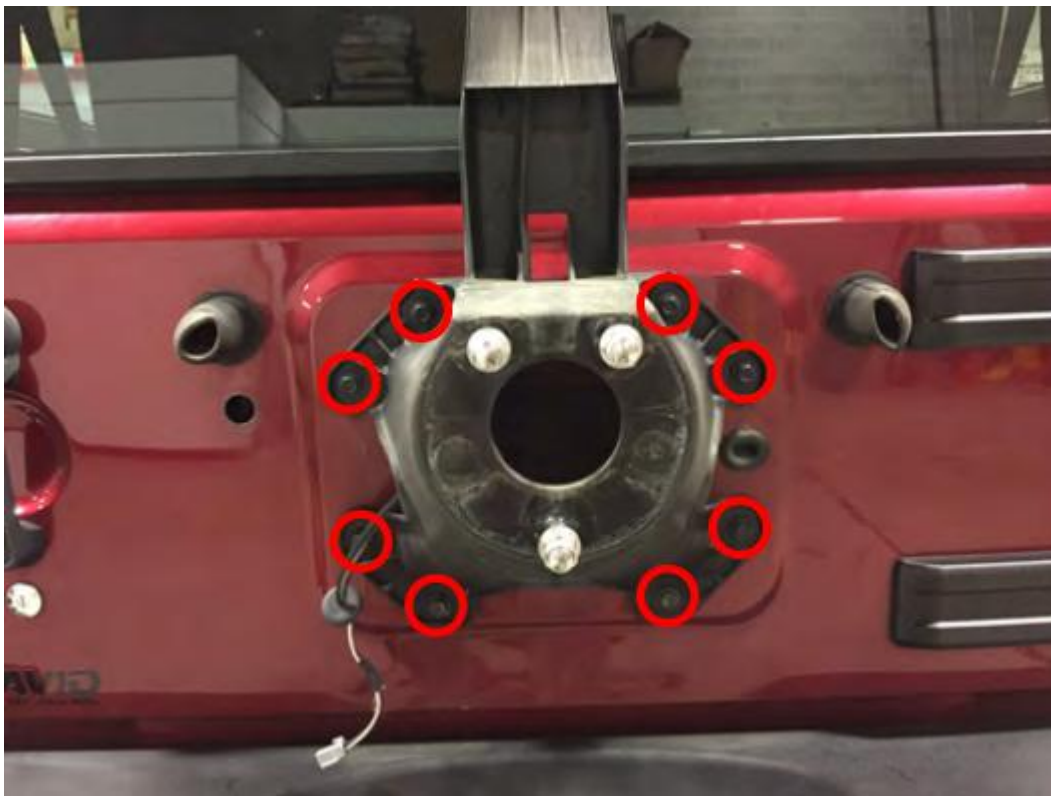

Step 2:

Install the wires. Recommend the B1 & B2 connect to the 3rd brake light. And the A1 & A2 connect to the Car fuse box.

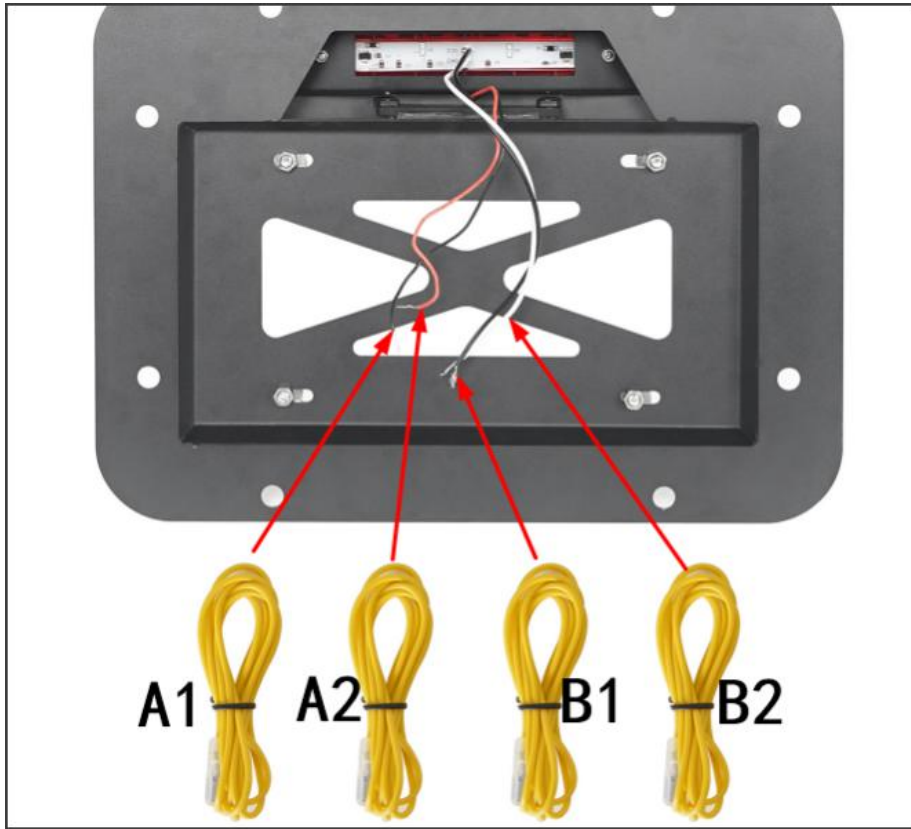

Step 3:

Install the bracket using the factory bolts.



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact us if you have any kind of question about your purchase. We will reply you in timely manner.

 www.ubox-offroad.com    @HookeRoad4x4

Post Your Jeep w/Hashtag #hookeroad to Win Discount Every Week