

Step 4:

Complete plumbing connection to drain and water supply. Remove aerator to "flush" system then reconnect. Check connection for leaks.



200 Heartland Boulevard, Edgewood, NY 11717-8380

© ADVANCE TABCO, JUNE 2005



Installation Instructions for **BUDGET SINKS**



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

CONTENTS INCLUDE:


- (1) Laundry/Utility Sink
- (4) legs with Adjustable Feet
- (1) Drain Assembly
- (4) Set Screws

TOOLS REQUIRED:

- 5/32" Allen Wrench
- Pipe Wrench
- Adjustable Wrench
- Level

Step 1:
Remove legs and drain located in bottom carton. Turn Sink upside down and remove the “Red Cap” where set screws can be found (**Illustration 1**).

Step 1:
Remove legs and drain located in bottom carton. Turn Sink upside down and remove the “Red Cap” where set screws can be found (**Illustration 1**).

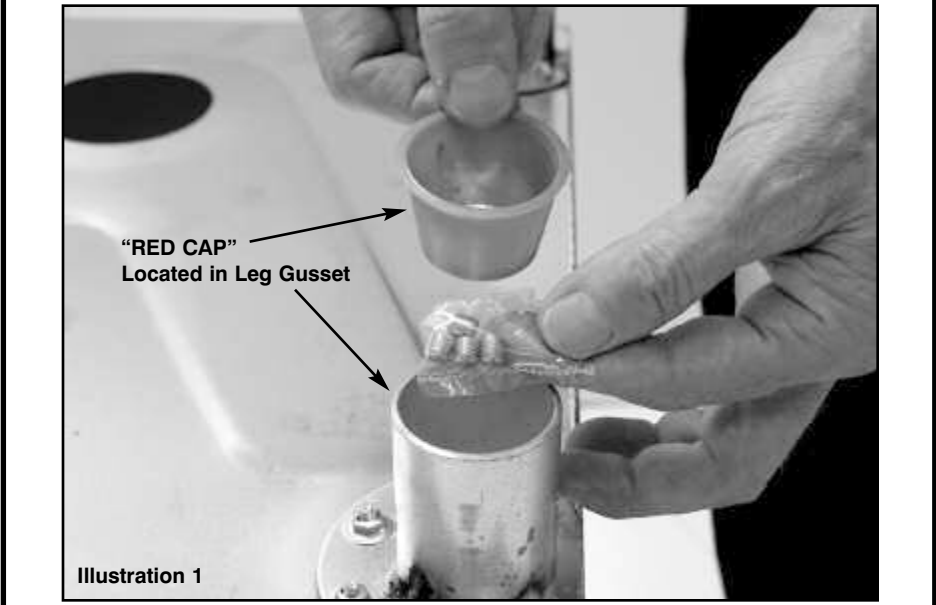

Step 2:
Insert legs into Gusset (**Illustration 2**), and secure with Set Screws (**Illustration 2a**).

Insert legs into Gusset (**Illustration 2**), and secure with Set Screws (**Illustration 2a**).



Illustration 2a

Step 3:
Turn Sink to upright position. Pre-Plumb Drain and Faucet.
Position Sink at desired location and level by turning adjustable Bullet Feet (**Illustration 3**).

Illustration 3

Turn Sink to upright position. Pre-Plumb Drain and Faucet. Position Sink at desired location and level by turning adjustable Bullet Feet (**Illustration 3**).



Illustration 3

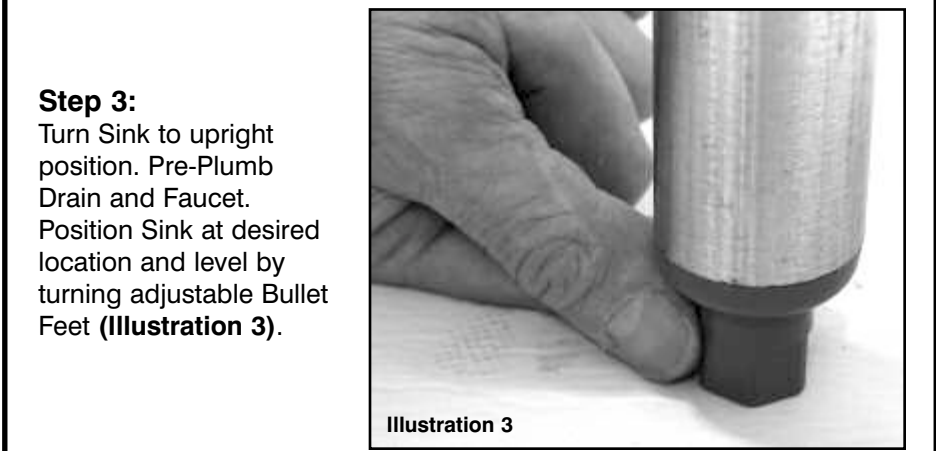


Illustration 3

Continued >>