
Parrot Uncle


C3016BK
C3016GD

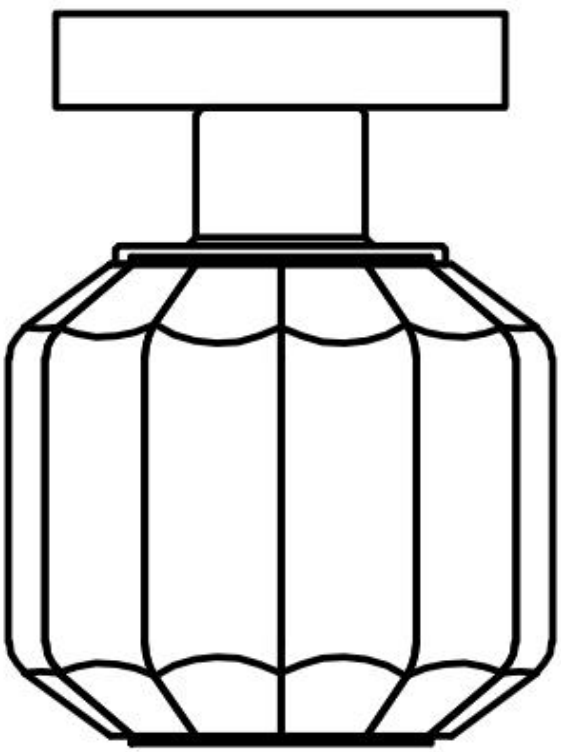

English / Español / Français


www.parrotuncle.com

C3016BK/C3016GD

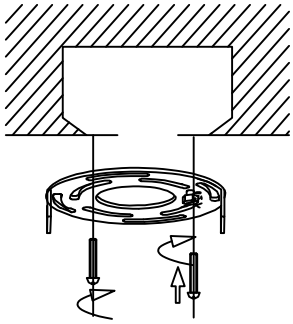


①

Install the bracket on top of the box

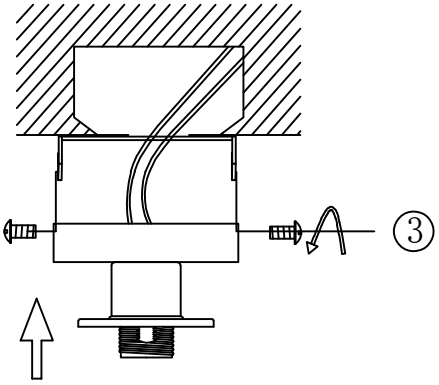


③

Screw the screw into the mounting board, and secure the light to the mounting board.

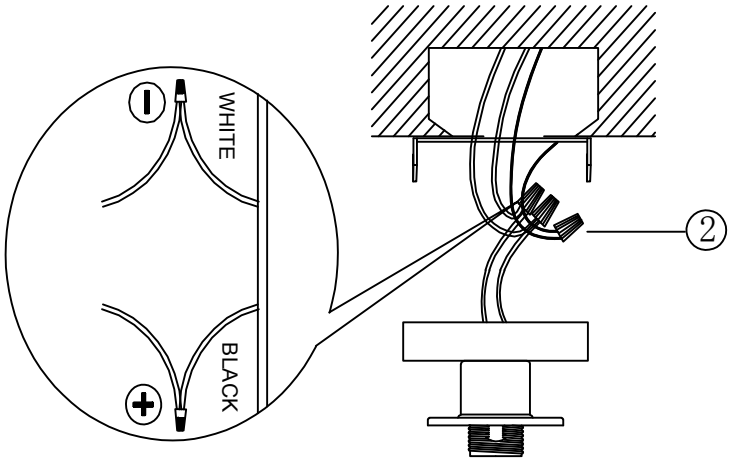


②


The black line is: L
The white line is: N
The yellow and green lines are: grounding wires

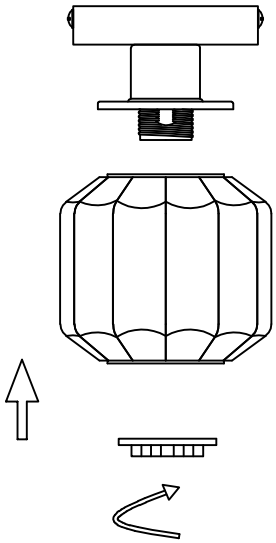

④


Install the lamp cap ring

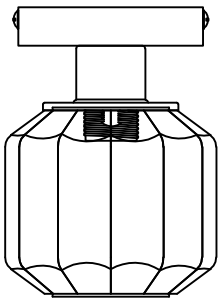

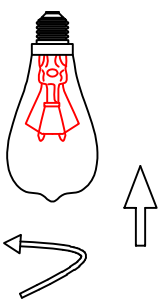

⑤

Installing bulb

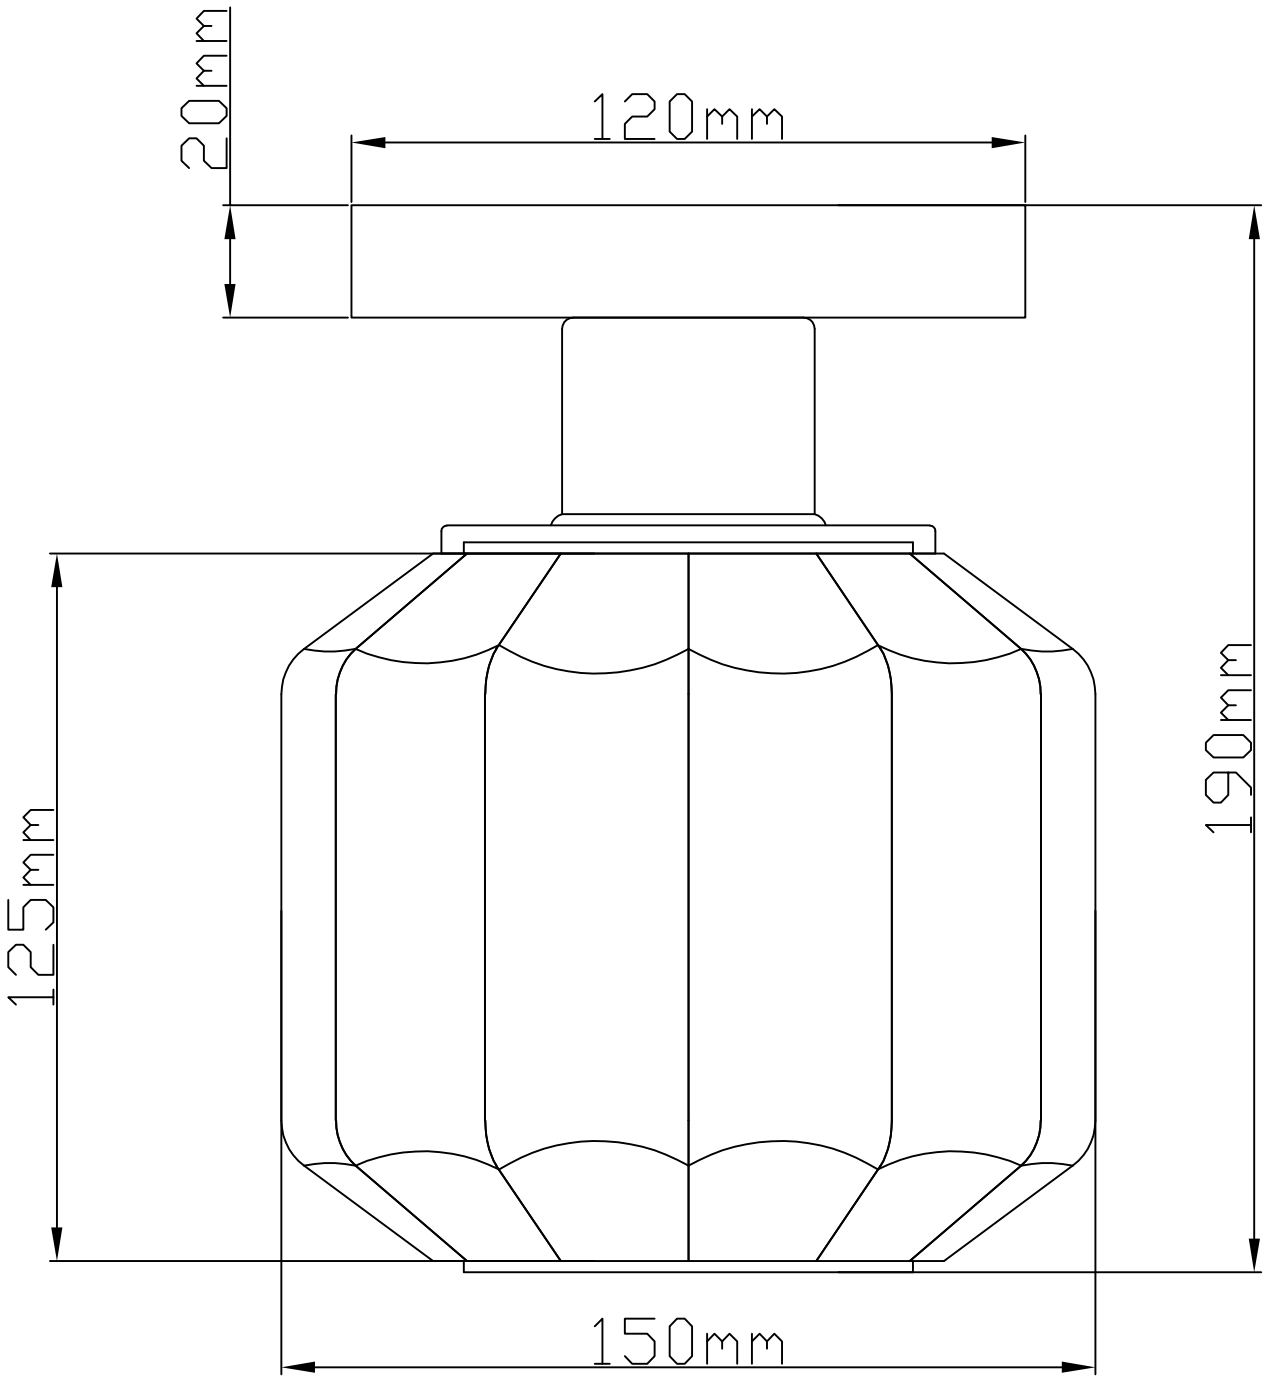
20mm
120mm
190mm
125mm
150mm



Parrot Uncle

MADE IN CHINA