


## **Nilight** LED Off-road LED Light Bar Wiring Harness

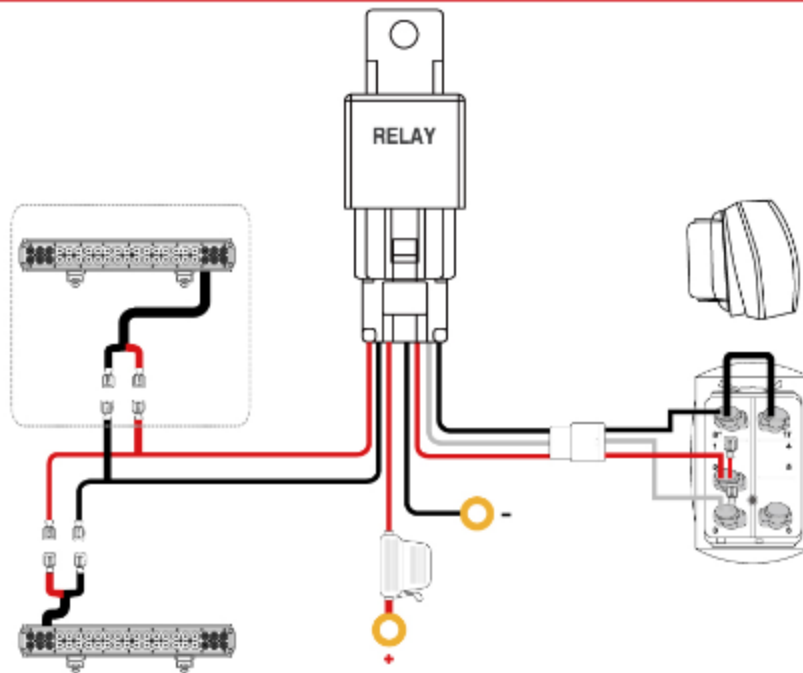

### **Installation:**

1. Connect light bar wires to wiring harness terminals respectively, black to black, red to red.
2. Run rocker switch wires through switch cutout/opening in the dash. Connect the 5-pin rocker switch with wiring harness. 2 methods of connection, please refer to the instruction on the below page.
3. Connect wiring harness to the car battery. Red wire (+) with fuse to positive, black wire(-) to negative
4. Turn on the power and press switch on/off to test the light.

### **Caution:**

1. The operating voltage is 12V DC. 16AWG: Max. Wattage 180W/ 14AWG: Max. Wattage 300W /12AWG: Max. Wattage 450W
2. Please make sure all the exposed wires were securely wrapped by electrical insulating tape to prevent short circuit.
3. Please strictly follow the instructions to avoid any hazards. If you do not feel comfortable with the installation we recommend having a professional to install or install under his guidance.