


AIR FORCE BRACKET (AFBR-1) MOUNTING INSTRUCTIONS

PLEASE FOLLOW THE DIRECTIONS CAREFULLY TO MOUNT THE BRACKET PROPERLY.

FOR STEEL GROOMING TABLES:


- 1) PLACE BRACKET 11" FROM END OF THE TABLE AND $\frac{1}{2}$ " FROM THE FRONT OF THE TABLE.
- 2) MARK 4 HOLES WHERE INDICATED.
- 3) WITH A $\frac{1}{4}$ " DRILL BIT AND ELECTRIC DRILL CREATE $\frac{1}{4}$ " HOLES.
- 4) MOUNT BRACKET WITH THE SCREWS AND NUTS SUPPLIED FOR STEEL GROOMING TABLES.
- 5) AFTER THE MOUNTING PLATE HAS BEEN SECURED AND TIGHTENED, PLACE BLOWER ON MOUNTING PLATE AND SLIDE DRYER (SEE ILLUSTRATION) UNTIL LEGS LOCK INTO PLACE.
- 6) AFTER DRYER IS LOCKED INTO PLACE, SCREW INTO THREADED HOLE ON SIDE OF THE BRACKET TO AVOID MOVEMENT OF THE DRYER AS A RESULT OF VIBRATION.

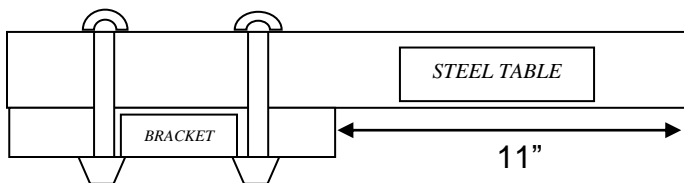


SIDE VIEW

FOR WOODEN GROOMING TABLES:

- 7) PLACE BRACKET 11" FROM END OF THE TABLE AND $\frac{1}{2}$ " FROM THE FRONT OF THE TABLE.
- 8) MARK 4 HOLES WHERE INDICATED.
- 9) ATTACH BRACKET WITH 4 SELF TAPPING WOOD SCREWS
- 10) FOLLOW STEPS 5 & 6 AS DESCRIBED ABOVE.

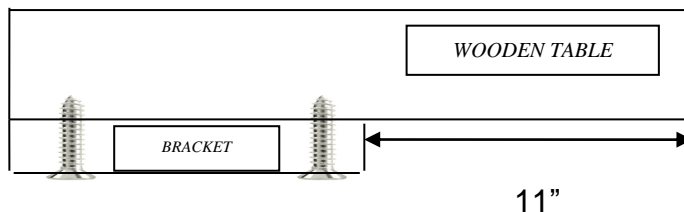


SIDE VIEW

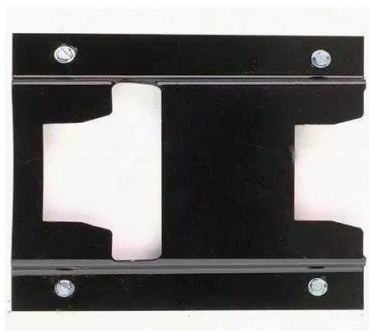

BOTTOM VIEW

TO MOUNT ON WALL

- 1) PLACE AIR FORCE MOUNTING BRACKET ON THE WALL WHERE DESIRED WITH OPEN PORTION OF BRACKET IN UPRIGHT POSITION
- 2) WITH BRACKET AS TEMPLATE, MARK 4 HOLES WHERE INDICATED
- 3) WITH PHILLIPS HEAD SCREWDRIVER OR "PUNCH" CREATE HOLES IN SHEETROCK
- 4) ATTACH BRACKET WITH 4 SELF TAPPING WOOD SCREWS AND MOLLIES (SUPPLIED)
- 5) AFTER THE MOUNTING PLATE HAS BEEN SECURED AND TIGHTENED, PLACE BLOWER ON MOUNTING PLATE AND SLIDE DRYER (SEE ILLUSTRATION) UNTIL LEGS LOCK INTO PLACE.
- 6) WHEN THE DRYER IS LOCKED INTO PLACE SCREW INTO THREADED HOLE ON SIDE OF THE BRACKET TO AVOID MOVEMENT OF THE DRYER AS A RESULT OF VIBRATION.

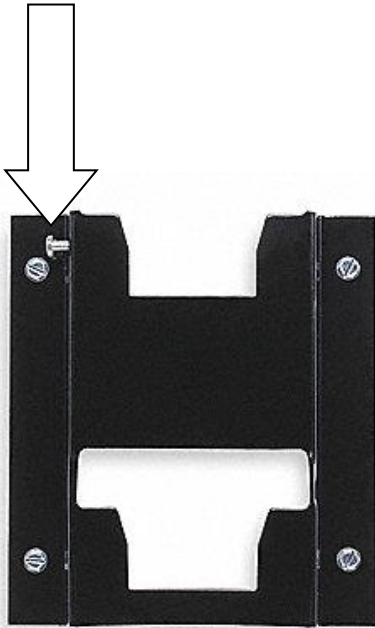

IT IS VERY IMPORTANT TO MAKE SURE THAT THE MOUNTING BRACKET IS SECURE AND CAN HANDLE THE WEIGHT AND PULLING THAT MIGHT OCCUR DURING THE NORMAL USAGE OF THIS PRODUCT. METRO WILL NOT BE RESPONSIBLE FOR DRYERS THAT ARE DAMAGED AS A RESULT OF IMPROPER BRACKET MOUNTING.