
Dodge Ram (09-12) LED Fog Light Wiring Instructions


1

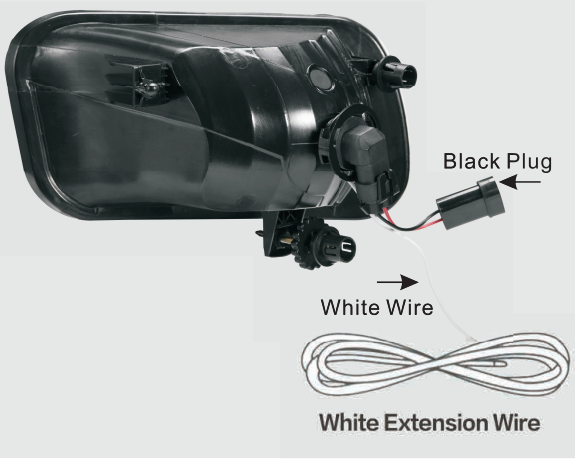

Connect the Black Plug to the original car fog light plug.

Connect White Wire to the White Extension Wire,wihch is in the box.


2

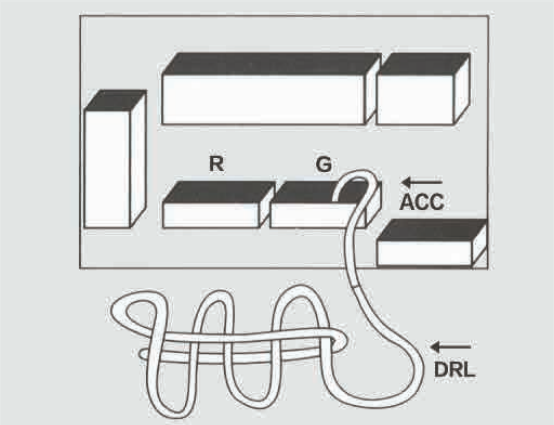

Connect the White Extension Wire to ACC,Which is in the Engine Fuse Box,or Wire from ACC.

ACC:It switches on the electric power for many convenience components of the car,like car stereo,power windows,power seats and cigarette lighter.

3

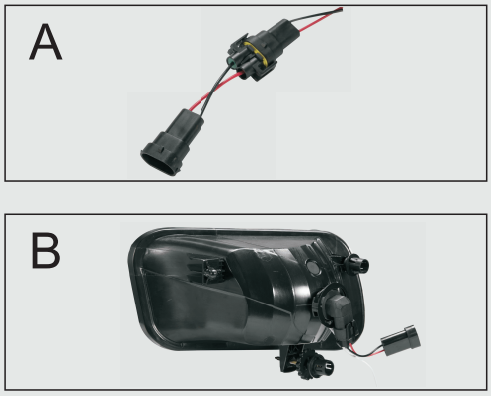

Turn on the switch,if it works,turning to step 4.

If it does not work,put off the Connector(Picture A) then connect to the light(Picture B).After all,turn to step 4.

4



Tighten the mounting screws just enough to keep your new fog light assembly securely installed.

Be careful not to tighten the screws too much or they might cause damage to the assembly.

NOTE:

LED has positive and negative poles.If you do not follow the instructions,there is a risk of short circuit.

We suggest to fix the Fog Lights in Car modification shop or with the help of professionals.