



Installation Instructions for TABLE MOUNTED DISH RACK SORTING SHELVES



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Table Mounted Sorting Shelves manufactured by **ADVANCE TABCO®** are designed and constructed store/drain Dish Racks used in a Commercial Dishwasher. **ADVANCE TABCO®** does not recommend use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

INSTALLATION INSTRUCTIONS

Contents:

- (2) End Panels
- (5) Stainless Steel Cross Tubes
- (2) Stainless Steel Cross Tubes with Welded Tubular Uprights

Mounting Hardware:

(18 Flat Button Head Bolts)

Tools Required:

7/32" Allen Wrench

NOTE: DTA-79 May come Pre-Assembled From Factory Where Special Applications Exist

Step 1:


Determine type of shelf option that will be used for the DTA-79.



OPTION 1

For Single Side Use

Only 1 Cross Tube will be used across the top using the middle single hole.

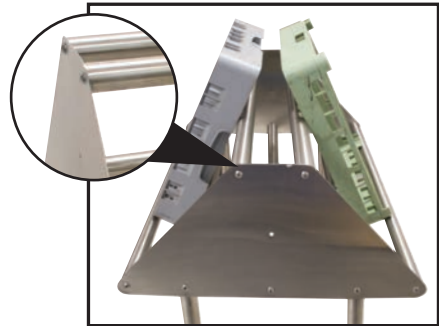

OPTION 2

For Double Side Use

2 Cross Tubes will be installed at the top using the two top holes.

Step 2:

Align (2) Cross Tubes with welded Tubular Upright at the Second Hole in on each End Panel. Secure with Button Head Bolts provided (**Figure 1**).

NOTE: Ensure Cross Tubes with Welded Uprights match at each end & are perpendicular to bottom edge of side panel.

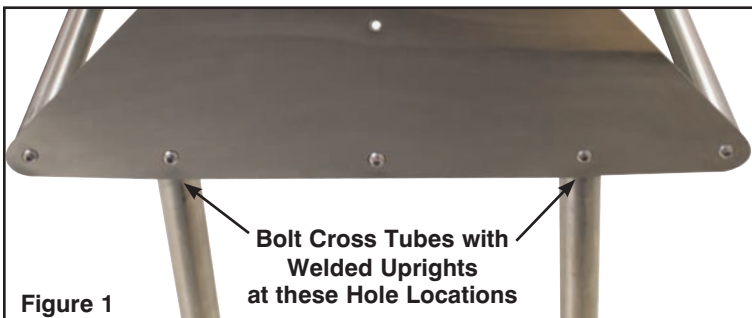


Figure 1

Step 3:

Align the remaining Cross Tubes between End Panels & Secure with Button Head Bolts (**Figure 2**) based on option selected in **STEP 1**.

Figure 2



Step 4:

Mount DTA-79 to Dishtable - Align Notched posts with holes in roll rim (**Figure 3**) and Flat Bottom Posts with Elliptical Holes in Backsplash (**Figure 4**). Slide Uprights thru Elliptical Holes so Posts rests on Bracket and Notched Uprights rest on Roll Rim.



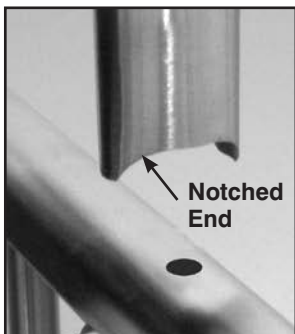


Figure 3

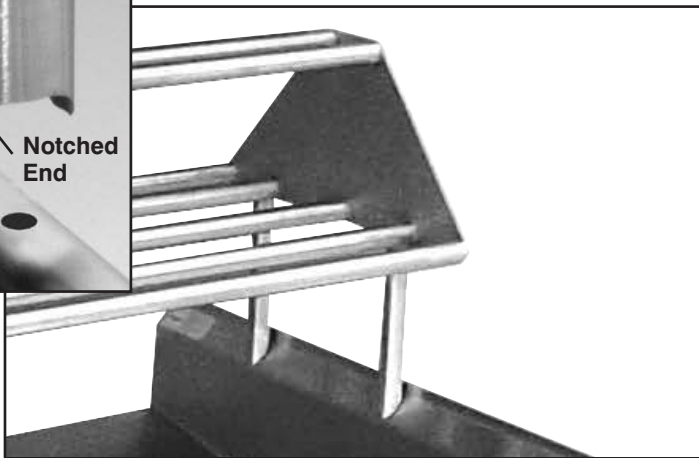

Insert Button Head Bolts (Provided) thru Brackets into Tubes and tighten (**Figure 5**).

Figure 5

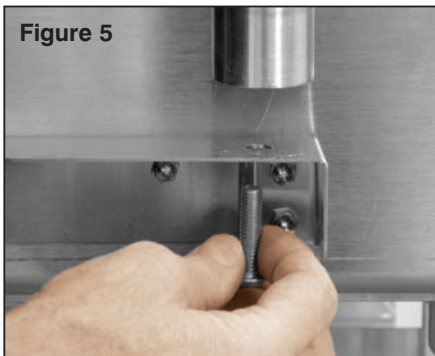

... Continued

Insert Button Head Bolts (Provided) thru bottom of Roll Rim into Tube and tighten. **Figure 6.**



Step 5:

Tighten all Bolts. Seal Joints with N.S.F. Approved Silicone Sealant where Notched Uprights meet Roll Rim (Where uprights pass thru elliptical holes in backsplash and Bolt Heads).



Edgewood, New York 11717-8380

SEPTEMBER 2016