
Parrot Uncle


C3011GN

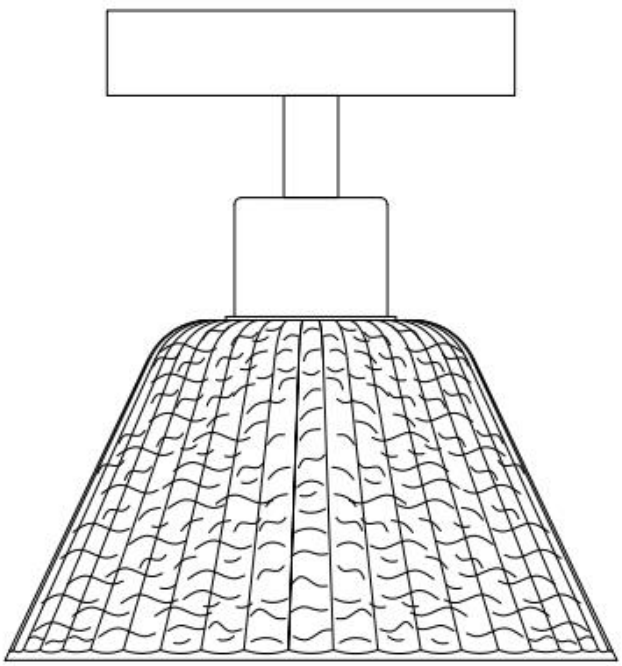

English / Español / Français


www.parrotuncle.com

C3011GN

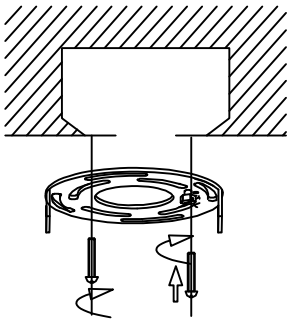


①


Install the bracket on top of the box

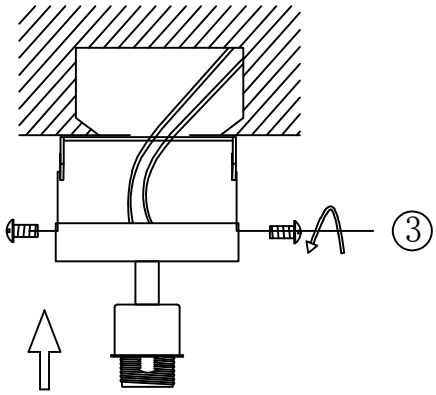

Screw the screw into the mounting board, and secure the light to the mounting board.

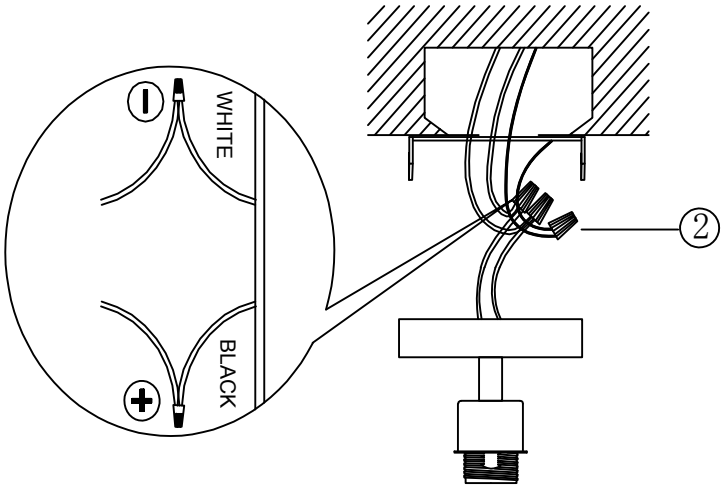


The black line is: L
The white line is: N
The yellow and green lines are: grounding wires

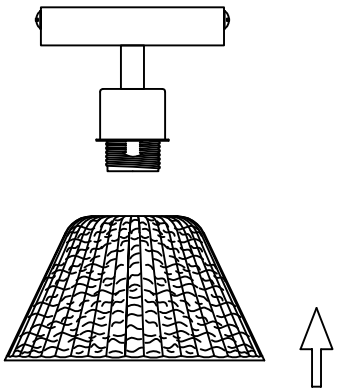


④

Install the lamp cap ring

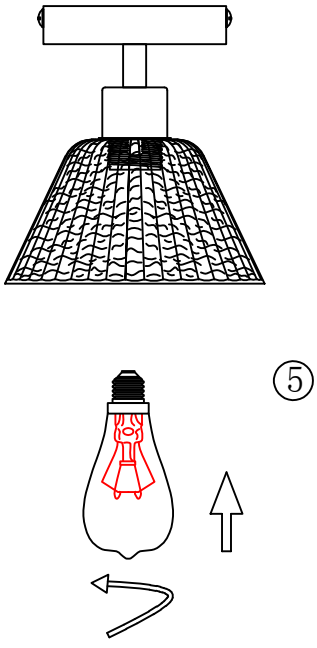

Installing bulb

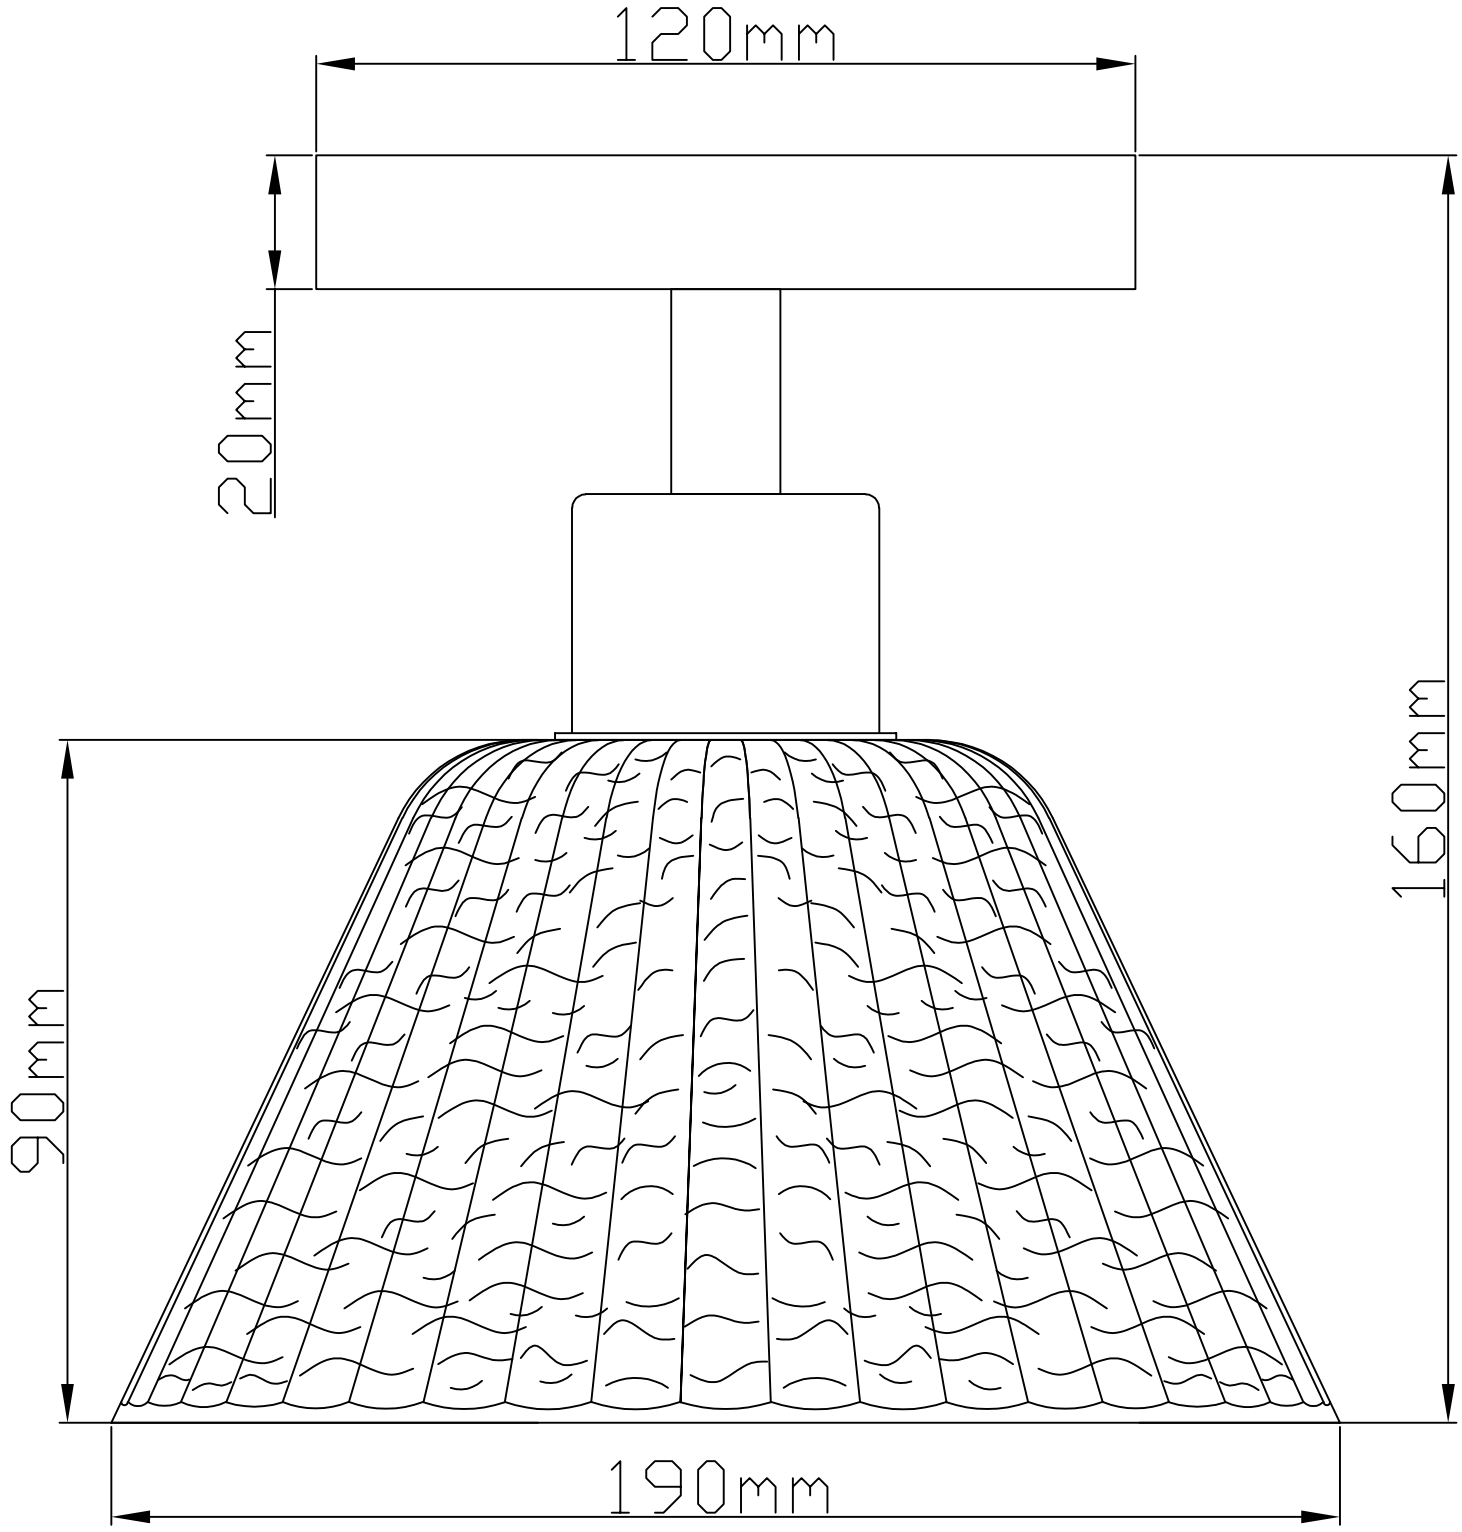
120mm
20mm
160mm
90mm
190mm



Parrot Uncle

MADE IN CHINA