



Installation Instructions for K-117 Add-A-Faucet (Connecting to a DTA-53, K-115 & K-116 Prerinse Faucet)



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

 **WARNING:** Equipment that includes a faucet may expose you to chemicals, including lead, that are known to the State of California to cause cancer or birth defects or other reproductive harm. For more Info., visit www.p65warnings.ca.gov.

Step 1:


Locate the longest Chrome Riser from Perinse Faucet model DTA-53, K-115 or K-116 **(Figure A)**. Remove the bottom nut from this Riser **(Figure B & C)**.



(Figure A)




(Figure B)

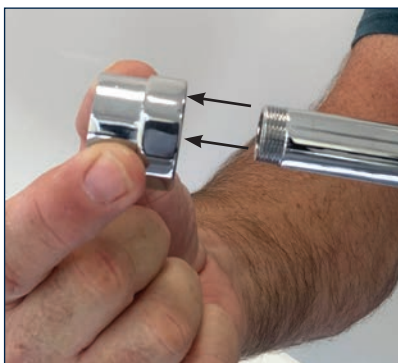


(Figure C)

Step 2:

Using the Riser Nut you just removed in Step 1, insert the Nut onto the Perinse Faucet Body and tighten **(Figure D & E)**.

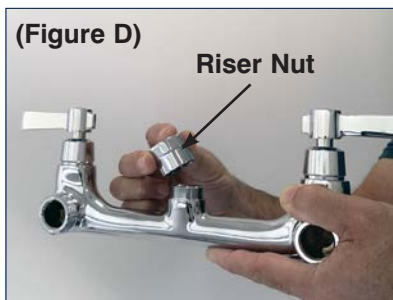


(Figure D)

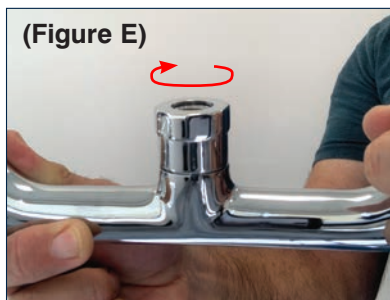

(Figure E)

Step 3:

Insert the K-117 Faucet Body tightly into the Riser Nut on the Preinse Body and tighten. **(Figure F)**.

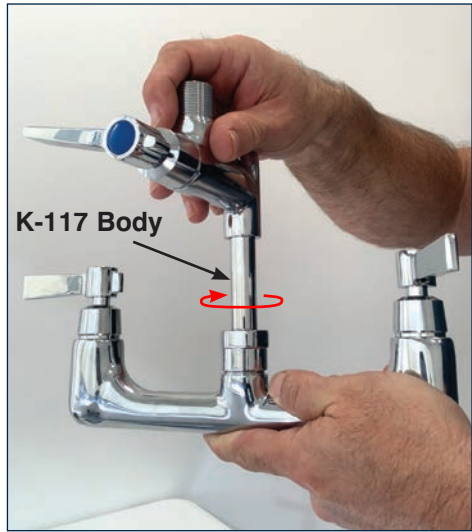


(Figure F)

Step 4:

Locate the long Preinse Riser and insert into the smaller existing thread on the K-117 Body and tighten **(Figure G & H)**.



(Figure G)

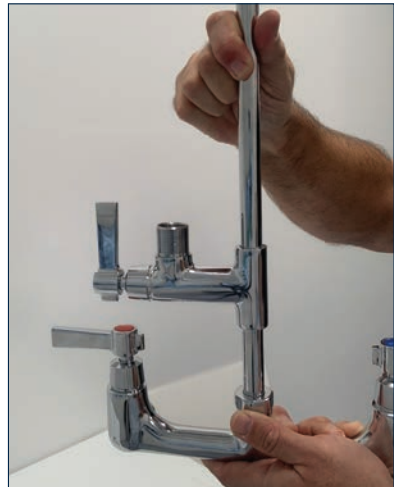

(Figure H)

Continued >>

Step 5:

Insert K-117 Swing Spout into the existing thread on the K-117 Body, and tighten nut **(Figure I & J)**.




(Figure I)



(Figure J)

Step 6:

Check all connections and make sure they are tight.

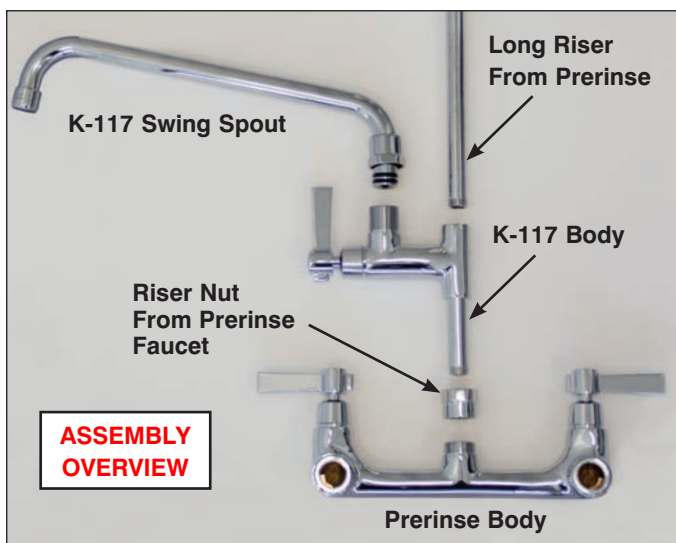

Hauppauge, New York 11788

OCTOBER 2020