

Slanted Shelf / Suture Cart / Merchandising Cart

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Parts List

4-Shelf Unit:

- | | |
|---------------------|--------------------|
| (4) 54" Posts | (6) Rails |
| (4) Wire Shelves | (4) Casters |
| (2) 3-Sided Trusses | (16) Split Sleeves |

5-Shelf Unit:

- | | |
|---------------------|--------------------|
| (4) 63" Posts | (8) Rails |
| (5) Wire Shelves | (4) Casters |
| (2) 3-Sided Trusses | (20) Split Sleeves |

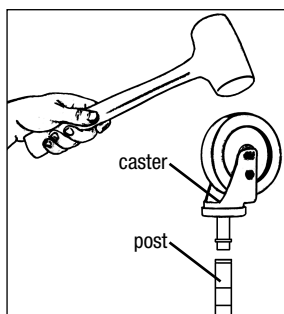


figure 1

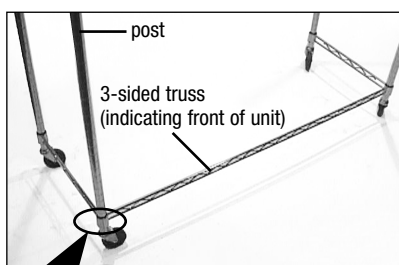


figure 2

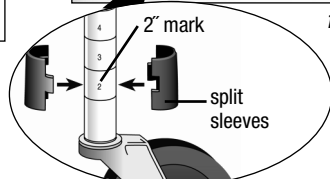


figure 2a

Step 1)

Attach casters to posts.

Insert caster into bottom of each post and drive in, using a mallet or hammer, as shown in *figure 1*.

Step 2)

Install bottom 3-sided truss.

- Posts are numbered in 1" increments. Snap split sleeves onto each post at the 2" mark as shown in *figure 2a*. The thicker part of the taper goes toward the bottom. Make sure rib in split sleeve is seated into groove on post.
- Insert post through the collars of the 3-sided truss, and slide the truss down to the split sleeves. The wider part of the collar goes toward the bottom.

Note: Long truss of bottom 3-sided truss indicates the FRONT of the unit.

Step 3)

Install rails, working from bottom to top.

- Assemble one rail at a time. Refer to *figure 3* for location of split sleeves and rails. Snap split sleeves onto number on each post (2 sets of split sleeves per rail).
- Insert post through the rail collars and slide rail down to split sleeves. Make sure the wider part of the collar goes toward the bottom.
- Repeat *Steps 3a* and *3b* to assemble all rails. Refer to *figure 3* for location of split sleeves and rails.

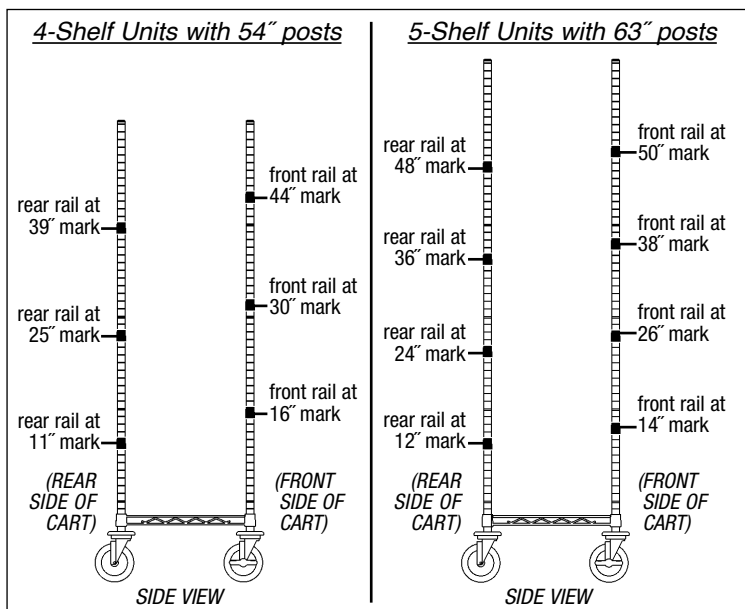


figure 3

(continued on back page)

EG9802 Revised 03/24

Slanted Shelf / Suture Cart / Merchandising Cart

ASSEMBLY INSTRUCTIONS



figure 4

Step 4)

Install top truss.

- a. Snap split sleeves onto each post, as shown in *figure 4* for location of split sleeves and top 3-sided truss.
- b. Position top truss OPPOSITE of bottom truss.
- c. Insert posts through truss collars and slide truss down to split sleeves. The wider part of each collar goes toward the bottom.

Step 5)

Install shelves.

Note: Large upturn on shelf is located on the front of the unit.

- a. Start with the bottom shelf. Hook shelf downturn over bottommost rear rail.
- b. Rest front of shelf on front of bottom truss. Shelf should be approximately at a 30° angle, as shown in *figure 5*.
- c. Repeat *Steps 5a* and *5b* to assemble all remaining shelves.

*Note: Downturn of topmost shelf should hook over top truss, as shown in *figure 5*.*

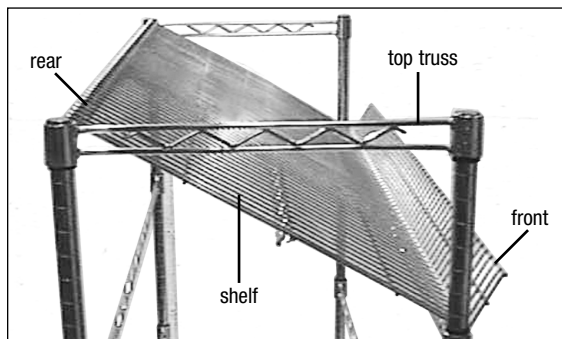


figure 5

(End)

Cart assembly is complete.

Dividers

(if ordered model with dividers)

Step 1) To assemble the dividers, locate the two bottom tabs, as shown in *figure 6*. Place divider on shelf with front tab of divider pointing toward the front upturn of shelf.

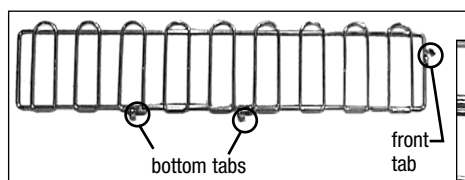


figure 6

Step 2) Pull divider toward the front of the shelf. Both bottom tabs should catch the wire shelf, as shown in *figure 7*.

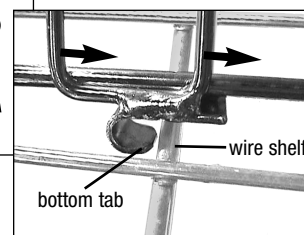


figure 7

Step 3) Clip the front tab over the wire shelf, as shown in *figure 8*.


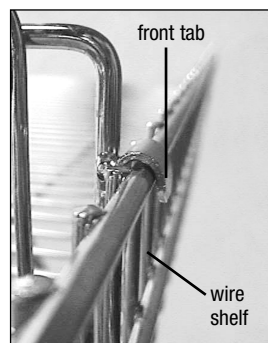


figure 8

(End)

Divider assembly is complete.

Attach as many dividers as desired to finish cart assembly (see photo at right).

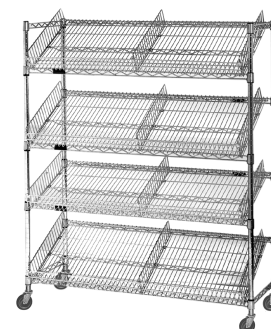

cart with dividers