


Nilight LED Light Bar Wiring Harness

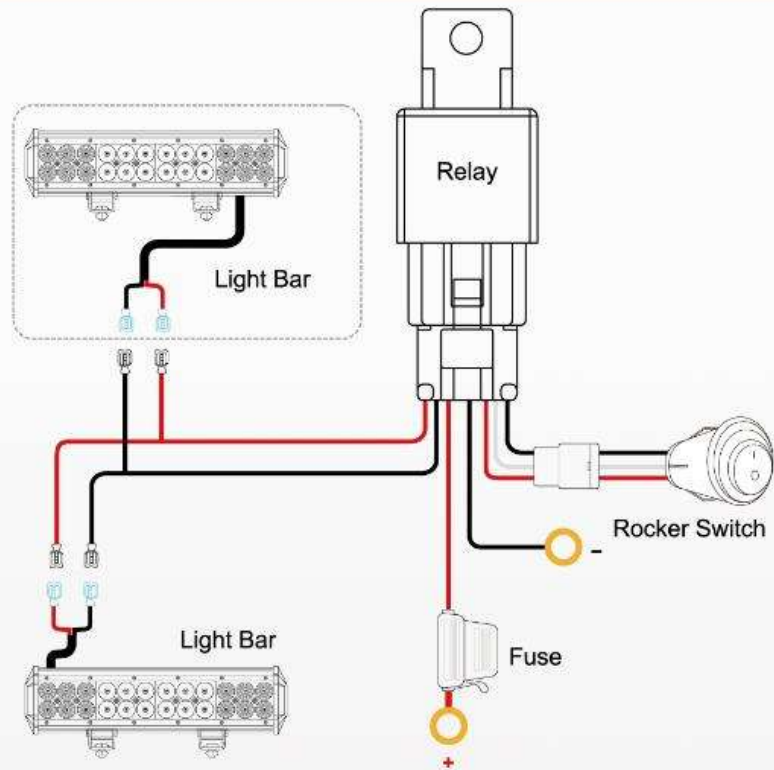

Installation:

1. Connect light bar wires to wiring harness terminals respectively, black to black, red to red.
2. Connect wiring harness to the car battery. Red wire (+) with fuse to positive, black wire(-) to negative
3. Turn on the power and press switch on/off to test the light.

Caution:

1. The operating voltage is 12V DC. 16AWG: Max. Wattage 180W/ 14AWG: Max. Wattage 300W / 12AWG: Max. Wattage 450W
2. Please make sure all the exposed wires were securely wrapped by electrical insulating tape to prevent short circuit.
3. Please strictly follow the instructions to avoid any hazards. If you do not feel comfortable with the installation we recommend having a professional to install or install under his guidance.

Need Help?



If you're having an issue with the product or need technical support, Nilight team is always here to help and make sure your **100% satisfaction.**

▶ Scan QR code to contact us

nilight.com/pages/contact

Nilight