
Parrot Uncle


C3012

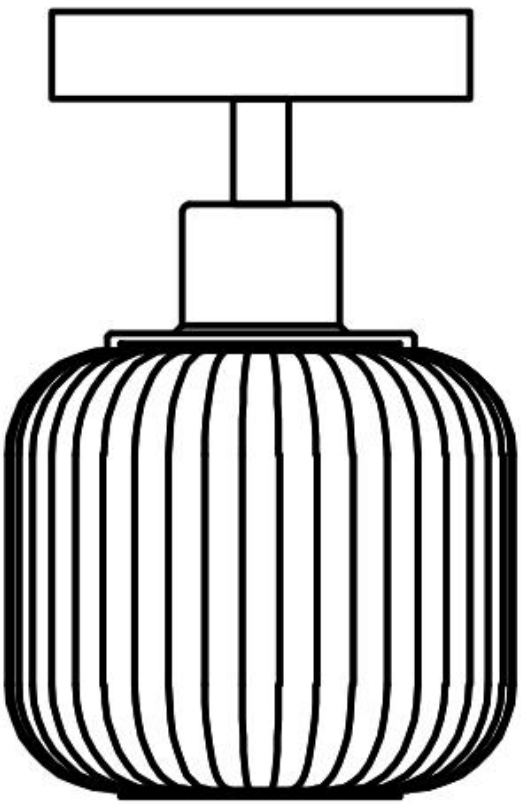

English / Español / Français


www.parrotuncle.com

C3012

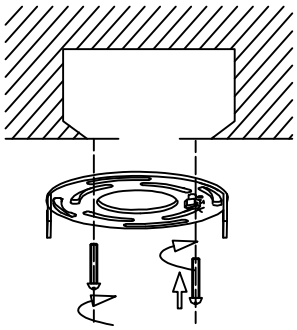


①


Install the bracket on top of the box

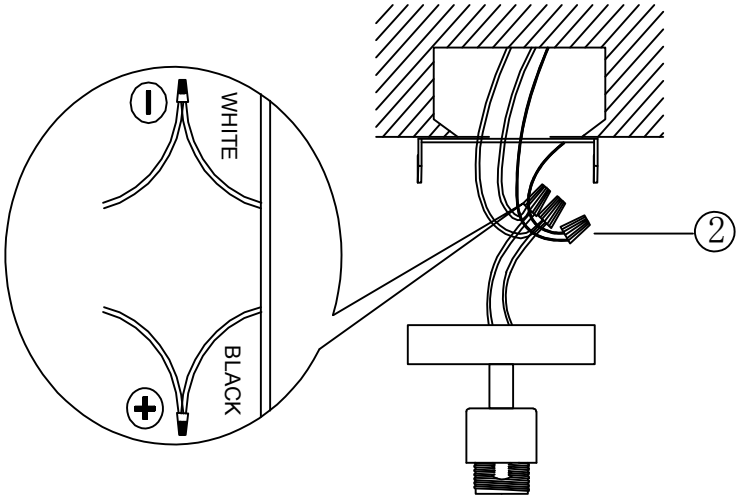

The black line is: L
The white line is: N
The yellow and green lines are: grounding wires

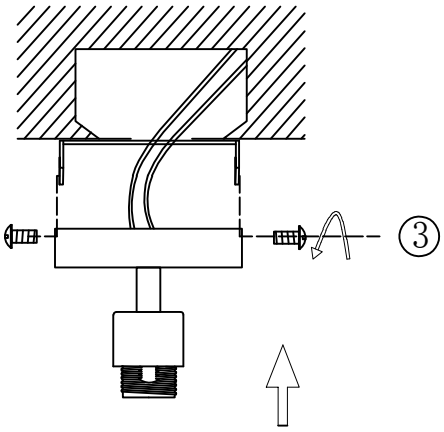


Screw the screw into the mounting board, and secure the light to the mounting board.

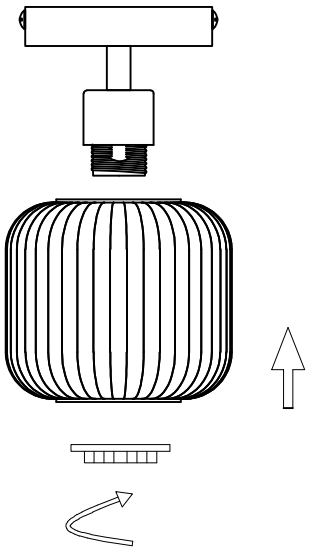


④

Install the lamp cap ring

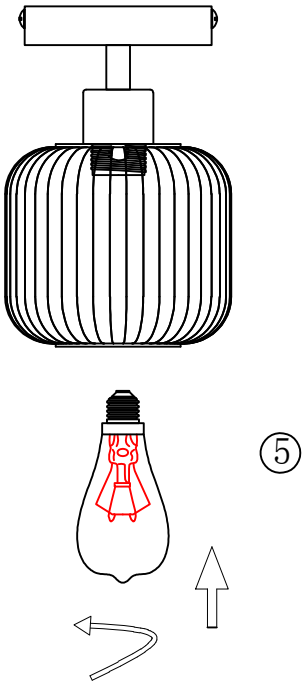

⑤

Installing bulb

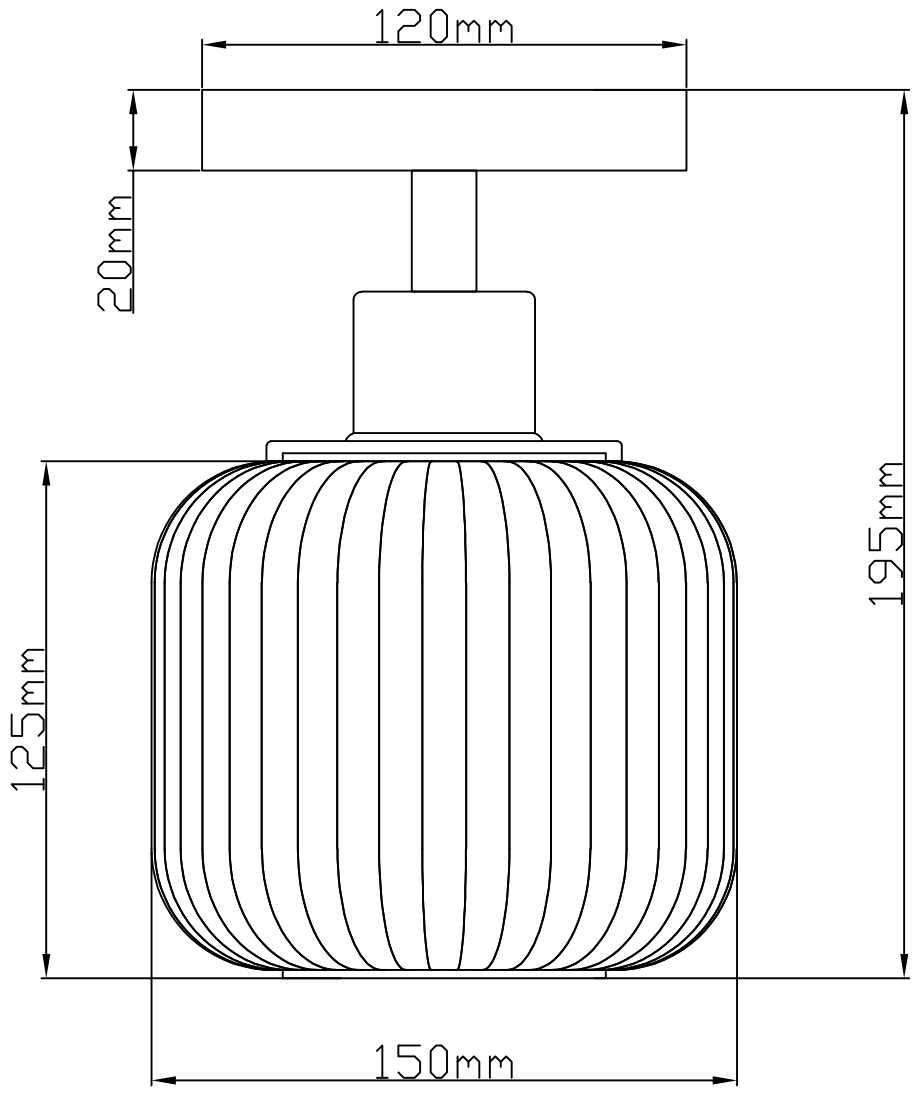
120mm
20mm
195mm
125mm
150mm



Parrot Uncle

MADE IN CHINA