

Step 4:

Position Angle Bracket onto (3) Stud Welds (Illustration 4a) and install 3 Nyloc hex Nuts onto Stud Welds (Illustration 4b) - **DO NOT TIGHTEN**. Position No-Splash Drainboard tight against sink side. Slide Angle Bracket tight against outer sink side and tighten Nyloc Nuts.

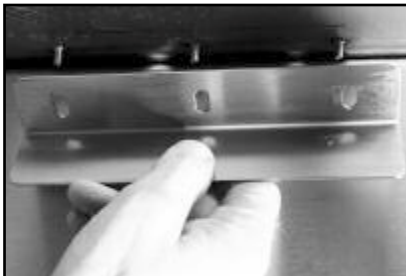


Illustration 4a



Illustration 4b

36" and 48" No-Splash Drainboards

Step 1:

Install 2 Galvanized Legs into leg gussets at end of No-Splash Drainboard. Tighten using Set screws provided (Illustration 5).

Step 2:

Position No-Splash Drainboard onto desired side of sink
And follow Step 4 Above.



Illustration 5

Step 3:

Adjust bullet foot at bottom of leg to ensure positive drainage.



Edgewood, New York 11717-8380

© ADVANCE TABCO FEB. 2005



Installation Instructions for Budget Sink No-Splash Drainboards



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

No Splash Drainboards manufactured by **ADVANCE TABCO** are designed to facilitate drainage of utensils and wares after rinsing. **ADVANCE TABCO** does not recommend drainboard surfaces be used for food preparation. Do not use bleach or harsh chemicals when cleaning. Consult factory regarding unusual applications.

18"-24" and 30" No-Splash Drainboards

Contents:

- (1) No-Splash Drainboard
- (2) Drainboard Support Braces or (2) Galvanized Legs with Adjustable Plastic Bullet Feet (36" & 48" Units only)
- (1) Angle Bracket
- (2) 5/16" - 24 x 1/2" Socket Set Screws
- (2) 1/4" - 20 x 3/8" Slotted Truss Screws
- (2) 1/4" - 20 Hex Nuts
- (2) 5/16" - 24 Hex Nuts
- (3) 10 -24 Nyloc Hex Nuts

Tools Required:

- | | |
|-----------------------|------------------------|
| 7/16" Open End Wrench | Flat Head Screw Driver |
| 3/8" Open End Wrench | 5/32" Allen Wrench |
| 1/2" Open End Wrench | |

Step 1:

Remove 2 Set Screws from gussets on desired side of sink which No-Splash Drainboard is to be attached (Illustration 1). Install longer 1/2" Set Screws & tighten (Illustration 2).



Illustration 1



Illustration 2

Step 2:

Install Support Braces (2) to No-Splash Drainboard using 1/4" - 20 x 3/8" screws and nuts provided (Illustration 3).

NOTE: Longer flange attaches to drainboard.



Illustration 3

Step 3:

- A) Position No-Splash Drainboard onto Budget Sink (Illustration 3a).



Illustration 3a

- B) Align hole at bottom of Support Brace with 1/2" Set Screw (Illustration 3b).



Illustration 3b

- C) Attach 5/16" - 24 Hex Nut and tighten (Illustration 3c).



Illustration 3c

