
Under Cabinet Installation

Installation
Tutorial Video

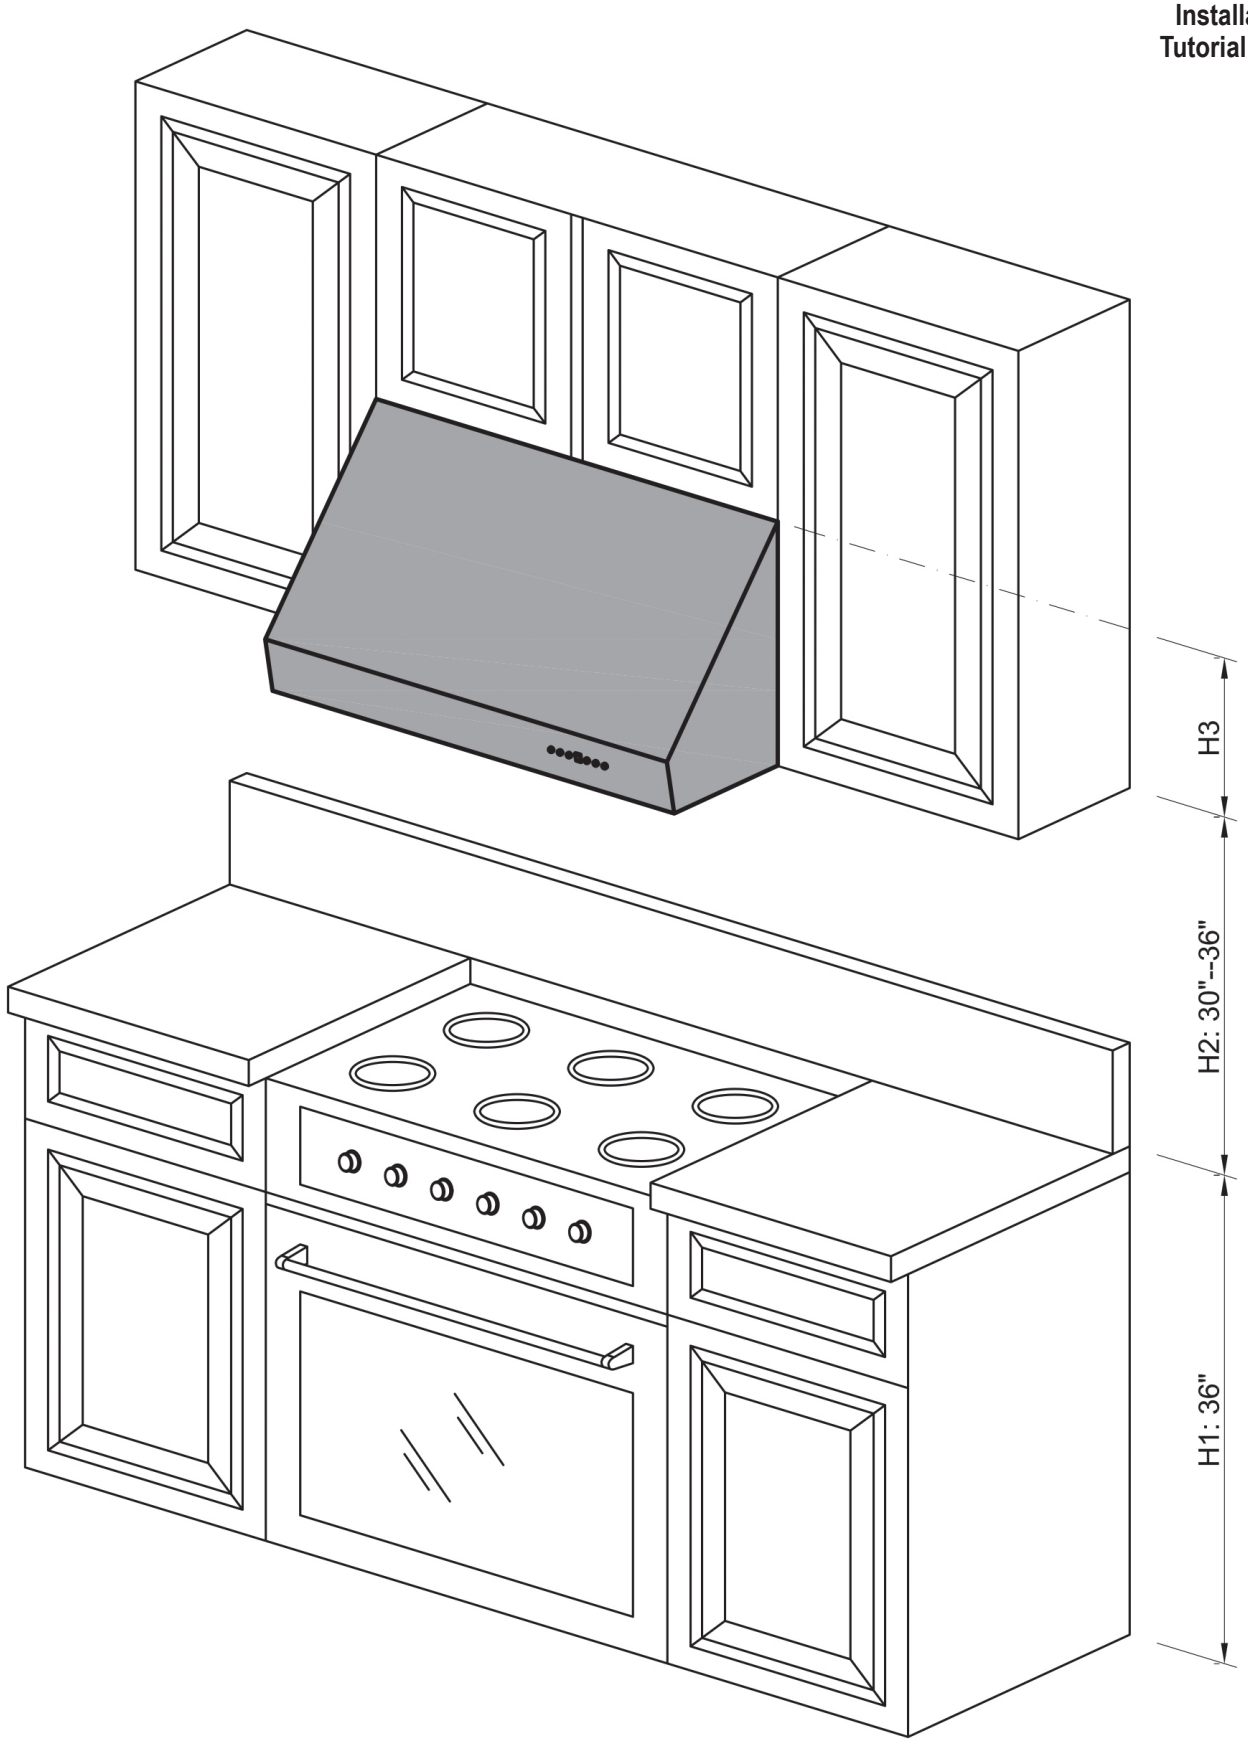


Under Cabinet Installation

Preparation


- **Decide the location of the venting pipe from the hood to the outside.**
- **Check hood for clearance.**
- **A straight, short vent run will allow the hood to perform more efficiently.**
- **Try to avoid as many transitions, elbows, and long runs as possible. This may reduce the performance of the hood.**
- **For installing under the cabinet with recessed bottom, attach 4-inch wide wood filler strips (not provided) on each side.**
- **Puncture the knockout holes (for mounting under the cabinet) on the hood.**

1. Measure the distance between stove top and the bottom of the range hood. A distance of 30″ to 36″ is recommended.

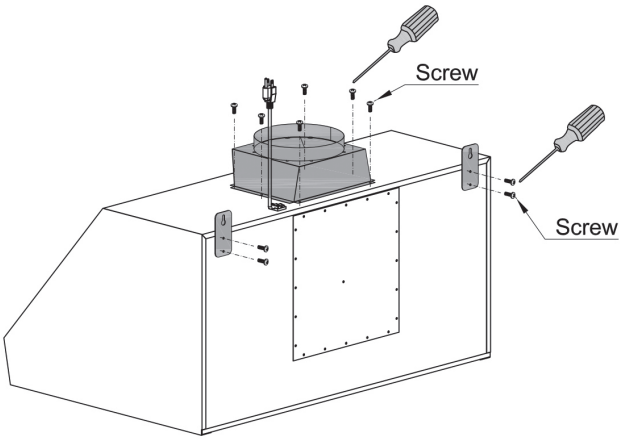


2. Attach mounting brackets to the back of the hood.

3. Mark the leveling point of the hood. Position two mounting screws on the wall, leaving ⅛″ space away from the wall. **Make sure that you are mounting the hood to a secure backing to hold the weight of the hood.**

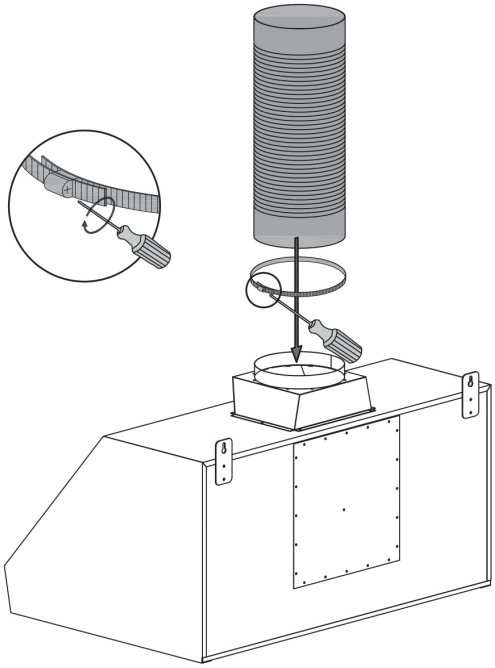


4. Tighten ducting (provided) with the hose clamp provided. Use silver or duct tape wherever needed.

5 Draw electrical wires through cabinet access opening, center the hood beneath the cabinet.

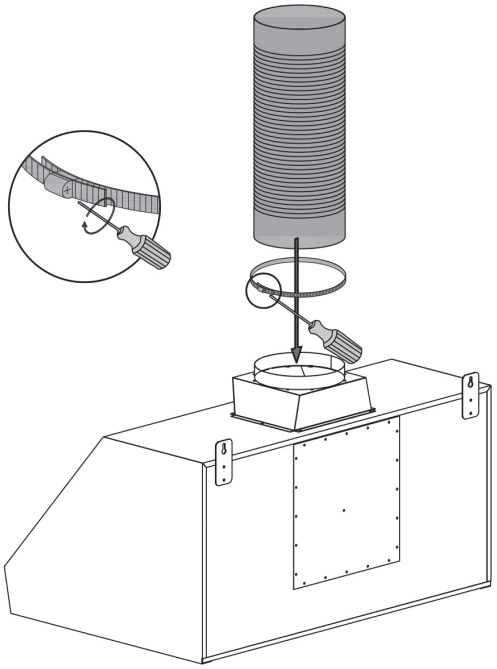

6 Align hood-mounting brackets to the screws on the wall and hook hood into place. Tighten screws to secure hood to the wall.


7 Connect ducting.

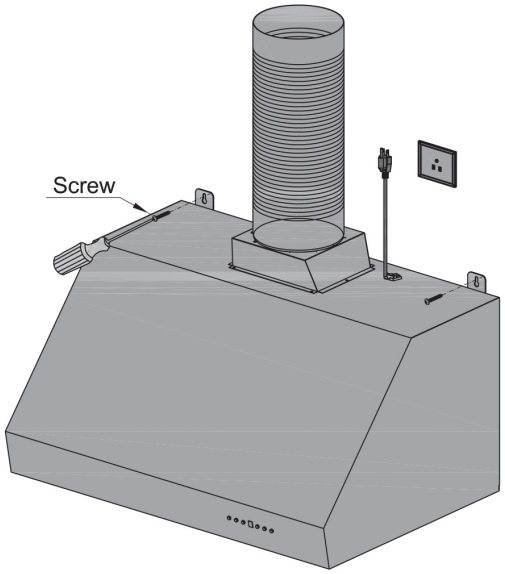


Undercabinet Recirculating Kit


Step 1: Open package, locate all neccessary hardware. Included should be 4 screws with 4 washers.

Step 2: Line up the recirculating kit with the top of the range hood.

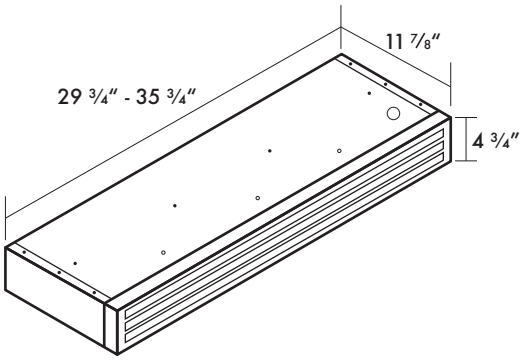

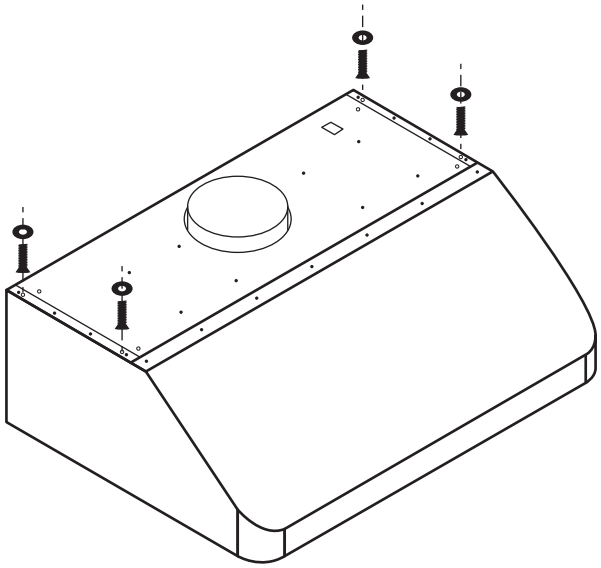

Step 3: Secure the recirculating kit with the provided screws. Once secure, begin tightening each screw until the recirculating kit is flush with the range hood.

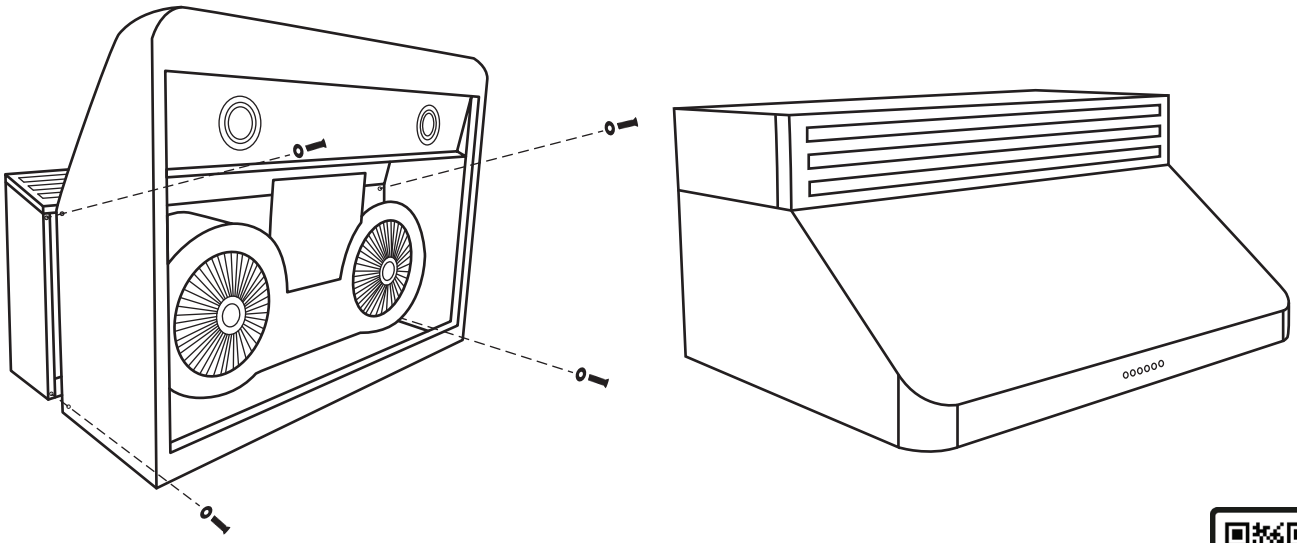

Step 4: Install undercab per range hood installation guide.

Scan me

No time to read?
Scan for a quick video.