

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.
SAVE YOUR BOX AND ALL PACKING MATERIALS.
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.




4 shelf unit shown assembled

Parts List

<u>description</u>	<u>quantity</u>
• shelf.....	*
• split sleeves pack.....	*
• hardware pack containing:	
leveling bolts	four (4) per pack
threaded bolts	four (4) per pack
• upper post half	four (4)
• lower post half.....	four (4)

* quantity of 4 or 5, dependent on kit ordered

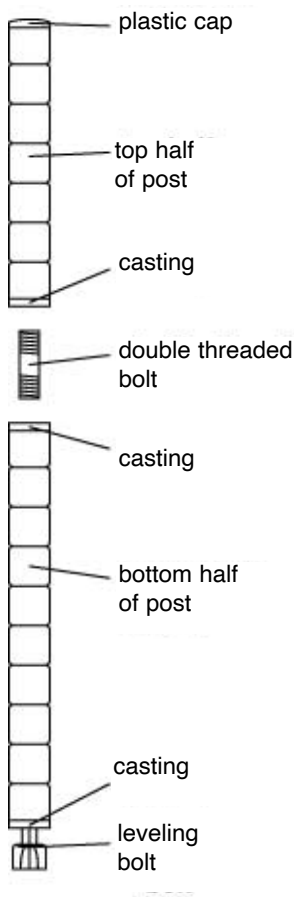

RediPak® post w/ components shown

Post Assembly

1. Unpack carton to confirm amount and identity of components.

2. Lower post

Take the lower post half (lower post half has a casting assembled to both ends) and screw one threaded rod into the top and one leveling bolt into the bottom.

3. Upper post

Take the upper post and screw it into the threaded rod of the lower post half. Ensure there is a secure fit between the two posts.

4. Repeat Steps 2 and 3 for the remaining posts. When all posts are assembled, follow the shelving assembly instructions to assemble the shelving unit.

(continued on back page)

EG9832 Revised 06/23

RediPak® Shelving

ASSEMBLY INSTRUCTIONS

Shelving Assembly

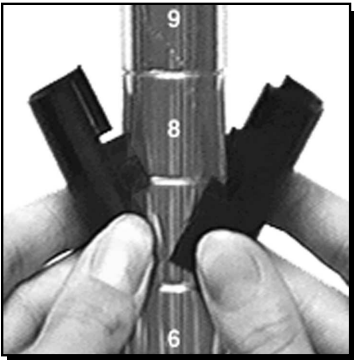


fig. 1

1. Mount first shelf.

- Referencing numbers on posts, snap plastic tapered split sleeves onto each post at desired location of bottom shelf. The thicker part of the taper goes toward the bottom (fig. 1). Make sure rib on split sleeve is seated into a groove on the post.

Note: The number covered by the split sleeve indicates approximate height of shelf.

- Holding the first shelf on its side, insert the posts through the corner collars until split sleeves are seated snugly with collars (fig. 2).
- Stand the unit upright.

2. Mount additional shelves.

- Snap split sleeves onto post at the location for the second shelf.
- Lower shelf onto the post until the split sleeves are snugly seated within corner collars (fig. 3).
- Repeat for each additional shelf working from the bottom to the top.

3. Securely seat all shelves

by placing a board across the corners and tapping with a hammer (fig. 4). **Caution: Do not hammer directly on wire or corner.**

Helpful hint: Large installations are easier if all posts are marked first.

Lay posts on floor with leveling bolts against a wall or straight edge.

Mark all posts using a magic marker or grease pencil (fig. 5).

4. Move the unit

to the desired location, and level. The leveling bolts allow approximately ½-inch adjustment.



fig. 2

(End)



fig. 3



fig. 4

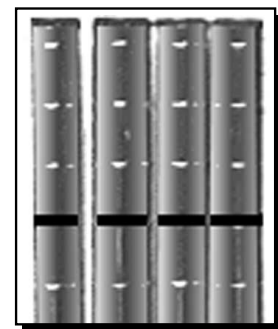


fig. 5