

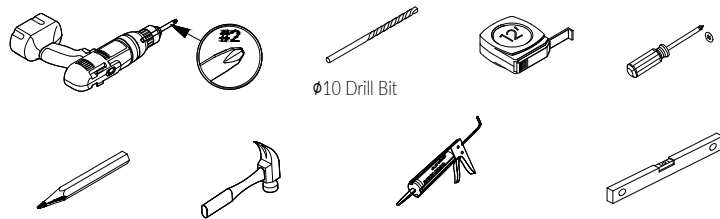
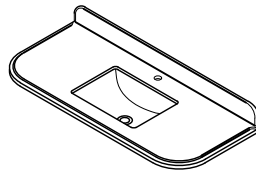
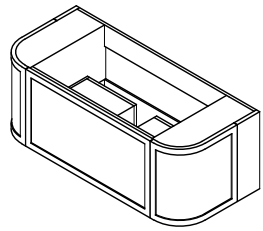


TURNER HASTINGS

Evara Curved Wall-Hung Vanity

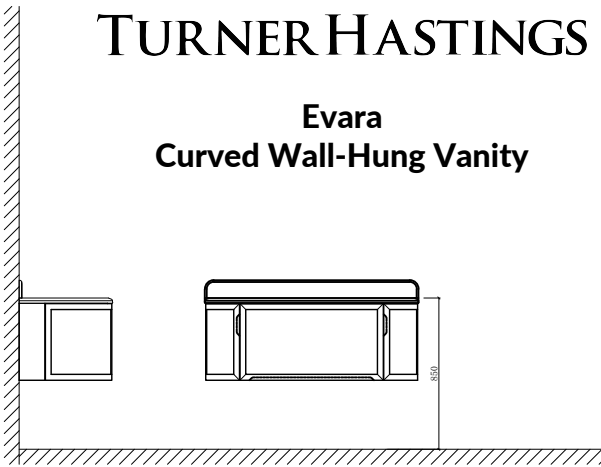


Tools required for installation

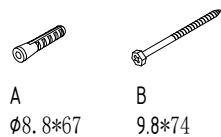


Parts required for installation

1

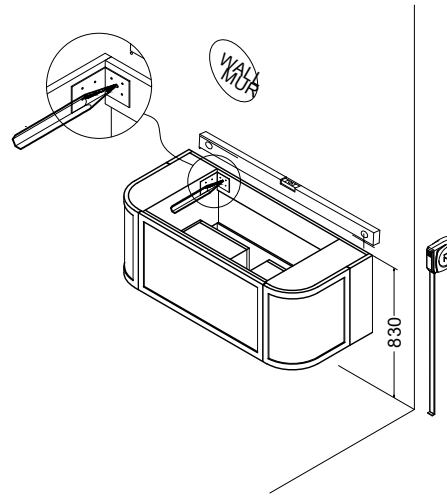


1. Carefully unpack the cabinet, measure the corresponding position on the wall, and mark the place for drilling holes. (The recommended height of the counter-top from the ground is generally 850mm, cabinet 830mm.)

2

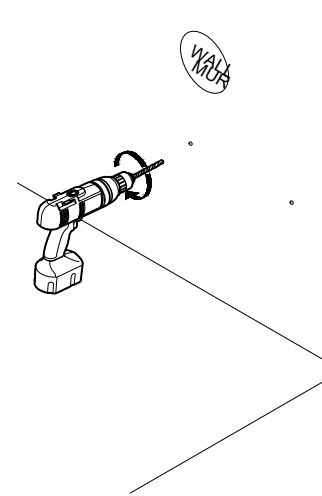


2. Drill the holes of Ø10*75 at corresponding positions on the wall.

3

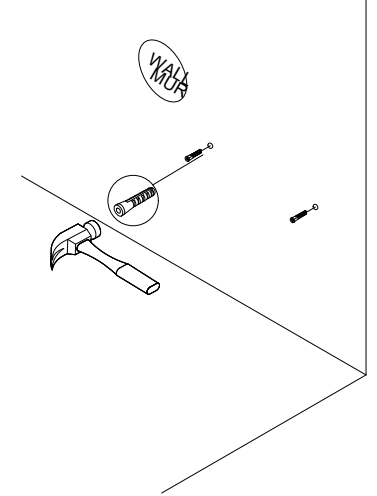


3. Use a hammer to drive the expansion beads into the drilled holes.

4

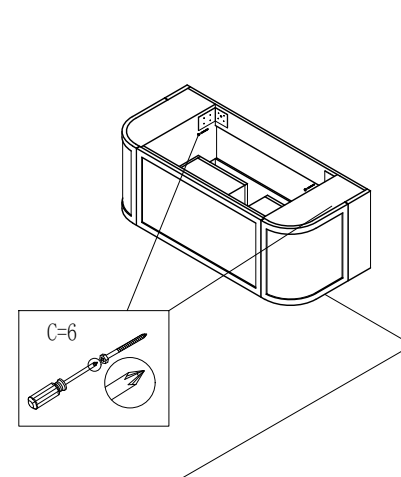


4. Lift the bathroom cabinet (it is recommended to do this by two people), align it to the corresponding holes, and screw the screws into the wall with screwdriver. Confirm that the cabinet is securely fixed.

5

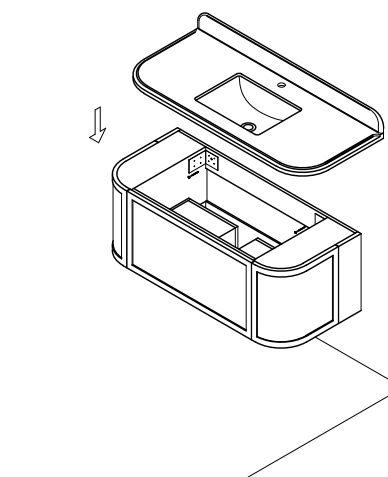

5. Install tapware and tap and waste.

6

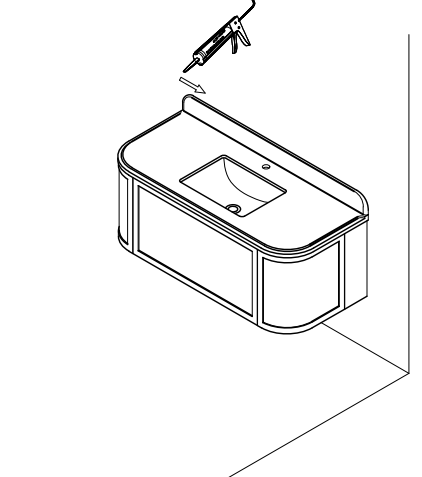

6. Seal the countertop and the wall behind the countertop with silicone sealant, and connect the water inlet pipe and the drain pipe properly.