

Slanted Shelf / Suture Cart / Merchandising Cart

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Parts List

4-Shelf Unit:

- (4) 54" Posts
- (4) Wire Shelves
- (2) 3-Sided Trusses
- (6) Rails
- (4) Casters
- (16) Split Sleeves

5-Shelf Unit:

- (4) 63" Posts
- (5) Wire Shelves
- (2) 3-Sided Trusses
- (8) Rails
- (4) Casters
- (20) Split Sleeves

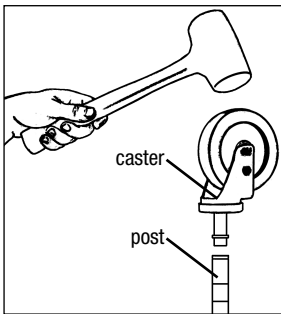


figure 1

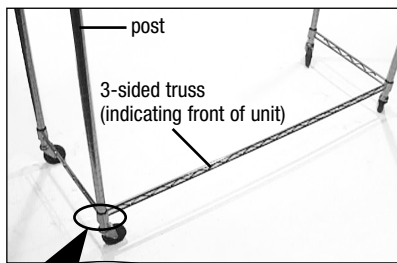


figure 2

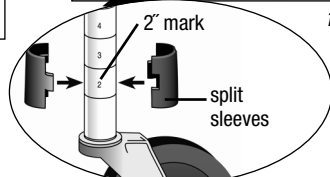


figure 2a

Step 1)

Attach casters to posts.

Insert caster into bottom of each post and drive in, using a mallet or hammer, as shown in *figure 1*.

Step 2)

Install bottom 3-sided truss.

- a. Posts are numbered in 1" increments. Snap split sleeves onto each post at the 2" mark as shown in *figure 2a*. The thicker part of the taper goes toward the bottom. Make sure rib in split sleeve is seated into groove on post.
- b. Insert post through the collars of the 3-sided truss, and slide the truss down to the split sleeves. The wider part of the collar goes toward the bottom.

Note: Long truss of bottom 3-sided truss indicates the FRONT of the unit.

Step 3)

Install rails, working from bottom to top.

- a. Assemble one rail at a time. Refer to *figure 3* for location of split sleeves and rails. Snap split sleeves onto number on each post (2 sets of split sleeves per rail).
- b. Insert post through the rail collars and slide rail down to split sleeves. Make sure the wider part of the collar goes toward the bottom.
- c. Repeat *Steps 3a* and *3b* to assemble all rails. Refer to *figure 3* for location of split sleeves and rails.

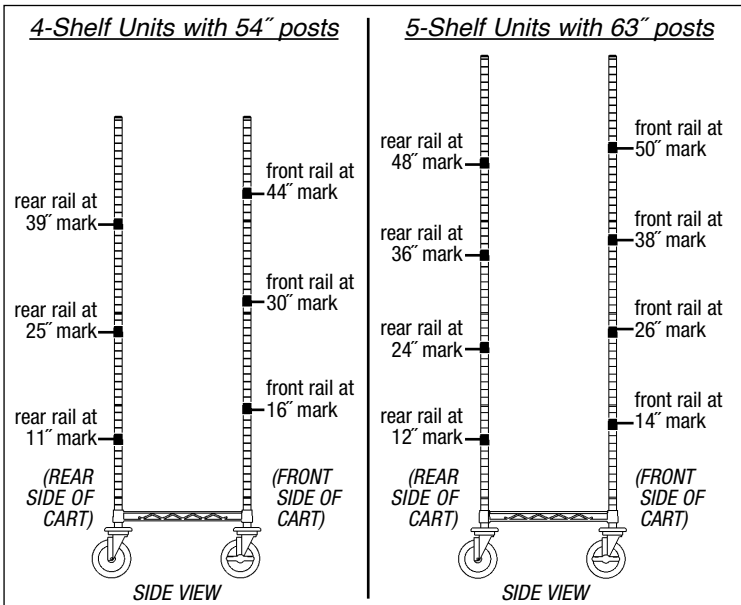


figure 3

(continued on back page)

EG9802 Revised 03/24

Slanted Shelf / Suture Cart / Merchandising Cart

ASSEMBLY INSTRUCTIONS



figure 4

Step 4)

Install top truss.

- Snap split sleeves onto each post, as shown in *figure 4* for location of split sleeves and top 3-sided truss.
- Position top truss OPPOSITE of bottom truss.
- Insert posts through truss collars and slide truss down to split sleeves. The wider part of each collar goes toward the bottom.

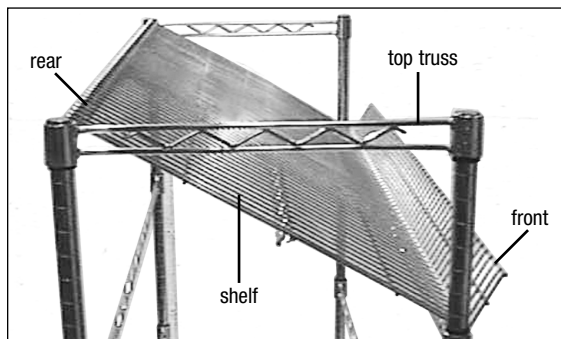


figure 5

Step 5)

Install shelves.

Note: Large upturn on shelf is located on the front of the unit.

- Start with the bottom shelf. Hook shelf downturn over bottommost rear rail.
- Rest front of shelf on front of bottom truss. Shelf should be approximately at a 30° angle, as shown in *figure 5*.
- Repeat *Steps 5a* and *5b* to assemble all remaining shelves.

Note: Downturn of topmost shelf should hook over top truss, as shown in figure 5.



Cart assembly is complete.

Dividers

(if ordered model with dividers)

Step 1) To assemble the dividers, locate the two bottom tabs, as shown in *figure 6*. Place divider on shelf with front tab of divider pointing toward the front upturn of shelf.

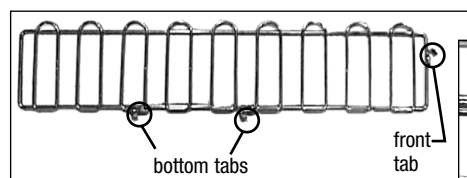


figure 6

Step 2) Pull divider toward the front of the shelf. Both bottom tabs should catch the wire shelf, as shown in *figure 7*.

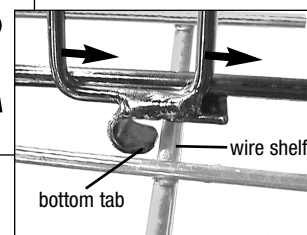


figure 7

Step 3) Clip the front tab over the wire shelf, as shown in *figure 8*.


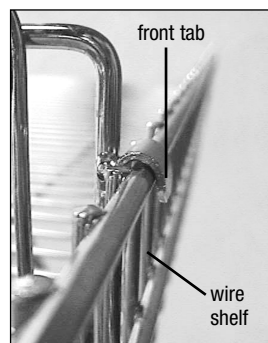


figure 8



cart with dividers

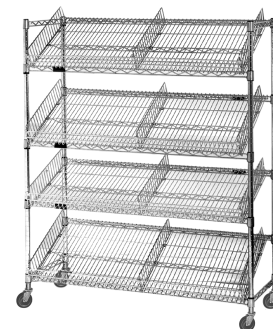

Divider assembly is complete.

Attach as many dividers as desired to finish cart assembly (see photo at right).



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 • 800/441-8440 • Fax: 302/653-2065
- www.eaglegrp.com • www.eaglehmc.com