

## INSTALLATION INSTRUCTIONS



### Notes

#### Read this instruction carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

All mirrors are asymmetrical design for better view range.

For vehicles without factory heat and signal light functions require an additional wiring.

Power fold/Memory/Auto-Dimming functions are not available.

If missing parts or any damage found, please take a picture and contact us.

Reference the vehicle owner's manual to adjust the new mirrors.


Carefully check all mirrors functions before first drive.

For vehicles with memory and tilt functions please disable functions on vehicle's driver information center.

## INSTALLATION INSTRUCTIONS

### Step 1:


1. Open the front door to remove the upper extension triangular trim panel.
2. Remove the foam pad form door sheet panel.
3. Disconnect mirror connector.
4. Remove (3) 10mm hex nuts securing the factory mirror.

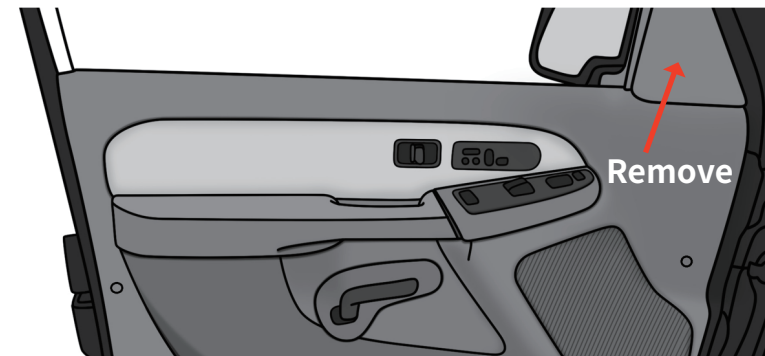

### Step 2:

1. Take the new mirror, feed studs through the holes on door panel.
2. Connect mirror connector.
3. Install (3) provided hex nuts to secure the new mirror. Torque to **80 lb in.**
4. Insert the foam pad into the door sheet and reinstall the upper extension triangular trim panel.

### Reference Wire Diagram:

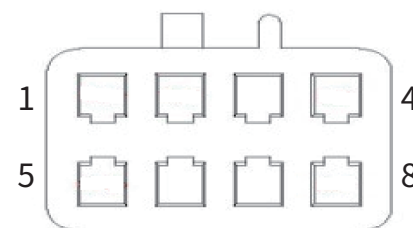

1/2/5: Mirror Motor  
3: Not Used  
4/8: Mirror Heater  
6-7: Not Used