
Parrot Uncle


D3018

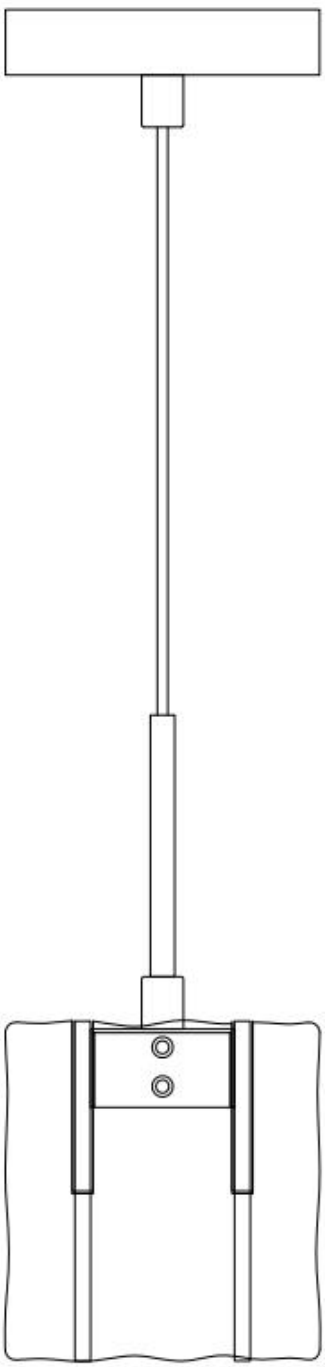

English / Español / Français


www.parrotuncle.com

D3018

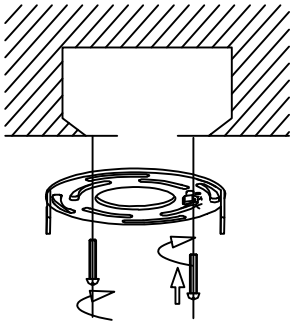


①


Install the bracket on top of the box

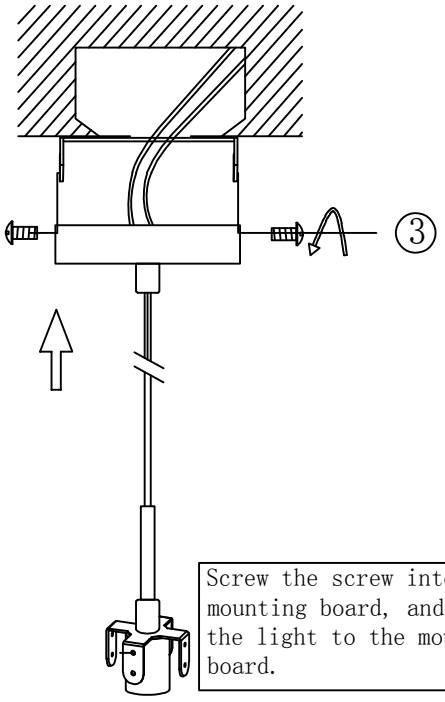


Screw the screw into the mounting board, and secure the light to the mounting board.

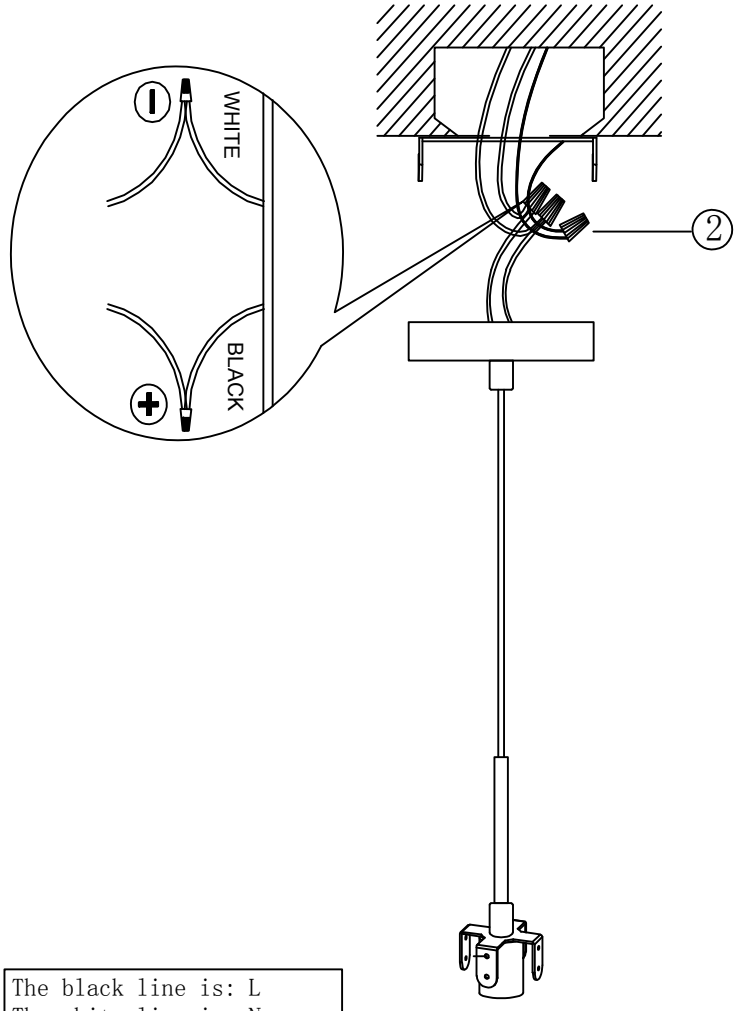


The black line is: L
The white line is: N
The yellow and green lines are: grounding wires

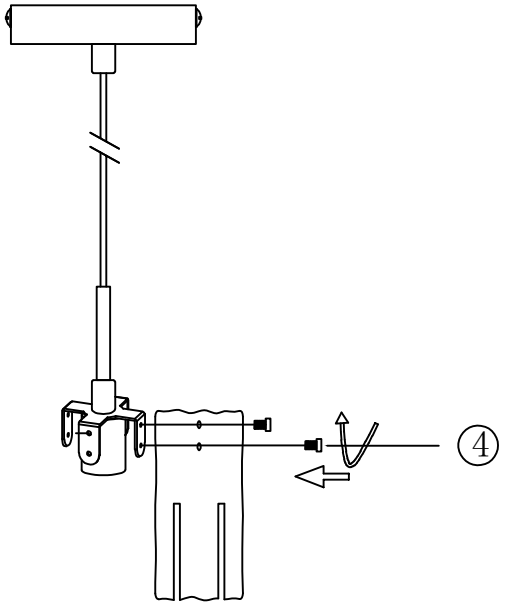

Secure the glass plate to the frame with screws.

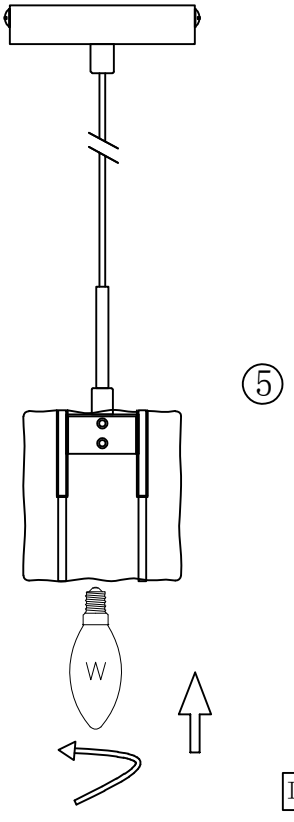

Installing bulb

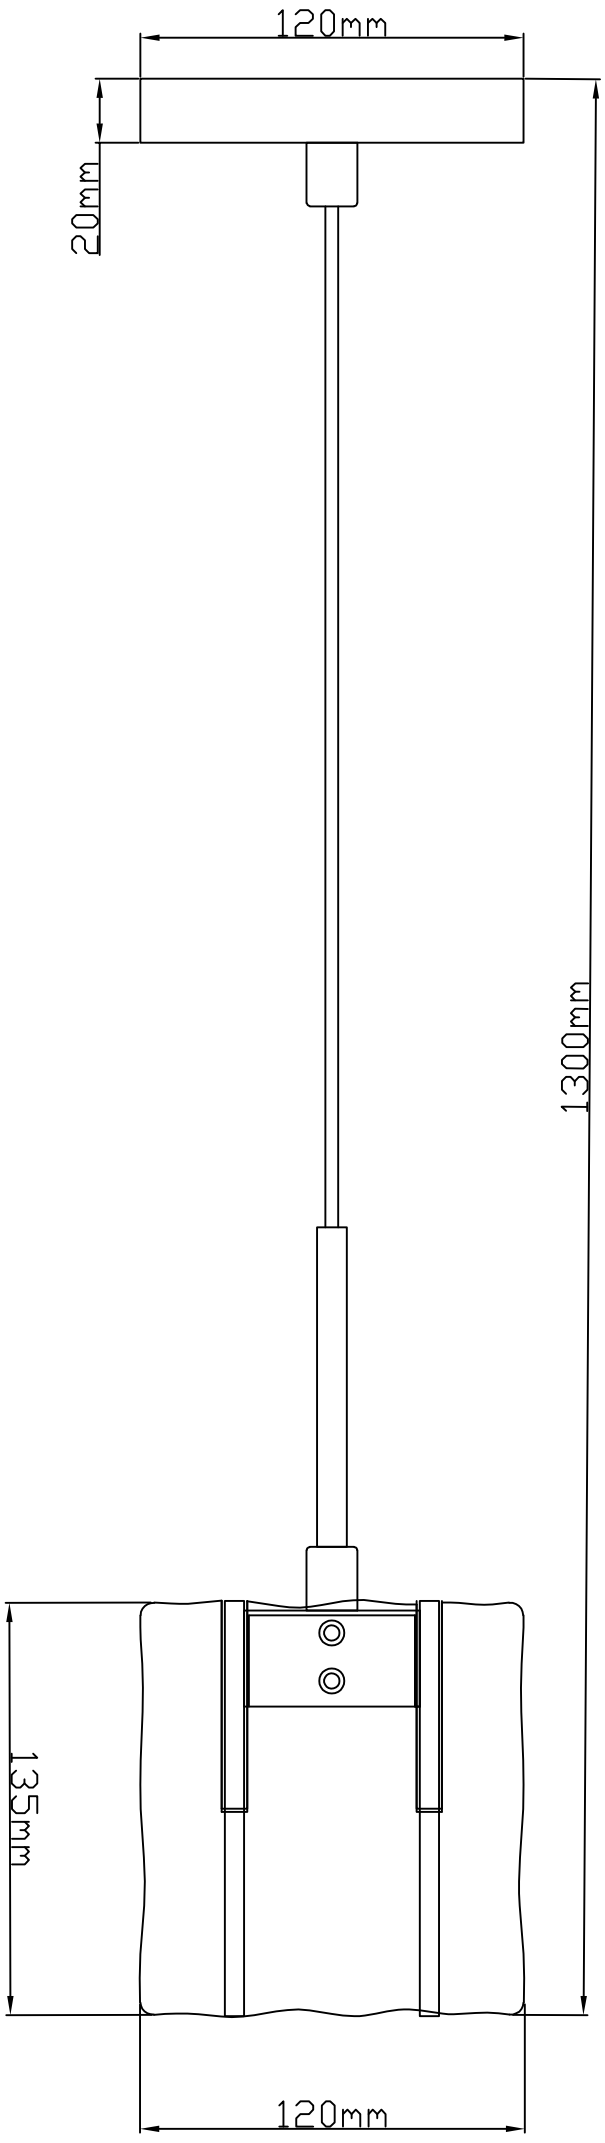
120mm
20mm
1300mm
135mm
120mm



Parrot Uncle

MADE IN CHINA