

#P1916 Pedestal Mount Hand Sink

ASSEMBLY INSTRUCTIONS

For #W1916 Wall Mount Hand Sink, see reverse page.



CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.


Step 1 - Attach z-bracket to wall.

- Mark a plumb line from the bottom of the z-bracket at 36" above finished floor.
- Level z-bracket and assemble to wall (hardware not included).


Note: Position z-bracket so that the holes are closer to floor, as shown.

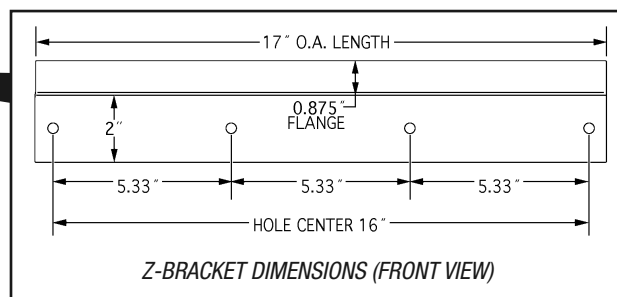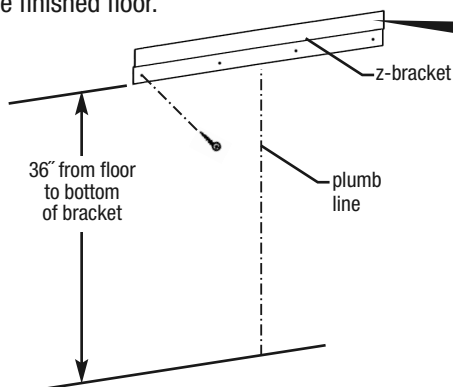


Step 2 - Hang sink onto z-bracket.

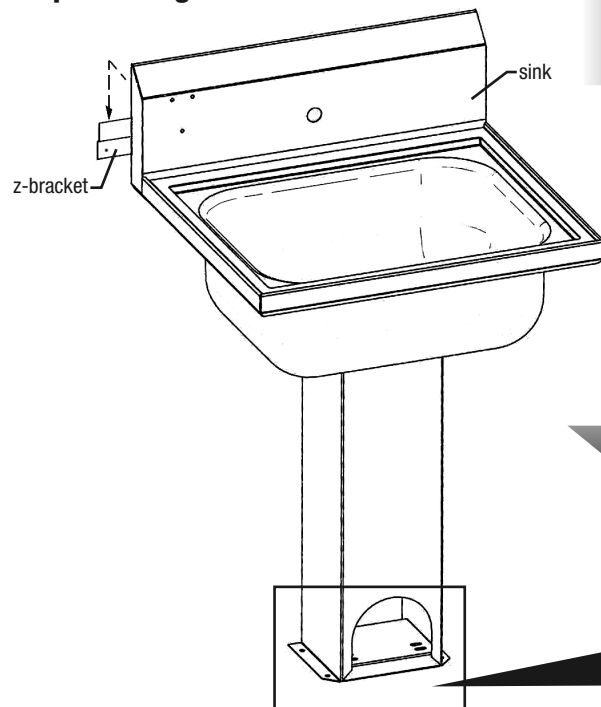

Step 3 - Secure sink to wall.

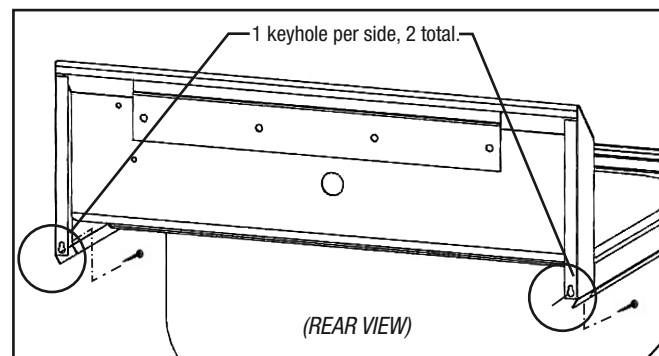

Step 4 - Secure pedestal to floor.

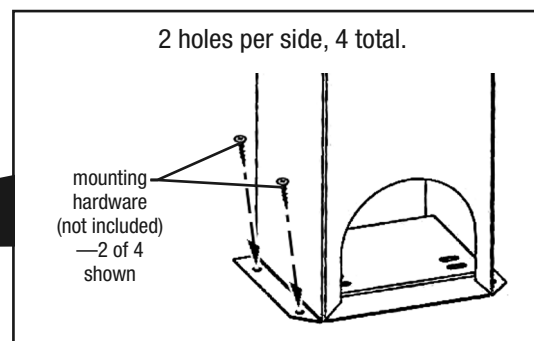

(End)

EG9946 Revised 01/24

#W1916 Wall Mount Hand Sink

ASSEMBLY INSTRUCTIONS

For #P1916 Pedestal Mount Hand Sink, see reverse page.



CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Step 1 - Attach z-bracket to wall.


- Mark a plumb line from the bottom of the z-bracket at 36" above finished floor.
- Level z-bracket and assemble to wall (hardware not included).

Note: Position z-bracket so that the holes are closer to floor, as shown.

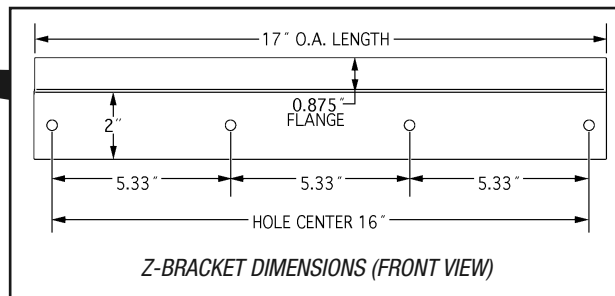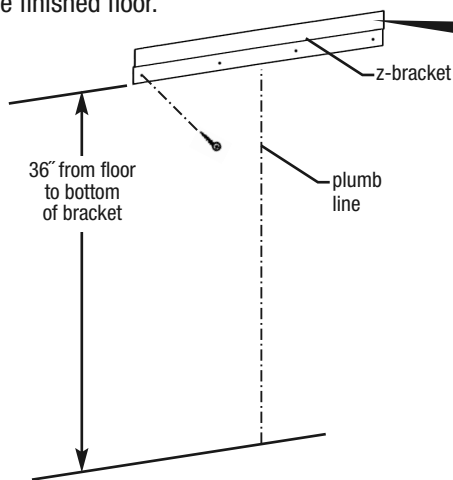


Z-BRACKET DIMENSIONS (FRONT VIEW)

Step 2 - Hang sink onto z-bracket.

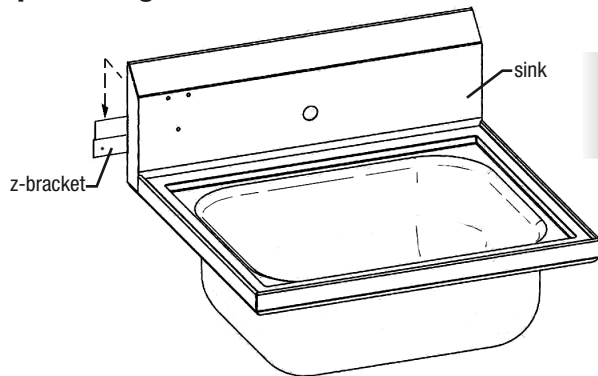

Step 3 - Secure sink to wall.

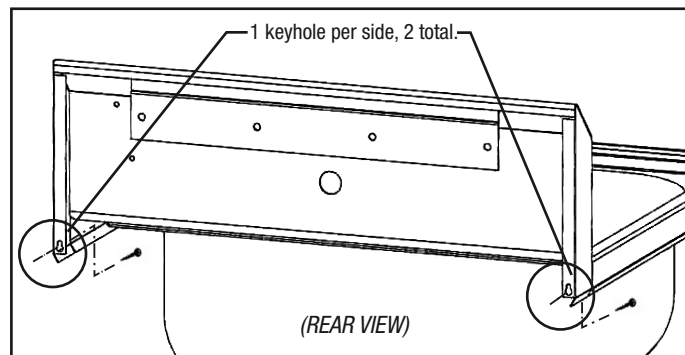

(End)