


封面

180*240mm

Nilight LED Off-road LED Light Bar Wiring Harness

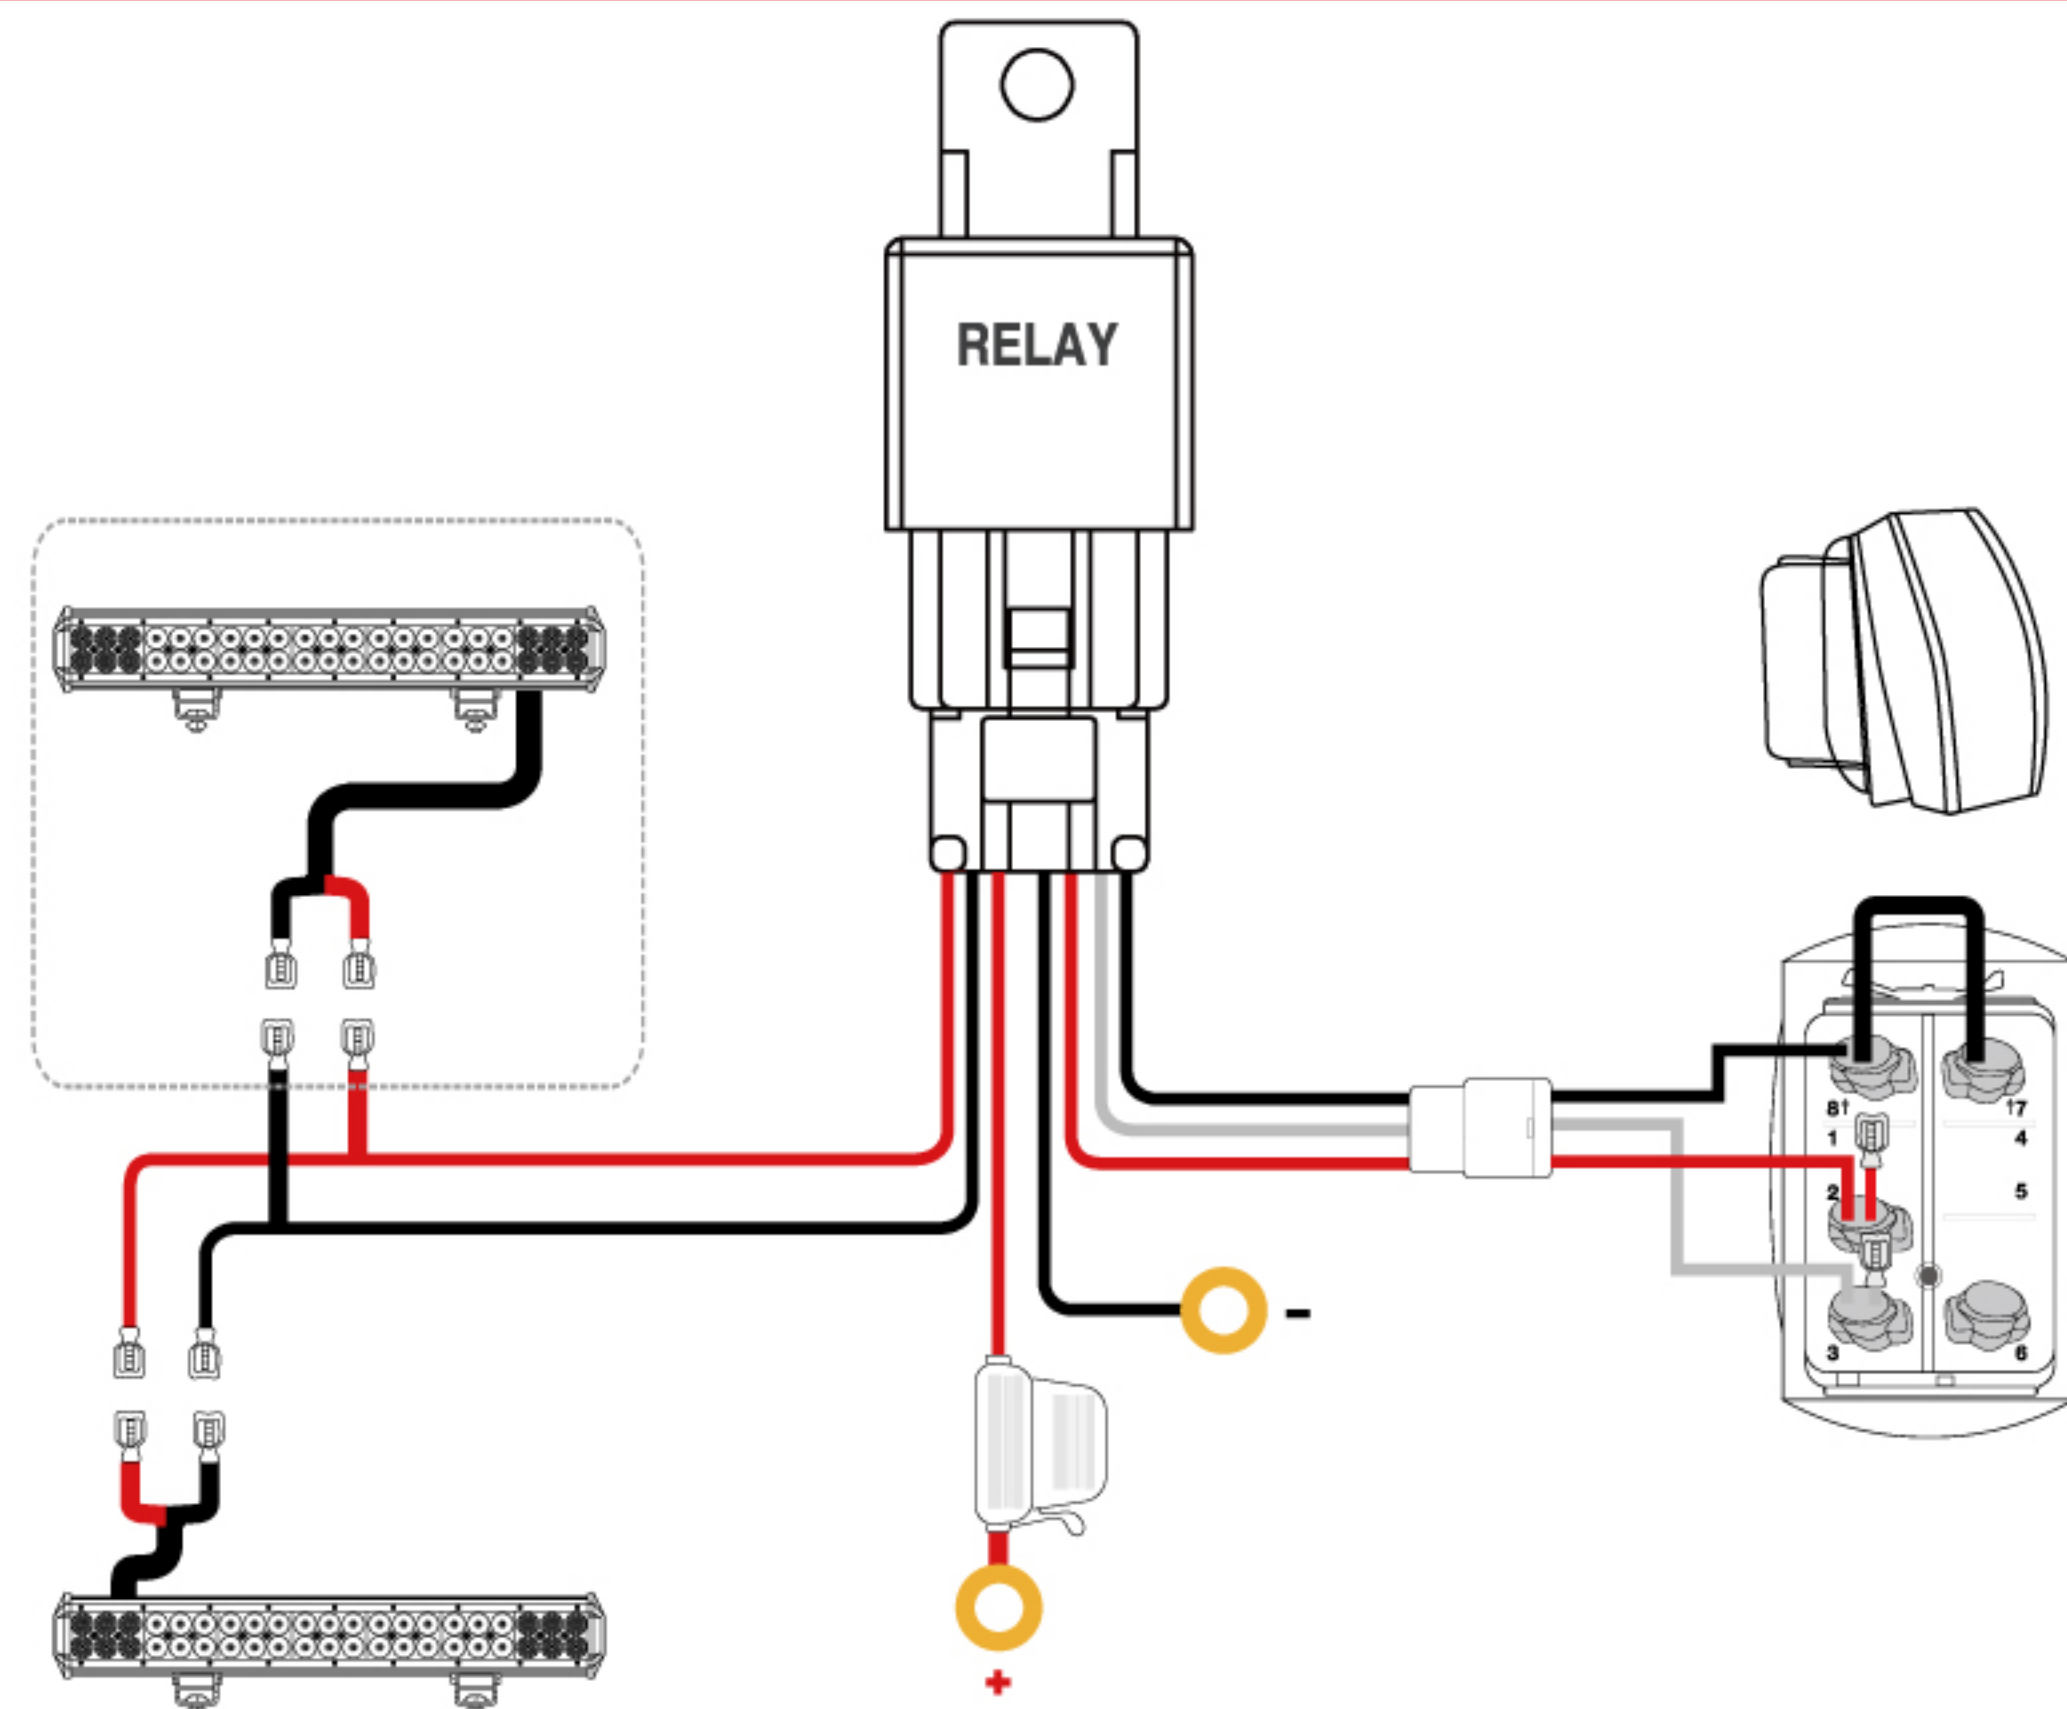

Installation:

1. Connect light bar wires to wiring harness terminals respectively, black to black, red to red.
2. Run rocker switch wires through switch cutout/opening in the dash. Connect the 5-pin rocker switch with wiring harness. 2 methods of connection, please refer to the instruction on the below page.
3. Connect wiring harness to the car battery. Red wire (+) with fuse to positive, black wire(-) to negative
4. Turn on the power and press switch on/off to test the light.

Caution:

1. The operating voltage is 12V DC. 16AWG: Max. Wattage 180W/ 14AWG: Max. Wattage 300W / 12AWG: Max. Wattage 450W
2. Please make sure all the exposed wires were securely wrapped by electrical insulating tape to prevent short circuit.
3. Please strictly follow the instructions to avoid any hazards. If you do not feel comfortable with the installation we recommend having a professional to install or install under his guidance.


封底

Last Step: Complete the 5-Pin Rocker Switch Connection

Note: The above 5-Pin rocker switch connection is not completed yet, please select either one of the following methods to complete:

Wiring Method: A

Connect **red** jumper wire from 2 to 6
(Lower indicator light will turn on when the key is turned on)

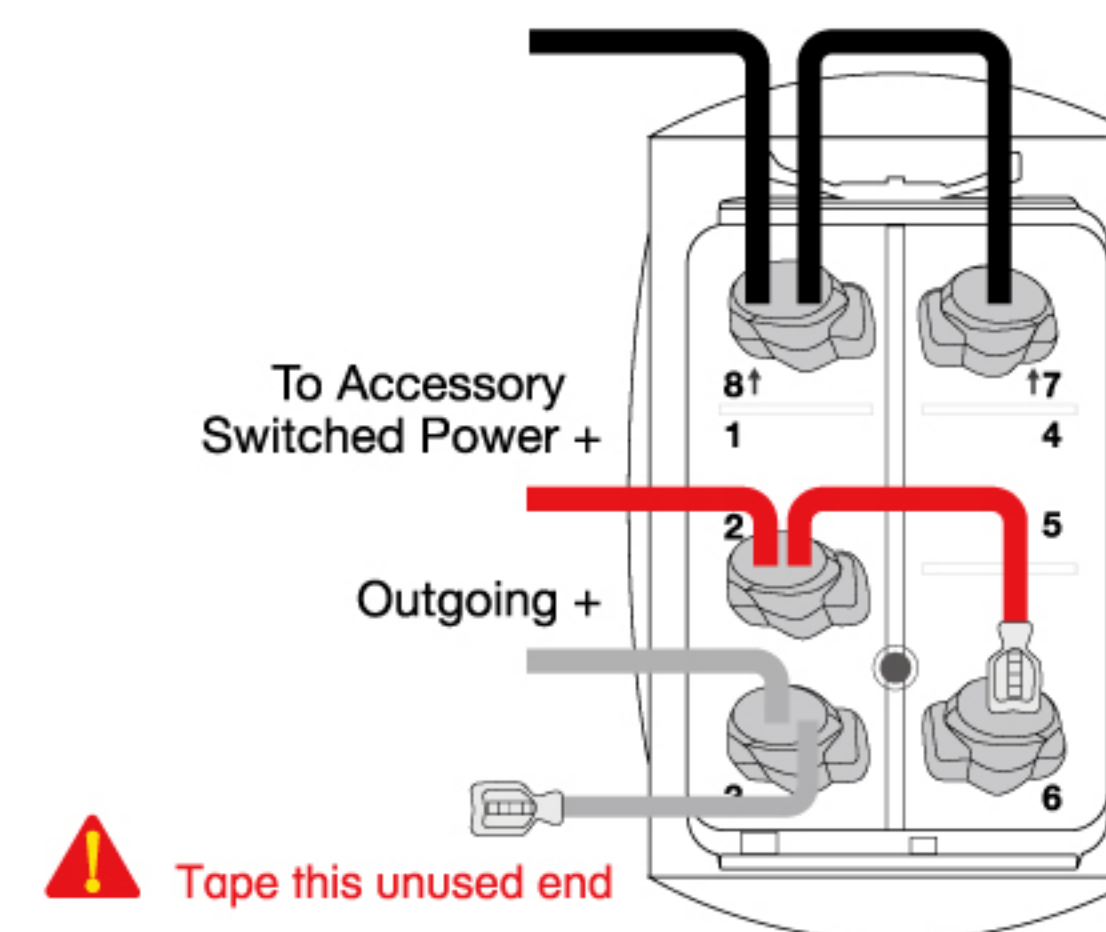


PIN-TAB OUTS:

- 8- Upper Light Neg. (-)
- 2- Incoming from power source
- 3- Outgoing to relay, accessory or equipment

Wiring Method: B

Connect **white** jumper wire from 3 to 6
(Lower indicator light will turn on only when the switch is turned to the on position)

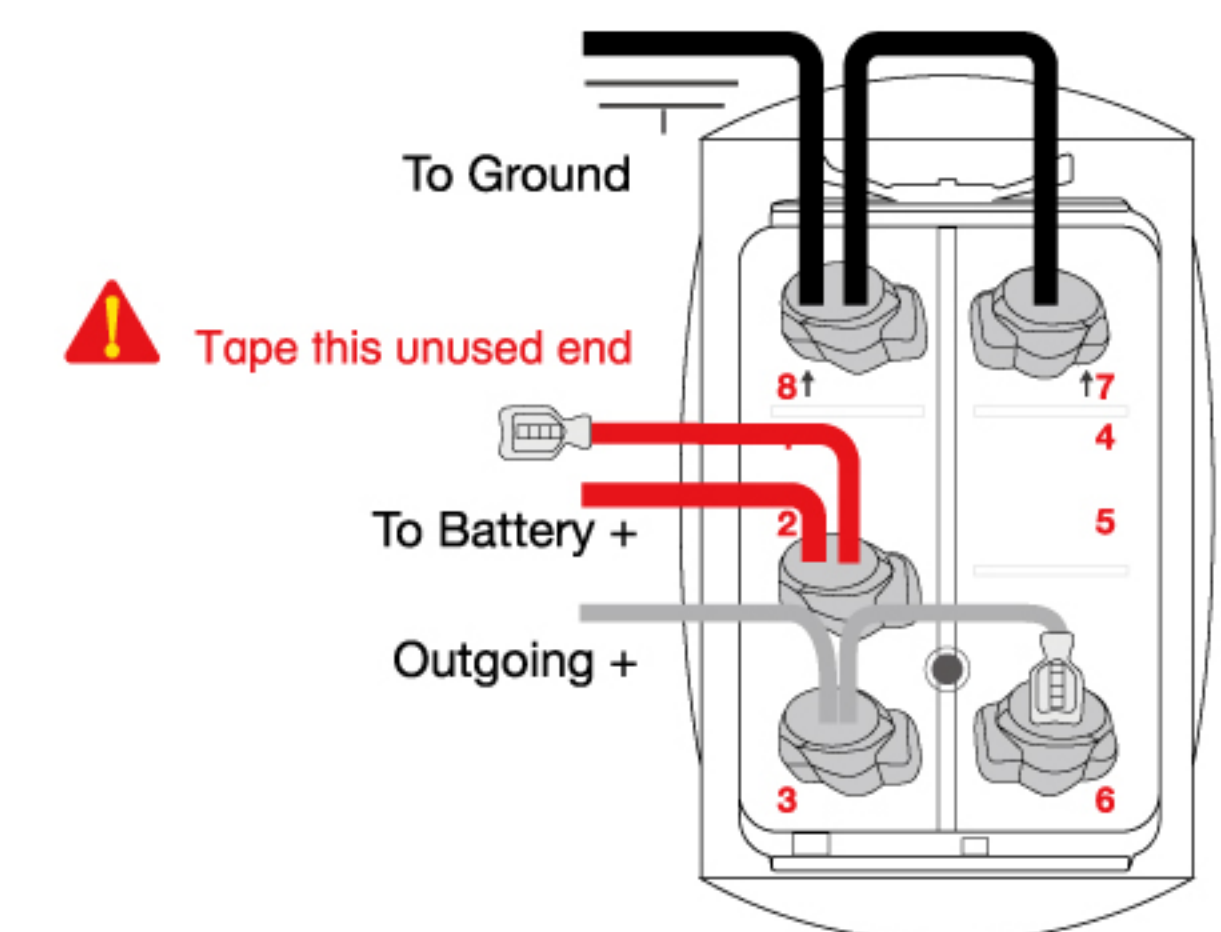

IMPORTANT:

Tape ends of any unused wire connections to ensure no shorts occur.

Need Help?



nilight.com/pages/contact



If you're having an issue with the product or need technical support, Nilight team is always here to help and make sure your

100% satisfaction.

► Scan QR code to contact us

Nilight