

SPEAKER MOUNT INSTRUCTION MANUAL V1

PGSM07



Thank you for choosing this Perlegear product. We strive to provide you with the best quality products and service in the industry. If you have any installation questions or issues with the product, please contact us at the number below.

BEFORE GETTING STARTED, LET'S MAKE SURE THIS MOUNT IS COMPATIBLE

1

Verify Wall Type

Wood Studs (with Drywall)

Drywall

Solid Concrete

?

Unsure?

Contact us

✓

Min: 8" (203mm)
Max: 24" (610mm)

Perfect

✓

Perfect

✓

Perfect

2

Tools Needed (not included)

Electric Drill

Pencil

Phillips Screwdriver

Tape Measure

For Wood Stud Walls

Stud Finder

Awl

1/8" (3mm)
Wood Drill Bit

For Drywall

Hammer

5/16" (8mm)
Drywall Drill Bit

For Solid Concrete

Hammer

3/8" (10mm)
Concrete Drill Bit

3

Important Safety Information

⚠ CAUTION:



Avoid the risk of personal injury or property damage!

- This product is designed for installation on wood studs, drywall, and solid concrete. Do not install on any other wall types.
- The wall must be capable of supporting four times the weight of the equipment and mount combined.
- For wall installation, tighten the lag screws only until they are pulled firmly against the bracket (DO NOT overtighten). Do not use a drill; only use a Phillips screwdriver.
- This product contains small parts that may pose a choking hazard.
- Do not use this product for any purpose that is NOT explicitly specified in this manual. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
- Before starting assembly, verify that all parts are included and undamaged. Do not use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.
- This product is only suitable for **SONOS ARC SOUNDBAR**.

WARNING:

All fasteners must be firmly tightened!

02

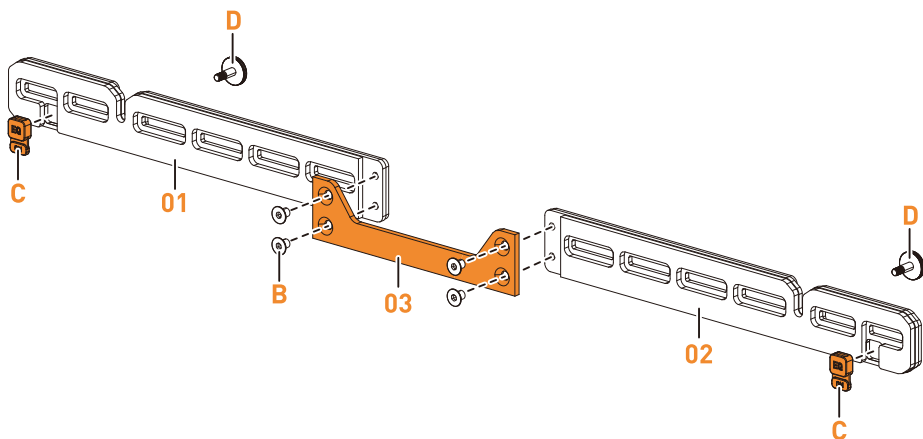

- | | | | |
|----|-------------------|---|-----------|
| 01 | Bracket | B | Bolt |
| 02 | Bracket | C | EQ Magnet |
| 03 | Connecting Plate | D | Knob |
| 04 | Drilling Template | E | Allen Key |
| 05 | Level | | |

Supplied Parts and Hardware for Step 1



Bracket
01 x 1



Bracket
02 x 1



Connecting Plate
03 x 1



M6 x 8mm Bolt
B x 4



Allen Key
E x 1

Supplied Parts and Hardware for Step 2




Drilling Template
04 x 1



Level
05 x 1



M6 x 50mm Lag Screw
A1 x 4



Drywall Anchor
A2 x 4

⚠ CAUTION!
This anchor is for drywall ONLY. DO NOT use them in solid concrete or wood studs.



Wall Anchor
A3 x 4

⚠ CAUTION!
This anchor is for solid concrete ONLY. DO NOT use them in drywall or wood studs.

Supplied Parts and Hardware for Step 4




EQ Magnet
C x 2



Knob
D x 2

INSTALLATION

STEP 1 Connect the Brackets

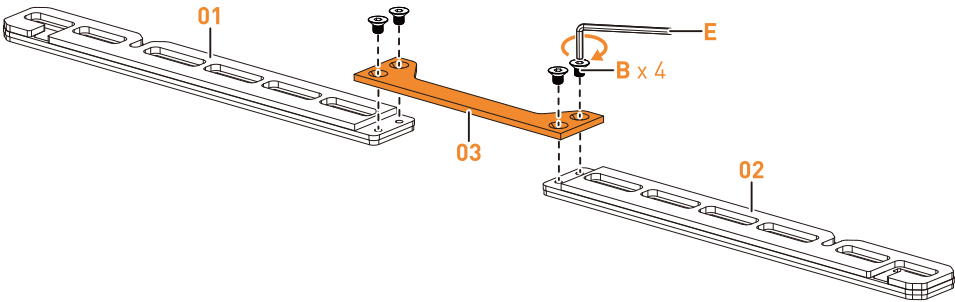



STEP 2 Mount the Bracket on the Wall

For mounting on wood stud walls, go to Option A on page 05 to 07.

For mounting on drywall, go to Option B on page 08.


For mounting on solid concrete, go to Option C on page 09.

⚠ Note: If the soundbar is mounted below the TV, ensure there is a 5.5" (140mm) clearance between the TV and the bracket.

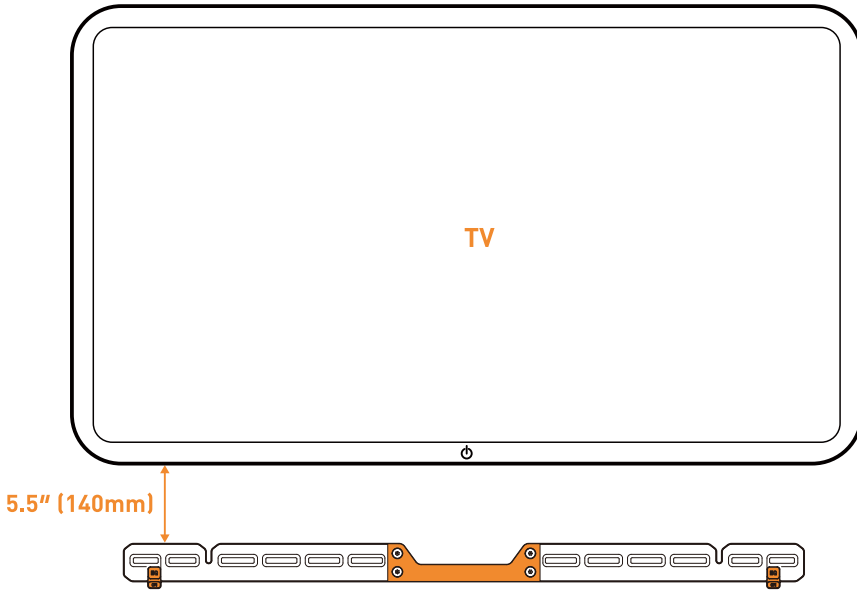


Option A: For Wood Stud Installation

- For 8" / 12" / 16" wood studs, go to page 06
- For 24" wood studs, go to page 07

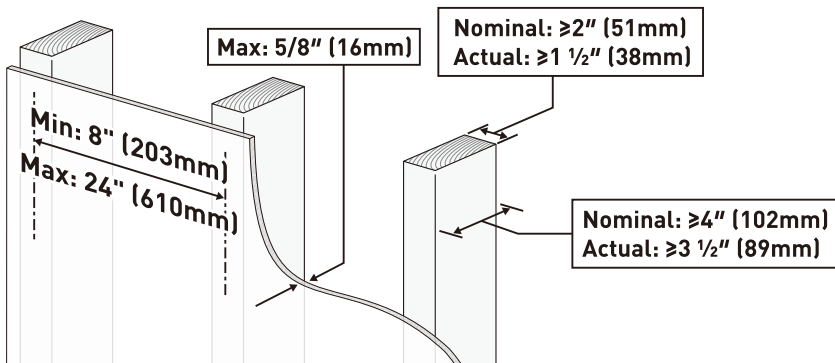


For 8" / 12" / 16" wood studs


1

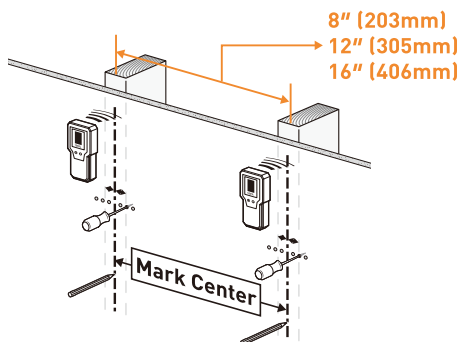

Find Studs and Mark Holes

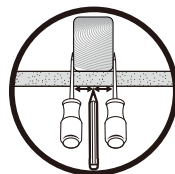


2

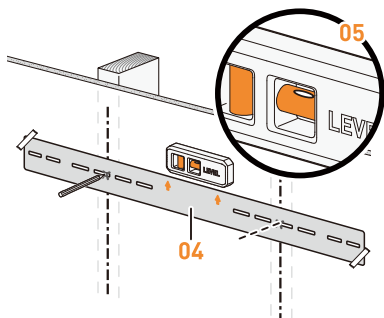


Mark 2 Hole Positions


3

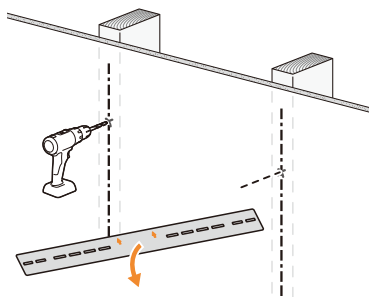



Drill 2 Holes

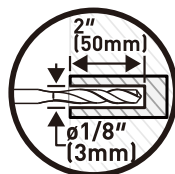

4

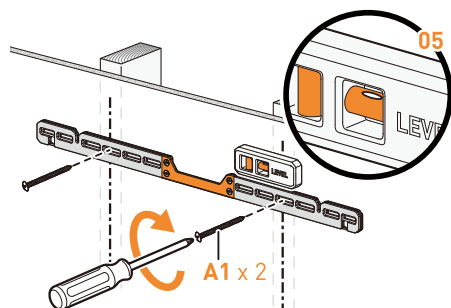


Secure the Bracket

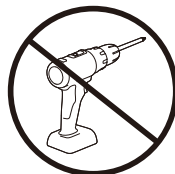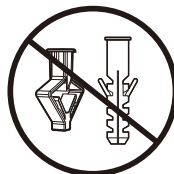


For 24" wood studs


1

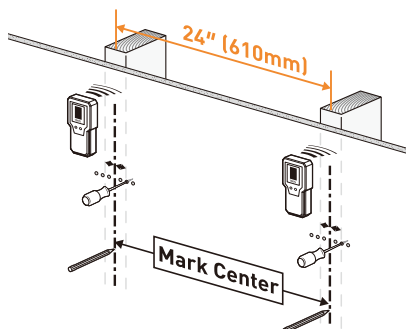

Find Studs and Mark Holes

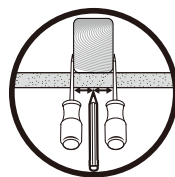


2

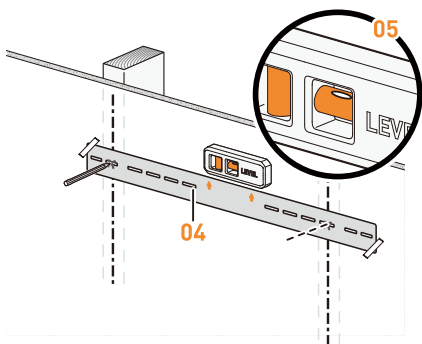


Mark 2 Hole Positions

⚠ Note: Follow the asymmetrical hole pattern on the template.


3

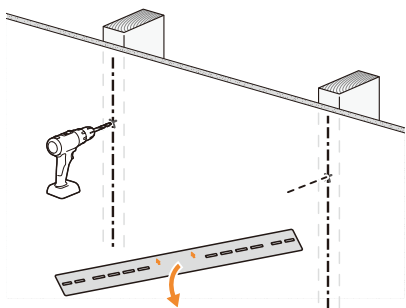


Drill 2 Holes

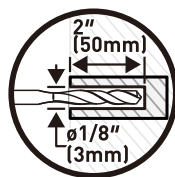

4

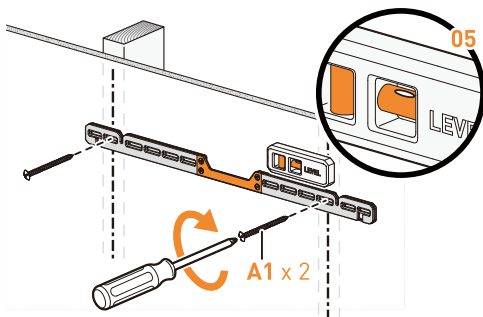


Secure the Bracket

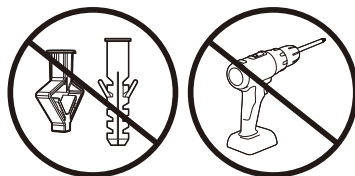


Option B: For Drywall Installation

1

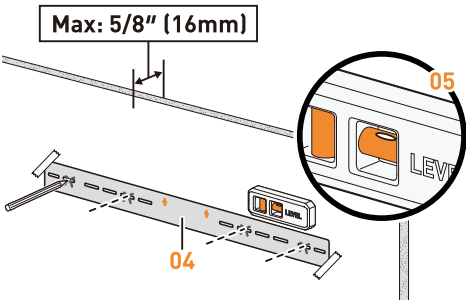


Mark 4 Hole Positions


2

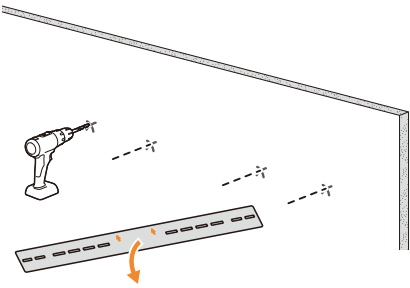


Drill 4 Holes

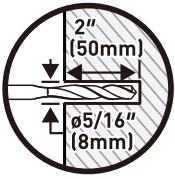


3

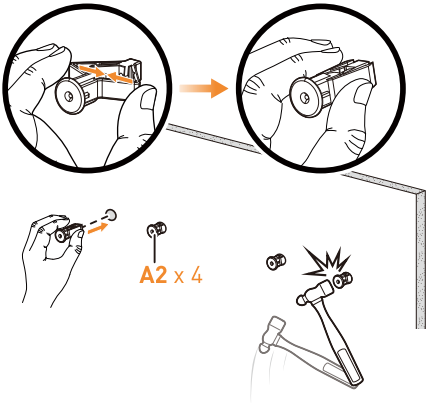

Tap Wall Anchors In

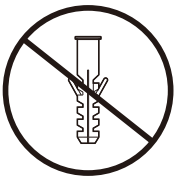

4

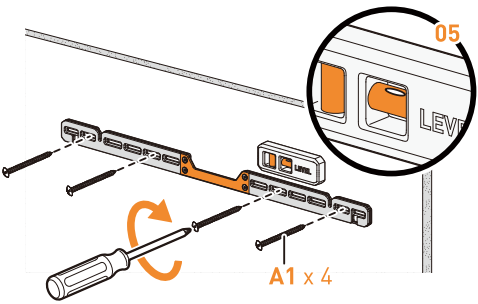


Secure the Bracket




Option C: For Solid Concrete Installation

1

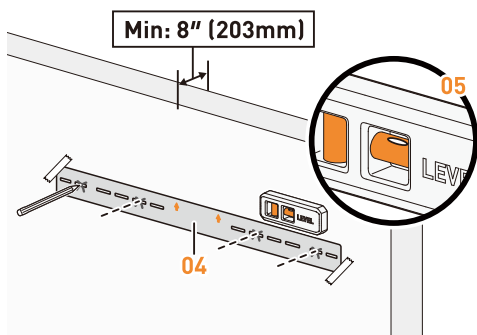


Mark 4 Hole Positions


2

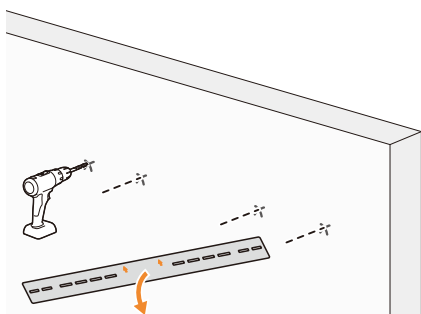


Drill 4 Holes

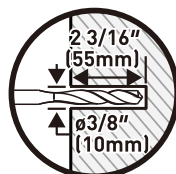


3

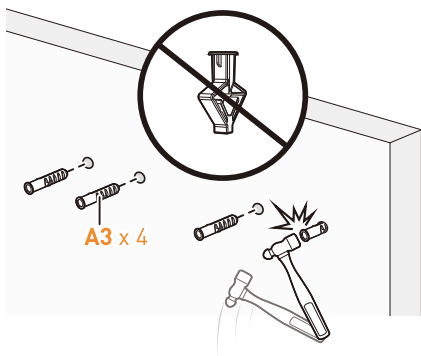


Tap Wall Anchors In

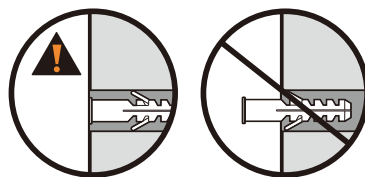




4

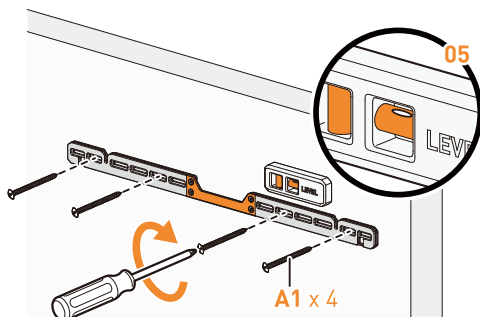

Secure the Bracket

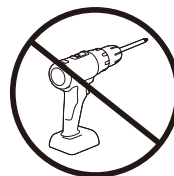

STEP 3 Verify the Bracket is Firmly Mounted

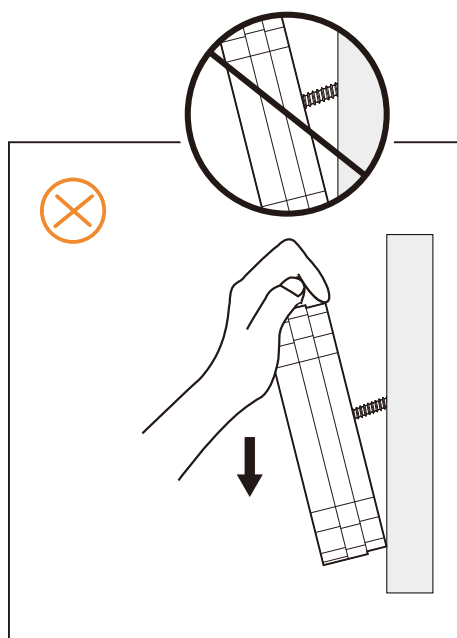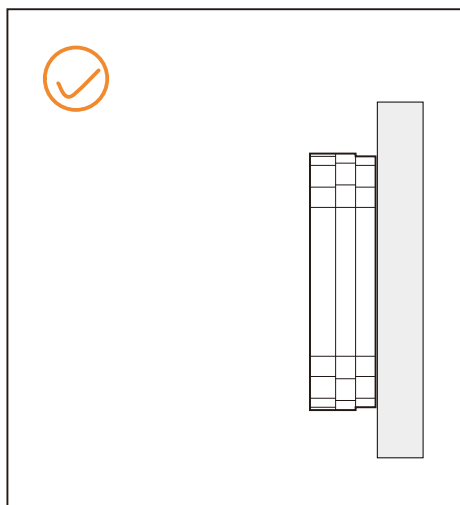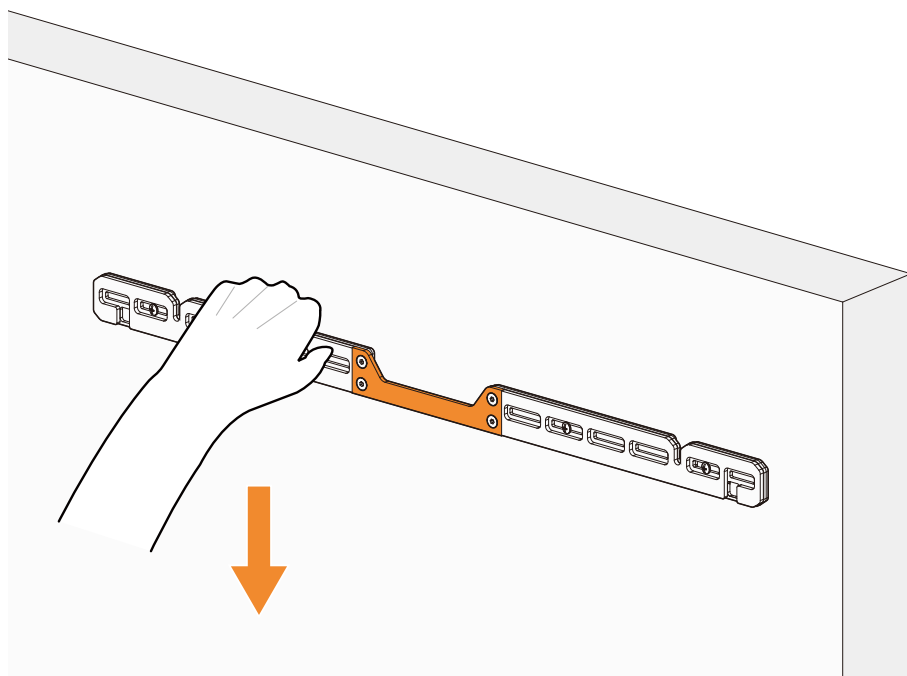

STEP 4 Install the Equipment


1




Sonos Arc will detect that it is mounted on a wall, automatically triggering the EQ function to optimize the audio output to reduce bass resonance.



Sonos Arc will not detect that it is mounted on a wall, maintaining standard audio output.

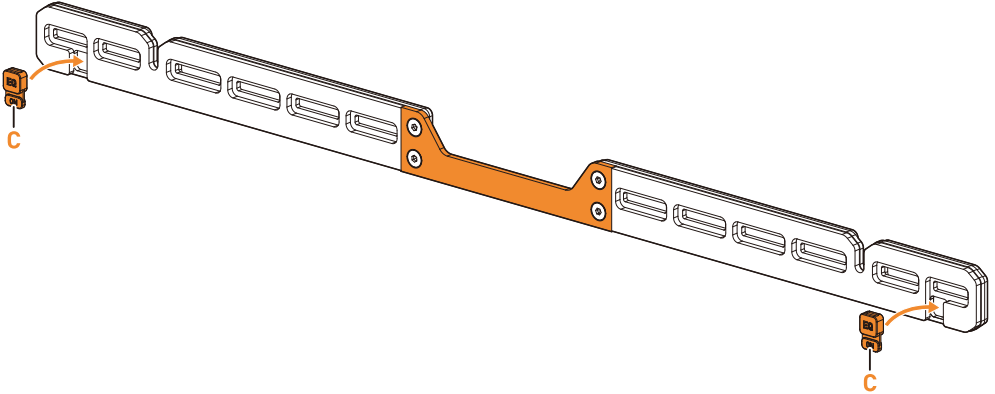


2

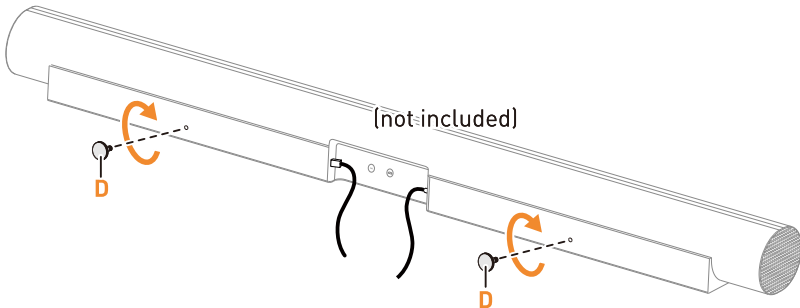

3

Tip: If the knobs are too tight to fit into the slots, slightly loosen them.

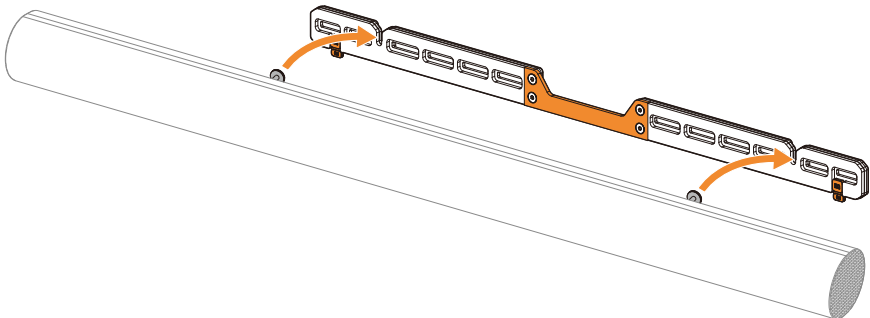

THANK YOU FOR CHOOSING
THIS PERLEGEAR PRODUCT



PERLEGEAR