

JESIMAIK



バイク用インカム
Bluetooth Headset

型番 Model H6

取扱説明書
User Manual

ENGLISH	01~27
日本語	28~55

Introduction

Thank you very much for your purchase of the JESIMAIK Motorcycle Intercom H6. Please read this instruction manual carefully before first use to ensure safe and correct operation. Please note that due to specification changes, the illustrations and content in this manual may differ slightly from the actual product. This manual also serves as your warranty certificate, so please keep it in a safe place.

CONTENTS

Main Features	01
Safety Use	02
Product Details	03
Operation List	04
Package Contents	05
Main Unit Charging	06~07
•Charging Method	06
•Power On/Off	07
Installation Instructions	08~11
•Bracket Installation	08
•Tape Bracket Installation	08~09
•Main Unit Installation	09
•Removing the Device	09
•Installation of Speaker and Microphone	10~11
Pairing	12~18
•Pairing with a Smartphone	12
•Connect with Phone Already Paired	13~14
•Pairing with Other H6 Units	14~16
•Pairing with Other Brands of Intercoms	17
•Pairing with SENA Bluetooth Headset	18
•Pairing with Cardo Bluetooth Headset	18
Listen-Talk	19~20
Music Sharing	21~22
Music Effects Function	23
FM Radio ON/OFF	23
Troubleshooting	24~25
Specifications	25
Warranty	26
FCC Caution	27

Main Features



1 User

Listening to music and making phone calls



2 Users

One-on-one intercom conversation and music sharing

Multiple Users

Group intercom conversation



Auto-Reconnect

When disconnected from the group due to obstacles or signal interference, the device will automatically reconnect once back within communication range within a short time.

Note: Actual signal range may vary significantly depending on obstacles, radio frequency environment, and riding speed.

Key Features


- Multi-person intercom with auto-recovery function
- Voice dictation & music sharing capability
- Ultra-thin speakers for reduced ear pressure
- Noise cancellation & Hi-Fi stereo sound quality
- One-touch connection to group rides
- Bluetooth 5.2 universal connectivity
- IP67 dust/water resistance for all-conditions use
- Simple operation & 12S auto-answer
- English voice prompts & voice recognition
- Built-in FM radio

Safety Use


The following symbols are used to ensure safe and effective operation. Make sure that you fully understand the meaning of the symbols before using the product correctly.

⚠ Caution	
!	Do not place the device in an extremely dusty, humid, or hot environment.
!	Do not try to disassemble the device.
!	Do not drop or knock the device.
!	Do not wipe the device with corrosive liquids.
!	Please note that the Bluetooth intercom distance will be affected by the surrounding environment.
!	To prevent electromagnetic interference/compatibility conflicts, please comply with notices posted in some places asking you to turn off the intercom.
!	Do not use the device near medical equipment. The equipment used in hospitals or medical places is particularly sensitive to external radio frequency signals, so please turn off the device.
!	Drive safely. Check the laws and regulations for the use of intercoms in the place where you drive and follow them. When using the intercom while driving, please adjust the volume to an appropriate level, concentrate on driving, and pay attention to road conditions.

Product Details

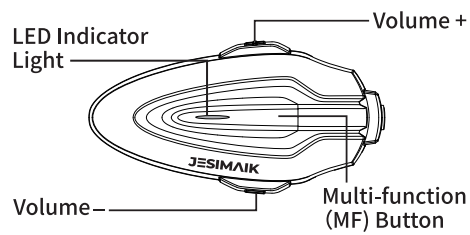

Power/Intercom Button

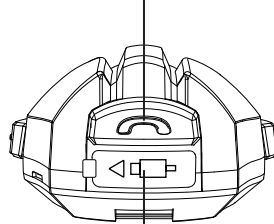

Charging Port

Notes

A slight change in the speakers position will result in a different sound

Before installing the headset, please connect the smartphone and check the audio output.

We recommend adjusting the speaker to find the clearest position and marking it for installation.

Operation List

Function	Button(s)	Operation
Power On/Off	Power Button	Press and hold for 3s
Voice Battery Check	Multi-function (MF) Button & Volume - Button	Short press once
Phone Pairing	MF Button	Press and hold simultaneously for 4~6s
Answer/End Phone Call	MF Button	Press once
Reject Phone Call	MF Button	Press and hold simultaneously for 2s
Last Call Return	MF Button & Volume + Button	Press both once
Call Volume Control	Volume +/ Volume- Buttons	Press once
Smartphone Voice Assistant	MF Button	Press twice
Auto-Answer Mode	MF Button & Volume+ & Volume-	Press all three and hold simultaneously for 5~6s
Play/Pause Music	MF Button	Press once
Previous Song	Volume + Button	Press twice
Next Song	Volume - Button	Press twice
Music Mode	MF Button & Volume+	Press both once
FM Radio On/Off	Volume + & Volume- Buttons	Press both once
Seek Up	Volume+	Press twice
Seek Down	Volume-	Press twice
Intercom Volume Control	Volume +/ Volume- Buttons	Long press
Switch Language	Power Button & MF Button & Volume+	Press all three and hold simultaneously for 5s
Clear Memory	Power Button & Volume-	Press both and hold simultaneously for 5s

Package Contents

The following is the contents of the product package. First, please make sure that everything is included in the package before using the product. If any parts are missing, please contact the retailer from whom you purchased the product.



Main Unit × 1



Boom Microphone
(for Open-face
Helmet) × 1



Button Microphone
(for Full-face
Helmet) × 1



Magnetic Mount × 1



Speakers × 1



Adhesive Tape for
Fixing Speakers × 2



Adhesive Tape for
Fixing Boom
Microphone × 1



Adhesive Tape for
Fixing Button
Microphone × 1



Type-C Charging
Cord × 1



Speaker Positioning
Pads × 2



User Manual × 1



Quick Start
Card × 1



Adhesive Mount
Tape (Red) × 1 set



Clip Mount Tape (White) × 1 set
(Prevents slipping and scratching)



Magnetic Mount Clip × 1
Rubber Ring for Mount Clip × 1


(Insert the top of the mount clip into the cover to prevent slipping during wear and avoid damaging the helmet.)

Main Unit Charging

■ Charging Method

Plug both ends of the Type-C cord into the main unit and the USB charger respectively.
This product does not include an AC adapter for charging.

Be sure to charge the battery before using the product for the first time.

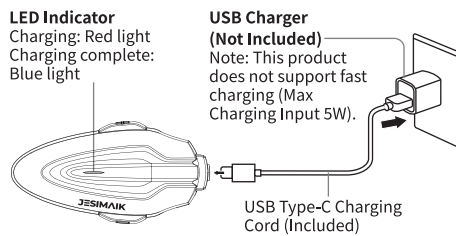

⚠ Important Notes

⚠	Be sure to fully charge the product before first use.
⚠	For optimal charging efficiency, use the included USB Type-C cable whenever possible. After use, be sure to recharge the battery before storing it.
⚠	When storing for a long period of time, recharge the battery about once a month. Make sure the battery is "charged before storing".
⚠	After charging is complete, disconnect the charger. Avoid leaving the unit connected to power for extended periods after reaching full charge.
⚠	Charge the device in a well-ventilated, dry area. Avoid humid and high-temperature environments.
⚠	To prevent fire, keep flammable materials (e.g., paper, fabric, alcohol) away from the device during charging.

■ Power On/Off


Press and hold the Power/Intercom Button for more than 3 seconds to turn the device on or off.

Notes:


1. During the initial startup, the device will enter pairing mode when powered on, and the indicator light will blink [Red ↔ Blue] alternately. It can then be paired with a smartphone or other devices. After pairing, when you turn the power on again, the indicator light will blink [Blue ↔ Green] alternately.

2. In pairing mode, press once the MF Button to pair with intercoms from other brands (※ Please ensure the other intercom is also in pairing mode).

Power On state: [Blue ↔ Green] flashes
(During initial startup: [Red ↔ Blue] flashes)

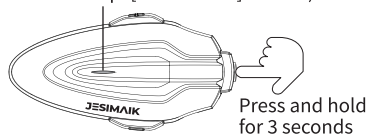

Power Off: Red light stays on and then turns off.

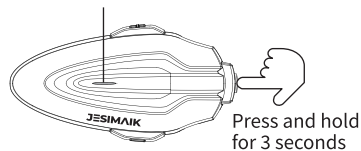



Installation Instructions

■ Bracket Installation

1. Attach the clip cover to the clip, and the clip-type tape (white) to the magnetic mount.
2. Insert the clip into the slot on the edge of the magnetic mount.
3. Open the clip of the mount and secure it firmly to the edge of the helmet.


Note: The mount component is relatively hard. Applying excessive force during installation or removal may cause damage. Please handle with care.

4. To remove the clip, press the round slot on the back of the magnetic mount while pushing the clip outward from the slot.

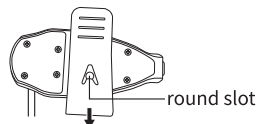

■ Tape Bracket Installation

1. Select a suitable position on the helmet, wipe the area thoroughly, and ensure the surface is clean.
2. Attach the adhesive tape (red) to the magnetic mount.
3. Peel off the tape film, align the tape on the magnetic mount with the cleaned position on the helmet, press firmly, and secure in place.

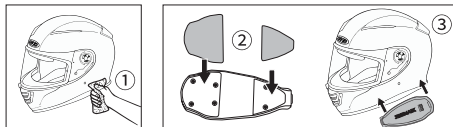

Note:


•Please thoroughly wipe the helmet surface with a damp cloth or alcohol wipe.

※Do not use strongly acidic, strongly alkaline detergents, or corrosive cleaners such as strong alcohol, as they may reduce adhesion.


•Ensure the adhesive sheet is completely dry before use. To enhance stability, wait at least 12 hours after application before installing the intercom main unit.

■Main Unit Installation

1. Bring the main unit close to the mount, and it will easily attach via magnetic force.
2. Connect the speakers and microphone to the cable ports on the mount.
3. Check that the main unit is securely installed and verify the fixation status.

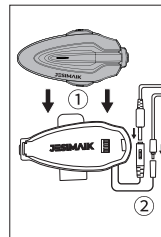**■Removing the Device**

To remove the device from the mount, press the button on the end of the mount.

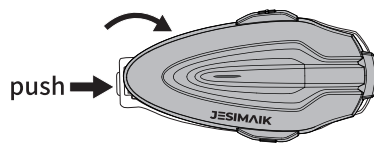


■ Installation of Speaker and Microphone

Note: Before installing this product, please connect it to your smartphone and perform a pre-use functionality test of the speaker and microphone by playing music, etc.

• Speaker Installation

1. Remove the helmet's inner padding (lining). First, this is unnecessary.
2. Route the cable into the helmet shell from behind or above the inner padding. Adjust the cable length and position to ensure it does not become disconnected during use.
3. Using the provided adhesive tape, attach the speakers to the areas near both ears inside the helmet. Ensure the installation position does not affect comfort or safety.
4. After the speaker installation is complete, reinstall the helmet's inner padding, making sure it fits snugly against the shell (outer part).

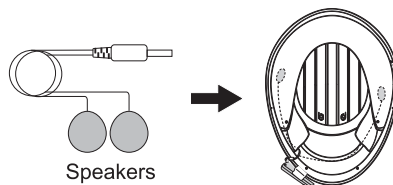


- **Microphone Installation**

For clear voice transmission, please install the microphone close to the mouth.


- **Microphone for Open-face Helmets**

When installing on the helmet, use the adhesive sheet to attach the microphone so that the triangular mark faces the direction of your mouth, and secure it firmly.

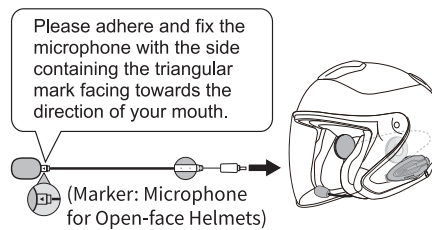

- **Microphone for Full-Face Helmets**


For full-face helmets, install the microphone inside the helmet. Also, route the microphone cable along the inside of the helmet.

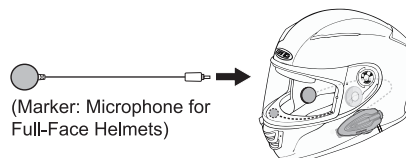

Pairing

■ Pairing with a Smartphone

1. Press and hold the Power/Intercom button for over 3 seconds to turn on the device. Then, press and hold the MF button for 4-6 seconds.

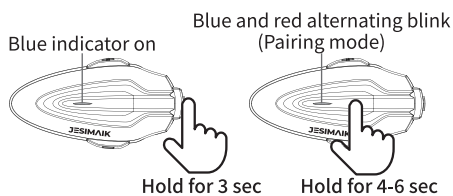

Note:

① During initial startup, the device automatically enters pairing mode with the indicator blinking red and blue. At this time, it can be paired with a smartphone or other devices. After pairing, when you power on the device again, the indicator will blink blue and green.

② While in pairing mode, briefly pressing the MF button enables pairing with intercoms from other brands (please ensure the other intercom is also in pairing mode).

2. Turn on the smartphone's Bluetooth function and select "JESIMAIK H6" from the list of available devices.



3. Once pairing is complete, a "Device connected" voice prompt will play, and the LED indicator will blink blue and green alternately.

• Connecting to a Previously Paired Phone


If the smartphone has been paired before, simply turn on the device and then select "JESIMAIK H6" from your Bluetooth settings screen.

■ Connect with Phone Already Paired

If the smartphone is already paired before, turn on the phone, check the Bluetooth verification section of the phone and select "JESIMAIK H6".

Make/Answer a call	
Start a call: Press the MF button  Press Once	End a call: Press the MF button  Press Once
Reject a call: Press and hold simultaneously for 2s  2S	Recital: Press the MF button and volume + at the same time  Press Once Press Once

•Playing music from your smartphone

Play Music from Your Smartphone	
Play/Pause music: Press the MF button  Press Once	Adjust music volume: Press the volume +/- buttons  Press Once
Next song: Press the volume - button twice  Press Twice	Previous song: Press the volume + button twice  Press Twice

• **Voice Assistant Function:**


If pairing with your smart-phone has been completed, press the MF button twice. (Siri/Google Assistant is activated)




■ **Pairing with Other H6 Units**

Note: Multiple units can be connected for simultaneous calls if they are the same model (Model: H6).

1. Press and hold the Power/Intercom button for 3 seconds to turn on the device.
 2. On the H6 units you wish to pair, simultaneously press the Power/Intercom Button once. The indicator light will blink green, indicating pairing mode.
 3. After entering pairing mode, wait a moment for the two H6 units to pair automatically.
 4. Once pairing is complete, a "Intercom connected" voice prompt will play through the speaker, and the LED will glow solid green. Intercom calls can now be made.
 5. During an intercom call, press the Power/Intercom Button twice. A "beep" tone (described as "bu-he-bu-nu") will sound from the speaker, and the intercom function will turn OFF.
 6. To resume the call, press the Power/Intercom Button twice again. The same "beep" tone will sound, and the intercom function will turn ON, allowing the call to continue.
- Note: Ensure the intercom function is ON for both H6 units.

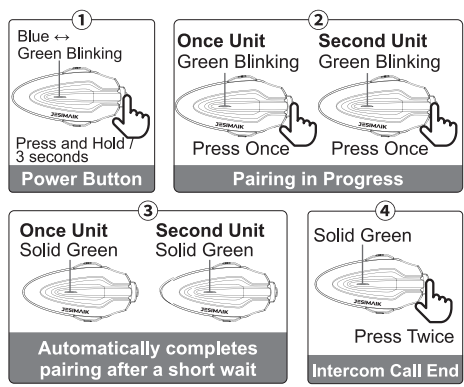

Example of Pairing 4 H6 Units

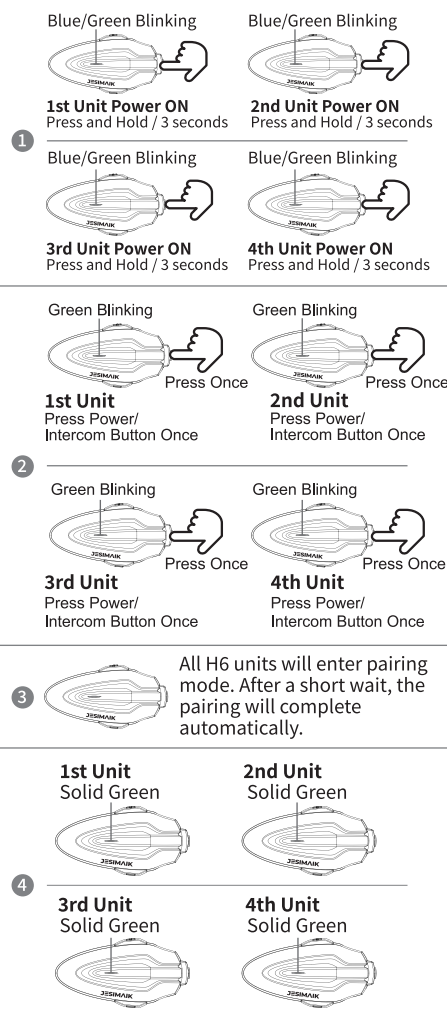


■ Pairing with Other Brands of Intercoms

1. Press and hold the H6's [Power/Intercom Button] for 3 seconds to turn on the power. Also, turn on the power of the third-party intercom.



Press and hold for 3 seconds

2. Set the third-party intercom to "Universal Pairing Mode" according to its instruction manual.



Press and hold for 4-6 seconds

3. Press and hold the H6's [MF Button] for 4-6 seconds. The H6 will then enter "Universal Pairing Mode".



Press once

4. Once both the H6 and the third-party intercom are in Universal Pairing Mode, press the H6's [MF Button] once to start the pairing process.

5. After pairing is complete, you can toggle the intercom call ON/OFF by pressing the [Power/Intercom Button] once.

Note:

During initial startup, the device will automatically enter pairing mode when powered on, indicated by the lamp blinking red and blue alternately.

While in pairing mode, briefly pressing the function button allows pairing with third-party intercoms (please ensure the other intercom is also in pairing mode).

■ Pairing with SENA Bluetooth Headset

1. Press and hold the H6's [Power/Intercom Button] for 3 seconds to turn on the power. Also, turn on the power of the SENA headset.
2. Set the SENA headset to ""Universal Pairing Mode"" according to its instruction manual.
3. Press and hold the H6's MF Button for 4-6 seconds. The H6 will then enter ""Universal Pairing Mode"".
4. Once both the H6 and the SENA headset are in Universal Pairing Mode, press the H6's MF Button once to start the pairing process.
5. After pairing is complete, you can toggle the intercom call ON/OFF by pressing the [Power/Intercom Button] once.

■ Pairing with Cardo Bluetooth Headset

1. Press and hold the H6's [Power/Intercom Button] for 3 seconds to turn on the power. Also, turn on the power of the Cardo headset.
2. Set the Cardo headset to ""Universal Pairing Mode"" according to its instruction manual.
3. Press and hold the H6's [MF Button] for 4-6 seconds. The H6 will then enter ""Universal Pairing Mode"".
4. Once both the H6 and the Cardo headset are in Universal Pairing Mode, press the H6's [MF Button] once to start the pairing process.
5. After pairing is complete, you can toggle the intercom call ON/OFF by pressing the [Power/Intercom Button] once.

Notes:

You can only pair with one headset of another brand at a time.

Press the intercom button twice to end the intercom talk, press again to re-activate the intercom talk.

Some models of other brands may be paired in a different way, please consult your dealer or support@jesimaik.com for details.

Listen-Talk


The H6 "Listen-Talk" feature allows you to have an intercom conversation with others while listening to music or navigation audio.

Even if you are disconnected due to distance while driving, you can reconnect automatically when you return to a communicable range (within a short period of time).

Features:

1. If you start an intercom conversation with audio playing on a device such as a smartphone, you will be in the "Listen-Talk" state.
2. In the "Listen-Talk" state, when you answer a cell phone call, other devices can still maintain normal intercom conversation.
3. Cell phone calls will not be routed through the intercom and you will automatically return to the intercom conversation when the phone call ends.

How to start "Listen-Talk"

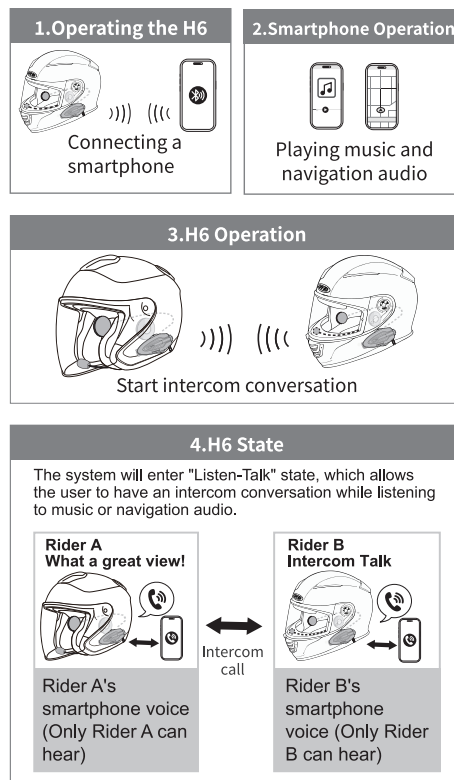

Music Sharing

The "Music Sharing" function allows you to listen to music that others are listening to.

How to operate:


- ① Turn on both H6 units and ensure they are intercom-paired. (Refer to Page 14 for intercom pairing)
- ② On the source H6 connected to your smartphone, pause music playback.
- ③ Press and hold the "MF Button" + "Volume + Button" simultaneously for 3 seconds on both H6 units.
- ④ When connection is complete, music will be shared to the other H6 unit.

Additional Information:

- Maximum communication distance for music sharing is approximately 10m.
- Before starting music sharing, the following conditions are required:
 - The two H6 units must be paired with each other.
 - One H6 must be connected to a smartphone with music playback paused.
- ※ Music sharing is only available between two devices. If three or more H6 units are connected simultaneously, the music sharing function cannot be used.

Music Sharing Operation


1. Pair Two H6 Units

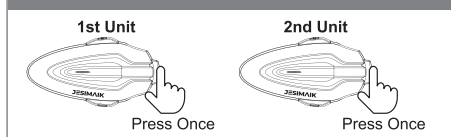


2. Pair One H6 with Smartphone



3. Stop Music on Smartphone



4. On Both H6 Units: Press and Hold MF Buttons + Volume+ Buttons for 3 Seconds

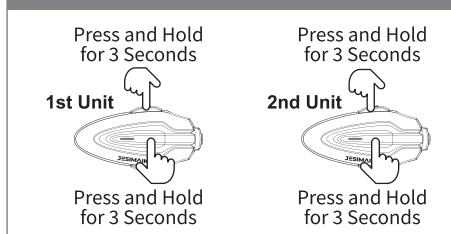


Music Effects Function

You can switch between 4 different sound effects during music playback: Bass, Vocal, Pop, and Rock.


Operation Method:

Press the Power/Intercom Button and Volume + Button simultaneously once to switch to your desired mode.

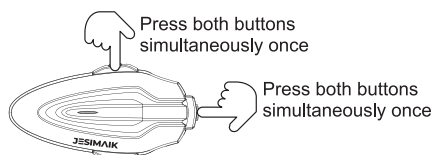

FM Radio ON/OFF

Press the Volume + and Volume - buttons simultaneously once to switch ON/OFF.

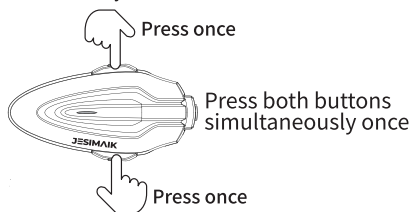

Search for Available FM Stations

Next station: Press Volume - button twice
Previous station: Press Volume + button twice

*When reaching the frequency limit during search, pressing Volume - button will return to the lower limit.

FM Radio Volume Adjustment

Press Volume +/Volume - buttons

Troubleshooting

If you encounter the following situations, please check the User Manual and Quick Manual again. If the problem persists, please contact us via our support email address: support@jesi-maik.com.

Problems	Solutions
No Sound	• Check speaker/microphone jacks are fully inserted • Adjust volume settings appropriately
Cannot Charge	• Ensure charging cable is securely connected • Check port for damage/poor contact • Use included charging cable
Poor LINE Call Quality	• LINE calls rely on app/network quality • Check your network connection • Not controllable via intercom settings
Will Not Power On	• Check battery level • Dry unit thoroughly if moist • Ensure interior is completely dry before use
No Sound After Pairing	• Verify speaker/microphone cable connections • Reset intercom and smartphone connections • Attempt re-pairing
Cannot Pair With Other Brands	• Connection methods may vary by brand • Contact purchase retailer for pairing assistance

Problems	Solutions
Short Communication Range	• Reset and re-pair devices • Avoid buildings/radio interference • Test in open outdoor areas
Water in Magnetic Mount	• Dry thoroughly with cloth • Ensure complete dryness before use • Moisture affects audio clarity

Specifications

Specifications are subject to change without notice.

Item	Specification
Model No.	H6
Supported Profiles	A2DP, AVRCP, HFP, HSP, SSP, DID, HID
Noise Cancellation	DSP, CVC, ENC Support
Waterproof Rating	IP67
Dimensions	3.44×1.77×1.04 inch
Weight	Approx. 0.11 lb
Charging Connector	USB Type-C
Group Talk	Supported
Long Distance Communication	Supported
FM Radio	Supported
Voice Assistant	Supported
Phone/Navigation	Supported
Music & Talk	Supported

Warranty

The warranty period for this product is one year from the date of purchase.

The specifications of this product are subject to change without notice.

This product may be discontinued due to the discontinuation of production of the components used.

Before contacting us, please check the following to ensure we can respond to your question as soon as possible:

- ① Product name
- ② Order number
- ③ Serial number on the label on the back of the device
- ④ Please describe the problem in as much detail as possible. If you are contacting us by e-mail, we would appreciate it if you could attach a photo or video of the fault.

If you have any questions or concerns, please contact the dealer from whom you purchased the product or the contacts listed below.

Email Address



support@jesimaik.com

Official Site



www.us.jesimaik.com

Note: Response within 24 hours on business days

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FC FCC ID:2A4SC-H6

はじめに

このたびは「JESIMAIK/バイク用インカム H6」をお買い上げいただき誠にありがとうございます。安全に正しくお使いいただくために、ご使用前にこの取扱説明書を必ずお読みください。この取扱説明書は、仕様変更等によりイラスト、内容が一部実機と異なる場合があります。取扱説明書は保証書も兼ねておりますので、大切に保管してください。

目次

主な特長	29
安全にお使いいただくために	30
各部の名称	31
操作一覧表	32
各パーツの名称	33
本体の充電	34~35
•充電のしかた	34
•電源のON/OFF	35
取り付け方	36~39
•マウントの取付	36
•粘着タイプマウントの取付	36~37
•本体の取付	37
•本体の取り外し	37
•スピーカーとマイクの取付	38~39
ペアリング	40~47
•スマートフォンとのペアリング	40~41
•同機種インカム同士のペアリング	42~43
•他社のインカムとのペアリング	44
•他社インカムとペアリングの例	45
聴きトーク	46~47
音楽共有機能	48~49
音楽効果	50
FMラジオを聞く	50
こんなときは	51~52
商品仕様	53
保証期間およびお問い合わせ	54
保証書	55

主な特長



複数人で
グループ通話



グループを離れて、障害物や外部電波により通信が切れた場合、短時間で通話可能範囲内に入れば自動的に接続されます。

※実際の電波が届く距離は、周囲の障害物や電波環境、加速の仕方により大幅に差異が生じる場合がありますのでご注意ください。



- ◆多人同時通話可能・自動復帰機能
- ◆聴きトーク機能・音楽共有
- ◆耳への負担を軽減超スリムスピーカー
- ◆騒音抑制・HiFiステレオ高音質
- ◆ワンタッチで全台グループ接続
- ◆Bluetooth5.2・ユニバーサル接続機能
- ◆IP67防塵防水・様々な場合に対応
- ◆操作简单・12S自動着信
- ◆日本語音声案内・音声認識機能
- ◆FMラジオ

安全にお使いいただくために

安全かつ効果的な取り扱いが行えるように、次の見出しを使用しています。見出しの意味を十分にご理解の上、正しくお使いください。

⚠ 注意	
❗	埃が多い場所や、湿度・温度が高い環境に機器を置かないでください。
❗	本製品を分解・改造しないでください。
❗	本製品に落下や衝撃を加えないでください。
❗	本製品を腐食性のある液体で拭かないでください。
❗	通話距離は周囲の環境によって影響を受けることがありますので、ご注意ください。
❗	電磁波障害や互換性トラブルの発生を防ぐため、「インカム禁止」などの表示がある場所では、電源を切るか、本製品の使用を中止してください。
❗	医療機器などの近くで本製品を使用しないでください。
❗	安全運転のために、お住まいの地域のインカム使用に関する法律や規制を確認し、遵守してください。ツーリング中に本製品を使用する場合は、適切な音量に調整し、常に運転と道路状況に注意を払ってください。

各部の名称

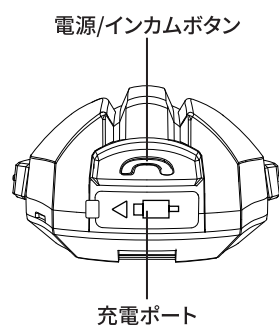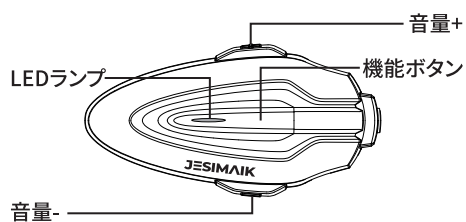

※注意

スピーカーの位置が少し変わるだけで、聞こえ方が異なります。

インカム取付前にスマートフォンを接続し音声出力の確認を行ってください。

スピーカーの位置を調整し、一番聞こえやすい位置へ、事前に目印を付けておくことをお勧めします。

操作一覧表

機能	ボタン	操作方法
電源オン/オフ	電源ボタン	長押し/3秒
バッテリー残量確認	機能&音量-ボタン	同時押し/1回
スマホペアリング	機能ボタン	長押し/4～6秒
着信開始/終了	機能ボタン	1回押す
着信拒否	機能ボタン	長押し/2秒
コールバック	機能ボタン&音量+ボタン	同時押し/1回
音量調整	音量+/-ボタン	1回押す
スマホ音声アシスタント	機能ボタン	2回押す
着信自動接続オン/オフ	機能ボタン&音量+/-ボタン	同時長押し/5秒
音楽再生/停止	機能ボタン	1回押す
前の曲	音量+ボタン	2回押す
次の曲	音量-ボタン	2回押す
音楽効果変更	電源&音量+ボタン	同時押し/1回
FMラジオオン/オフ	音量+/-ボタン	同時押し/1回
前のFM局	音量+ボタン	2回押す
次のFM局	音量-ボタン	2回押す
インカム音量調整	音量+/-ボタン	長押し
言語変更	機能&電源&音量+ボタン	同時長押し/5秒
リセット	電源&音量-ボタン	同時長押し/5秒

各パーツの名称

以下が製品パッケージに含まれている付属品です。
ご使用前に、全て揃っているかご確認ください。
万が一、部品の不足がございましたら、お買い求め
の販売店までご連絡ください。



本体×1



ジェットヘルメ
ット用マイク
(硬い)×1



フルフェイス
用マイク(柔
らかい)×1



磁気マウント×1



スピーカー×1



スピーカー固定
用粘着テープ×2




ジェットヘルメ
ット用マイク固定用粘
着テープ×1



フルフェイス用マイ
ク固定用粘着テー
プ×1



充電用 USB
Type-C
ケーブル×1



スピーカー位置
調整パッド



取扱説明書×1



クイックスター
トガイド×1



粘着式マウント用
テープ(赤)×1セット



クリップ式マウント用テープ(白)×1セット
(ずれ落ちを防ぎ、傷付きを防止します)




磁気マウントクリップ×1
マウントクリップ用ゴム×1

(マウントクリップ上部をカバーに
差し込むことで、装着時のずれ落
ちを防ぎ、ヘルメットへの傷付きを
防止します。)

本体の充電

■充電のしかた

充電方法: 付属のUSB Type-Cケーブルと市販のUSB電源アダプタを本体に接続して充電します。

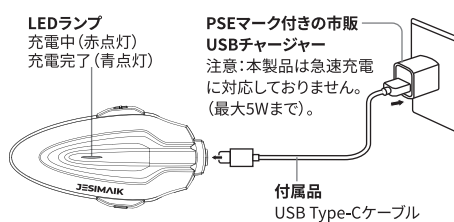

⚠ 注意

⚠	初めて使用する際は、必ず本製品を充電してください。
⚠	充電効率を保つため、(できる限り) 付属のUSB Type-Cケーブルをご使用ください。
⚠	充電が完了した後は、充電器を外し、充電状態のまま長時間放置しないでください。
⚠	充電は、風通しが良く乾燥した場所で行ってください。湿気の多い場所や高温の環境は避けてください。
⚠	火災の原因となるおそれがあるため、充電中は紙・布・アルコールなどの可燃物を本体の近くに置かないでください。


■電源のON/OFF

電源ボタンを3秒以上長押しすると、本製品の電源をオン・オフすることができます。

注意:


- 1.初回起動時は電源を入れるとペアリングモードに入り、ランプが【赤↔青】に点滅します。
その際はスマートフォンや他のデバイスとペアリングが可能です。ペアリング後に再度電源を入れると、ランプは【青↔緑】に点滅します。
- 2.ペアリングモード時に機能ボタンを短く押すと、他社製インカムとのペアリングが可能です(※相手側のインカムもペアリングモードであることを確認してください)。

電源ON状態【青↔緑】点滅
(初回起動時は【赤↔青】)

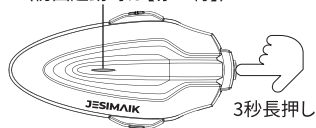

3秒長押し

電源OFF際は短く【赤】点灯

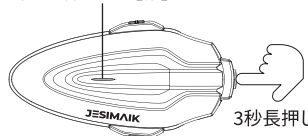

3秒長押し