


MULTI-FUNCTION SHOULDER & NECK MASSAGER

P12

USER'S MANUAL

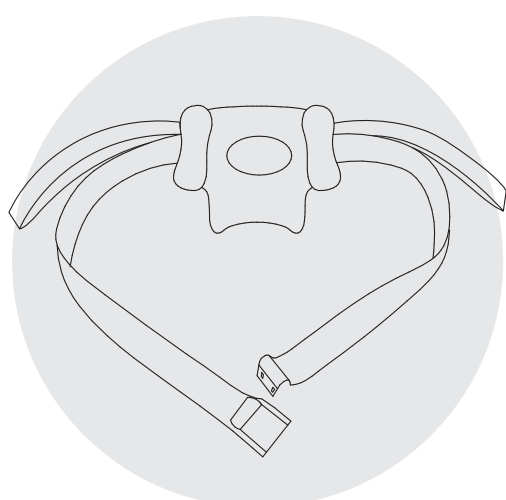

The picture is for reference only, the product is subject to the actual object.

Please read this manual carefully before use and keep it in a safe place for future reference.

CONTENTS


- 01 Name of each part
- 02 Instructions for use
- 03-04 Precautions / Common Failures / Solutions
- 05 Product maintenance and cleaning methods

Name of each part


PRODUCT INFORMATION

Product Name: Multi-function shoulder and neck massager
 Model: P12 Working voltage: 5V $\overline{\text{~}}$
 Working power: 8W Rated input voltage: 5V $\overline{\text{~}}$
 Rated Input Power: 10W Net weight: 1.2kg
 Battery capacity: 2000mAh Package size: 233x158x170mm
 Automatic Timing: 10 minutes
 Note: The product process allows a slight error.

PRODUCT DESCRIPTION

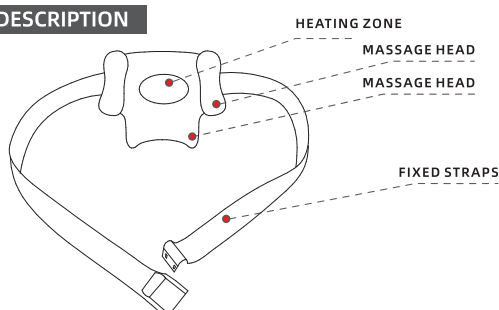

BASIC ACCESSORIES

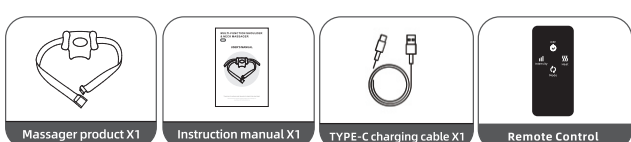

01


Instructions for use

PREPARATION FOR CHARGING

Prepare a 5V $\overline{\text{~}}$ 2A adapter to interface with the cable or plug it directly into the TYPE-C connector.

KEY DESCRIPTION

Standby key: long press to turn on, long press to turn off.
 Mode key: 4 modes (short press to switch mode)
 Heat key: heating high-grade red light, heating low-grade yellow light (two-stage heating, the default heating low-grade short press to switch the heating gear)
 Strength key: 3 levels of strength, short press to switch. When charging, the red breathing light flashes, when fully charged, the green light stays on.

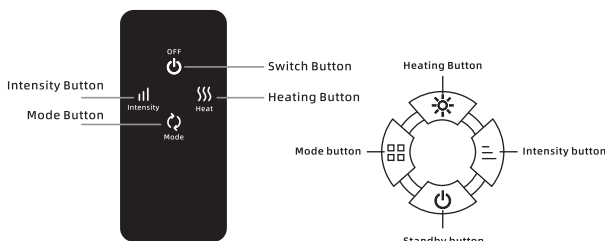

Instructions for Using the Remote Control

- Standby Button: Short-press to turn off the device. (Note: The remote control can only be used when the device is turned on; the Standby Button does not have a power-on function.)
- Mode Button: There are 4 modes (short-press to switch modes; each press will trigger a "beep" prompt to indicate successful mode switching).
- Heat Button: High heating level is indicated by a red light, and low heating level by a yellow light (2 heating levels in total; the device defaults to low heating level when turned on; short-press to switch heating levels).
- Intensity Button: 3 intensity levels; short-press to switch.

02

PRECAUTIONS

6. Do not use sharp objects on this product.
 7. Please keep the product dry and do not act in a humid environment.
 8. Please unplug the product from the socket when no one is watching.
 9. Please do not let children play with this product.
 10. Do not use the product if the power cord or plug is damaged, not working properly, or has fallen into the water.
 11. The power cord must be kept at a safe distance from the heating surface. Please do not place the product near the source of fire and flammable places to avoid failure or danger.
 12. This product has a refreshing effect, please do not use this product when sleeping.
 13. Do not insert or drop objects into any openings of the product.
 14. Do not use spray products or places filled with flammable bodies to operate this product.
 15. Do not place the product under a blanket or pillow to avoid overheating the product and causing a fire, short circuiting the wires or injuring people.
 16. Do not drag the power cord to move the product, or use the power cord as a grip.
 17. When unplugging the power, please make sure the product has been turned off first to avoid damage to the product.
 18. This product is not for any medical use.
 19. Do not subject this product to strong impact.
 20. Do not use parts not provided by the manufacturer. Be sure to use the product in accordance with the instructions described in the user manual.
- If the power cord is damaged it must be replaced by the manufacturer or a professional repairer



05

People not suitable for use

- If you have the following conditions, please consult a doctor before using this product
- During pregnancy, during menstruation or shortly after parting of the night
 - Those who use medical electronic devices such as cardiac pacemakers that are implanted in the body
 - People with blood circulation disorders or thrombosis
 - Have osteoporosis
 - Skin infections
 - High fever
 - Traumatic injuries or superficial diseases
 - Doctor's orders to recuperate or feel unwell
 - The surface of the product will be hot during use, so people who are not sensitive to heat must be careful when using the product.

Safety matters

1. Each use time of no more than 10 minutes (the product automatically turns off after completing 10 minutes of massage program), the use of too long may lead to overheating, thereby shortening the product life, such as the product overheating, please immediately stop using, first cool the product before the next operation.
2. In order to reduce the impact of the hedge current on the product, please do not frequently switch the power supply within a short period of time to extend the life of the product.
3. Please use the power adapter configured for this product, using other power adapters may cause damage.
4. Do not use the damaged power supply or tamper with the circuit of this product.
5. If a power failure should be unplugged to avoid the sudden restoration of power to cause injury.
6. If you feel physical abnormalities during the use of this product, please stop using it immediately and consult a doctor.
7. This product is not recommended for people with physical disabilities, sensory or neurological deficiencies or lack of experience and common sense (including children, the mentally ill, the physically paralyzed, etc.) to use, if necessary, must be used under the supervision and guidance of their guardians.

| Failure phenomenon | Solution |
|-----------------------------------|---|
| Cannot start the massager | placed three months need to be fully charged Not charging: replace the charging cable. |
| Massage suddenly stop in progress | The 10 minutes set by the automatic timer has expired |

06

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 -Reorient or relocate the receiving antenna.
 -Increase the separation between the equipment and receiver.
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

07

Precautions / common failures / solutions

1 Maintenance

- 1.1 Usually disconnect the power supply when not in use and place the product in a safe, dry and cool place.
- 1.2 Avoid contact with sharp objects that may puncture or damage the appearance of the product.
- 1.3 Do not store the product at high temperatures, near open flames or in direct sunlight as this may cause color fading and damage.
- 1.4 Avoid exposing the product and accessories to benzene, thinner or any other corrosive liquid.
- 1.5 When storing, do not tie the product with any power cords or wires or hang the product with cables.

2 Cleaning

- 2.1 Before cleaning, please unplug the product from the power supply and wipe it gently with a soft, slightly damp sponge or soft cloth.
- 2.2 The product must not be immersed in any liquid and must not be rinsed directly with water or any liquid.
- 2.3 Do not use sharp brushes, gasoline, kerosene, furniture cleaning fluid, etc. to wipe the product.