

# AquaKara


## OWNER'S MANUAL

**Shower Phone Case with Bluetooth Speaker**

**Product Name: Bluetooth speaker**

**Model: AquaKara\_101**

**VIDEOS, MUSIC, SOCIALS, CHATS - LIFE GOES ON, EVEN IN THE SHOWER.**

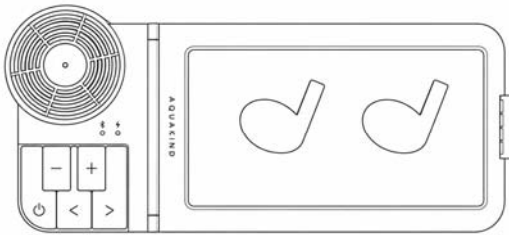

---


## 1. GETTING STARTED

### PACKAGE CONTENTS

Before using your AquaKara AK\_101, check that all parts are included:


1. Shower Phone Case with Bluetooth Speaker
2. Twist-Tight Wall Mount
3. 30cm USB-A to USB-C (Type-C) Charging Cable
4. Twist-Tight Wall Mount Adapter

**Phone not included.**

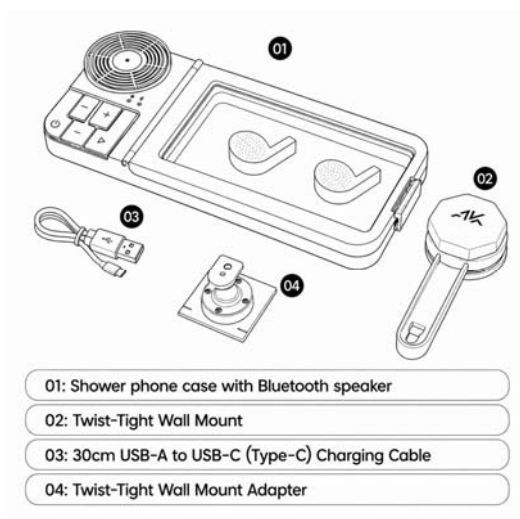

## QUICK START GUIDE

### Install the Twist-Tight Wall Mount

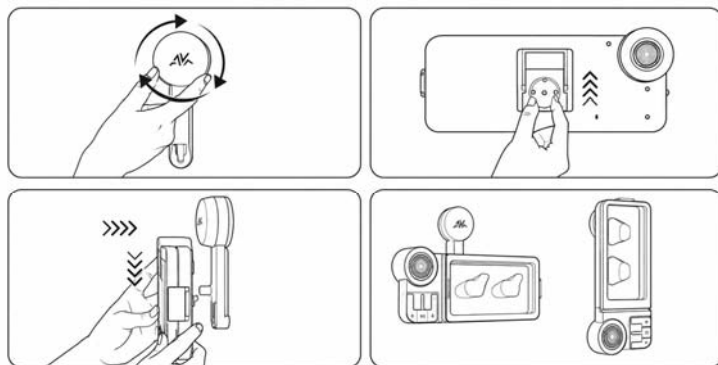


1. Clean and dry a smooth, flat mounting surface. Press the Twist-Tight Wall Mount firmly against the wall, then twist the knob clockwise until it cannot turn any further. For a stronger hold, keep pressing the mount against the wall while tightening.
2. Slide the Twist-Tight Wall Mount Adapter onto the back of the case. Insert the smooth end first, then push the adapter fully into place until the two locking tabs click securely.
3. Attach the case to the wall mount. Slide the open end of the adapter onto the wall mount bracket, then push down until it reaches the end and sits securely.
4. Adjust the case to your preferred viewing angle. The mount supports 360° rotation and adjustable tilt for portrait or landscape viewing.

**Important:** Install only on a smooth, flat, clean, dry, non-porous surface such as tile or glass.

Do not install on grout lines, textured tile, rough surfaces, painted surfaces, peeling surfaces, cracked surfaces, dusty surfaces, oily surfaces, wet surfaces, natural marble, or other porous natural stone surfaces. Porous surfaces may allow air to pass through tiny holes, which can weaken the wall mount's hold and cause the product to fall.

**Warning:** Improper installation may cause the product to fall. A fall may damage the product, your phone, or the bathroom surface. Before each use, gently check that the Twist-Tight Wall Mount is secure and that the case is properly attached. Do not use the product if the mount slides, rotates, feels loose, or does not hold the case securely.

Insert Phone and Start Listening

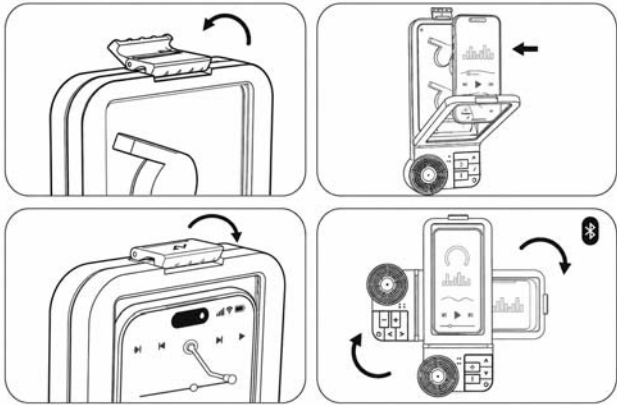

For the easiest setup, turn on and pair the speaker before placing your phone inside the case. Long press the Power/Bluetooth button to turn on the speaker. For first-time pairing, open Bluetooth settings on your phone and select AK\_101.

1. Open the snap-lock latch and lift the flip-open lid.
2. Insert your phone with the screen facing the clear window.
3. Close the lid securely and lock the latch.
4. Rotate and tilt the case for your ideal viewing angle.

After first pairing, the speaker will try to reconnect automatically to the last connected phone when powered on.

To connect a different phone, disconnect Bluetooth from the previously connected phone, or quickly double-click the Power/Bluetooth button to disconnect the current Bluetooth connection. Then select AK\_101 on the new phone.

Important: Before shower use, make sure the lid is fully closed, the latch is locked, and the USB-C charging port cover is pressed securely into place.

CHARGING BEFORE USE

The speaker may arrive with some battery power from manufacturing, but it may not be fully charged.

To charge:

1. Open the USB-C charging port cover using the small pull tab.
2. Connect the included USB-A to USB-C charging cable.
3. Charge the speaker using a suitable USB power source.
4. When charging is complete, remove the cable.
5. Press the USB-C charging port cover firmly back into place before shower use.

Charging time: approximately [2.5 hours]

Play time: approximately [6 hours]

| Status        | LED                          |
|---------------|------------------------------|
| Charging      | Red LED on                   |
| Fully charged | LED off                      |
| Low battery   | LED changes from blue to red |

**Warning:** Do not charge the product in the shower, near running water, or while the product is wet. The USB-C charging port cover is part of the water-resistant design. If the cover is open or not properly sealed, water may enter the charging port and damage the product.



## BASIC CONTROLS

| Button          | Function                                                      |
|-----------------|---------------------------------------------------------------|
| Power/Bluetooth | Long press to power on/off                                    |
| Power/Bluetooth | Single press to play or pause audio/video                     |
| Power/Bluetooth | Quick double-click to disconnect current Bluetooth connection |
| Volume +        | Press to increase volume one step                             |
| Volume -        | Press to decrease volume one step                             |
| Next Track      | Press to skip to next track                                   |
| Previous Track  | Press to return to previous track                             |

Button functions may vary depending on the connected phone, app, or Bluetooth connection status.

## WATER-RESISTANT USE

The AquaKara AK\_101 is designed for normal shower splash use.

Do not submerge the product in water. Do not use it underwater. Do not charge it while wet. Do not spray high-pressure water directly into the speaker area, charging port, latch, or seal area.

Before each shower use, check that:

1. The lid is fully closed.
2. The latch is locked.
3. The USB-C charging port cover is fully closed.
4. The Twist-Tight Wall Mount is firmly attached.

**Important:** This product is water-resistant for normal shower splash use only. It is not designed for underwater use or full water submersion.

## 2. PRODUCT INFORMATION & SAFETY

### PRODUCT SPECIFICATIONS

| Item                  | Specification        |
|-----------------------|----------------------|
| Brand                 | AquaKara             |
| Model                 | AquaKara_101         |
| Product Name          | Bluetooth speaker    |
| Bluetooth Name        | AquaKara_101         |
| Bluetooth Version     | V5.4                 |
| Bluetooth Audio Codec | SBC                  |
| Bluetooth Frequency   | 2.402GHz-2.480GHz    |
| Transmission Range    | >=10 m in open space |
| Rated Output Power    | 6W                   |
| Maximum Output Power  | 6.5W                 |
| Frequency Response    | 50Hz-18kHz           |
| Sensitivity           | >=85dB               |

|                       |                                                                   |
|-----------------------|-------------------------------------------------------------------|
| Signal-to-Noise Ratio | >=75dB                                                            |
| Speaker               | 4 ohm, 5W                                                         |
| Battery               | 800mAh                                                            |
| Charging Input        | DC 5V / 1A                                                        |
| Charging Cable        | USB-A to USB-C, 30 cm                                             |
| Charging Time         | Approx. [2.5 hours / to be confirmed]                             |
| Play Time             | Approx. [6 hours / to be confirmed]                               |
| Water Resistance      | Designed for normal shower splash use only. No IP rating claimed. |
| Compatible Phone Size | [To be confirmed]                                                 |
| Product Dimensions    | [To be confirmed]                                                 |
| Product Weight        | [To be confirmed]                                                 |

## CARE AND USE NOTES

Use the AquaKara AK\_101 only as instructed in this manual.

Before each shower use:

1. Make sure the lid is fully closed.
2. Make sure the latch is locked.
3. Make sure the USB-C charging port cover is fully closed.
4. Make sure the Twist-Tight Wall Mount is firmly attached.

After shower use:

1. Wipe the outside of the product dry before opening the lid.
2. Keep water, soap, shampoo, and other liquids away from the inside of the case.
3. Allow the product to dry before charging.
4. Store the product in a clean, dry place when not in use.

**Important:** This product is designed for normal shower splash use only. Do not submerge it in water. Do not use it underwater. Do not charge it while wet.

## PHONE PROTECTION NOTICE

The AquaKara AK\_101 is designed to help protect your phone during normal shower splash use when the product is properly closed and used correctly.

Always check the lid, latch, seal area, charging port cover, and wall mount before use.

AquaKara is not responsible for damage to phones, personal items, bathroom surfaces, or other property caused by improper use, improper installation, failure to close the product correctly, submersion, impact, damaged parts, or use outside the instructions in this manual.

**Phone not included.**

## IMPORTANT SAFETY INSTRUCTIONS

Please read and follow all safety instructions before using this product.

1. Do not submerge the product in water.
2. Do not use the product underwater.
3. Do not charge the product in the shower, near running water, or while the product is wet.
4. Before charging, make sure the USB-C charging port is dry.
5. Use only a standard DC 5V / 1A USB power source.

AquaKara AK\_101 Owner's Manual - Draft

6. Do not use fast chargers, high-voltage chargers, damaged chargers, or damaged charging cables.
7. Do not force the charging cable into the USB-C port.
8. Always close the USB-C charging port cover securely before shower use.
9. Do not use the product if the case, lid, latch, seal area, charging port cover, wall mount, or charging cable is damaged.
10. Do not drop, crush, puncture, burn, disassemble, or modify the product.
11. Do not expose the product to fire, high heat, or extended direct sunlight.
12. Keep the product away from young children unless supervised by an adult.
13. This product is not a toy.
14. Avoid listening at high volume for long periods. High volume may cause hearing damage.
15. If the product becomes unusually hot, emits odor, changes shape, or does not work normally, stop using it immediately and disconnect it from power if charging.
16. Refer servicing to qualified personnel only. Do not attempt to repair the product yourself.

### **MOUNTING SAFETY**

Install the Twist-Tight Wall Mount only on a smooth, flat, clean, dry, non-porous surface.

Do not install on grout lines, textured tile, rough surfaces, painted surfaces, peeling surfaces, cracked surfaces, dusty surfaces, oily surfaces, or wet surfaces.

Wait 24 hours after installation before attaching the case.

Before each use, gently check that the wall mount is secure. Do not use the product if the mount slides, rotates, or feels loose.

**Warning:** Improper wall mount installation may cause the product to fall. A fall may damage the product, your phone, or the bathroom surface.

## 3. WARRANTY & COMPLIANCE

### 3.1 One-Year Limited Warranty

AQUAKARA Limited, under the AquaKara brand, warrants the AquaKara Shower Phone Case with Bluetooth Speaker, Model AK\_101, to the original purchaser against defects in materials and workmanship under normal use for one (1) year from the date of original retail purchase.

Proof of purchase may be required to obtain warranty service. If a valid warranty claim is approved, AquaKara or its authorized service provider may, at its option, repair the product, replace the product, or provide a refund.

This limited warranty applies only where permitted by law and does not limit any rights you may have under applicable consumer protection laws.

### 3.2 What Is Not Covered

This limited warranty does not cover damage, defects, or loss caused by:

- Accident, misuse, abuse, neglect, improper care, or failure to follow this owner's manual.
- Submersion, underwater use, use outside normal shower splash conditions, high-pressure water spray, charging while wet, or failure to securely close the USB-C charging-port cover before shower use.
- Installation or mounting on unsuitable surfaces, improper surface preparation, improper use of the Twist-Tight Wall Mount, or product fall caused by improper mounting.
- Use with a phone that does not fit properly, forcing the case closed, or using a damaged, oversized, or improperly positioned phone.
- Exposure to soap, shampoo, conditioner, oils, cleaning chemicals, hard water/mineral buildup, or steam exposure beyond normal shower conditions.
- Unauthorized modification, repair, disassembly, or use with non-approved accessories.
- Normal wear and tear, cosmetic damage, scratches, fading, or damage that does not affect normal product operation.
- Products purchased from unauthorized resellers or second-hand sellers.

AquaKara is not responsible for damage to phones, devices, walls, tile, grout, glass, mirrors, bathroom surfaces, personal property, or loss of data.

### 3.3 Requesting Warranty Service

To request warranty service, contact AquaKara Customer Support before returning any product.

Do not return the product without first contacting AquaKara Customer Support. AquaKara may require proof of purchase and may provide instructions for inspection, repair, replacement, or refund.

Warranty service is subject to applicable local laws.

### 3.4 Customer Support

For product support, warranty questions, or replacement assistance, contact:

#### **AquaKara Customer Support**

Email: [support@aquakara.com]

Website: [www.aquakara.com/support]

Please include your product model number, proof of purchase, and a description of the issue when contacting support.

### 3.5 FCC Statement - United States

FCC ID: 2BVTX-AK101

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For radio-frequency exposure information, see Section 3.8 RF Exposure Notice.

### 3.6 ISED Statement - Canada

**IC:** 35513-AK101

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

#### **French / Français:**

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### 3.7 EU / UK Compliance Documents

Where applicable, EU and UK compliance documents for the AquaKara Shower Phone Case with Bluetooth Speaker, Model AK\_101, are available at:

[[www.aquakara.com/compliance](http://www.aquakara.com/compliance)]

Detailed regional compliance information, including responsible person, importer, or supplier details where required, may be provided on a separate regional compliance insert, product label, package label, or other accompanying documentation.

### 3.8 RF Exposure Notice

This product contains a Bluetooth radio transmitter.

The product is designed for normal consumer use. Do not modify the product, antenna, electronics, enclosure, or internal components. Unauthorized changes or modifications may affect radio compliance and may void the user's authority to operate the product where applicable.

Use the product only as described in this owner's manual.



### 3.9 Built-In Battery & Disposal Notice

This product contains a built-in rechargeable battery that is not user-replaceable.

Do not attempt to remove, replace, open, puncture, crush, burn, incinerate, or expose the product or battery to excessive heat. Do not dispose of the product or battery in fire.

Where shown, the crossed-out wheeled bin symbol means this product should not be disposed of with unsorted household waste. Dispose of the product according to local laws and recycling requirements for electronic products and rechargeable batteries.

The built-in battery should be removed only by qualified recycling or service personnel where required by local regulations.