





WinBridge

Voice Amplifier User Manual

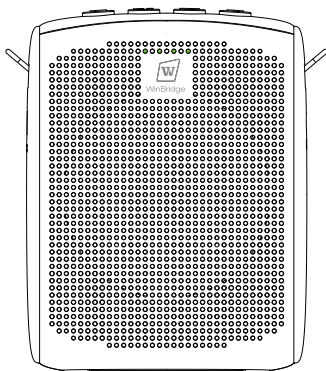

WB002

Function Illustration

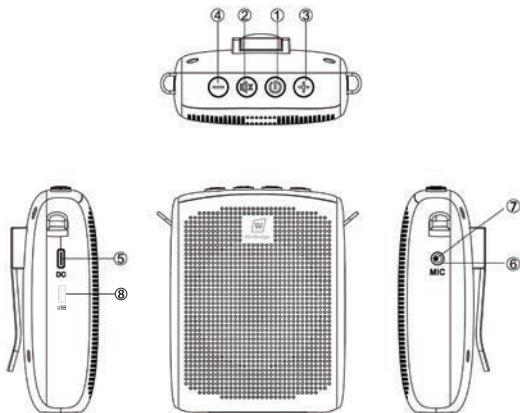

1. Long press to power on or power off | Double-click to turn on or turn off Bluetooth | In music model, press briefly to pause or play music.
2. Short press mute button to mute/recover
3. Short press "+" button to turn up the volume
4. Short press "-" button to turn down the volume
5. DC charging jack
6. Mic jack
7. Reset Button
8. USB Port

How to amplify voice

Operation is straight forward, just turn speaker and headset mic on, they will be paired automatically, then you could amplify voice.

How to Connect Bluetooth

Long press  to power on, then double-click  to turn on Bluetooth, the speaker emits a "beep" prompt. Open your Bluetooth device, such as a phone, and search for Bluetooth named WB002. Click to pair, and when the pairing is successfully, the speaker will emit another "beep" prompt. Long press  to switch to the next track, long press  to switch to the previous track.

How to Play USB Disk

Please insert a USB disk, then the speaker will play music automatically. Ensure your USB disk contains music files.

Short press the  button to increase the volume.

Short press the  button to decrease the volume.

Long press the  button to switch to the next track.

Long press the  button to switch to the previous track

Application

Since Bluetooth technology is susceptible to signal interference from other electronic devices, it is recommended for indoor use.

How to reset

If the device freezes (no response when pressing buttons after turning it on), please use something like a toothpick to press the reset button to restore it.



How to charge voice amplifier

Please plug the type C head of charging cable into DC jack on voice amplifier/headset mic and connect another USB head into 5V charger to charge units.

Please be noted that an adapter is not included.

How to wear voice amplifier unit

Take out the voice amplifier unit, fasten the waist belt to metal hooks on both sides, then tie it on the waist or hung on your shoulder, the belt is adjustable. You can also use the back splint to clinch the voice amplifier on the waistband or trousers.

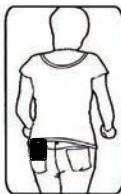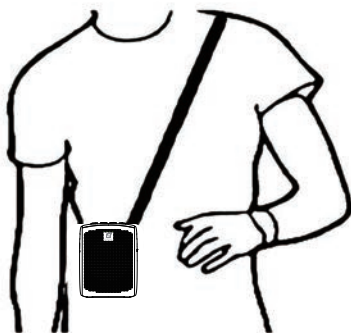

Please Noted:

1. Please use a DC 5V plug to charge voice amplifier and microphone.
2. Plug adapter into 110-240 AC outlet, connect the charging cable end into DC 5V power input on speaker/Mic.
3. In order to extend the life of the internal battery, please charge unit regularly even if system is not being used.
4. Please DO NOT over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and cause over heating.

Speaker Charging Status:

The battery indicator lights flash while charging, and the indicator lights keep constantly light when fully charged.

Technical Parameters:

Output Power	15W
Speaker Battery Capacity	2600mAh
Charging Current	110-240 AC
Speaker Working Time	12-15 hours
Speaker Charging Time	5 hours

Package Includes:

- 1*Voice Amplifier Unit
- 1*Charging Cable
- 1*Waistband
- 1*Manual

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.



After-sale service

WinBridge provide one year warranty and lifetime technical support.

 Toll Free Hotline: +1 (833) 996-2881

 info@wwinbridge.com

<http://www.winbridgestore.com>

Please be confident that seller support is just a mail away from you in case you find any difficulty, kindly do not hesitate to write back to us if you need any clarification or any kind of support.

