


AI Glasses


**F8 Pro**

2 Sets Of Lenses



感谢您选择本智能眼镜。您可以通过阅读本手册，全面地了解设备的使用方法。此设备主要通过蓝牙连接手机进行适配使用，提供了多种实用的功能和服务，以便您对智能眼镜进行操作。本公司保留在不作任何预先通知的情况下对本手册中内容作修改的权利，恕不另行通知。

本产品不支持淋雨、洗手、游泳佩戴，热水淋浴或桑拿等不能佩戴，防不住水蒸气。如因不按指示使用导致智能眼镜进水损坏，本公司不作免费保修。

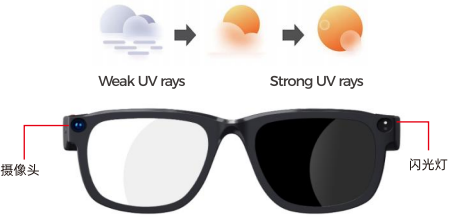


充电说明：
支持电脑 USB 或手机 5V 标准充电器，大概 150 分钟可以充满。


智能眼镜与手机的连接：
首先手机要下载APP“岩界”到手机上并安装，两种方式：
1、IOS/Android手机用户：
通过手机浏览器扫描下方二维码，或用微信扫一扫，打开界面后，选择界面中的Android/iOS，在手机浏览器打开下载。
2、安卓手机上应用宝、Google Play、及各手机应用商店搜索“岩界”下载，苹果手机可上App Store搜索“岩界”下载。



步骤和对应图片编号见右图：

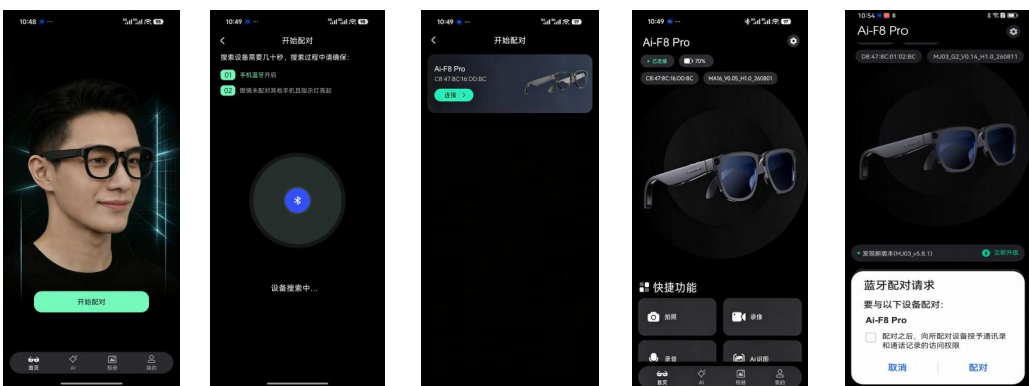

AI Glasses

**F8 Pro**

2 Sets Of Lenses



Thank you for choosing our smart glasses. By reading this manual, you can fully understand how to use the device. This product primarily connects to your smartphone via Bluetooth and offers various practical functions and services for convenient operation. The company reserves the right to modify the contents of this manual without prior notice.

This product is not waterproof and should not be worn in rain, while washing hands, swimming, taking hot showers, or in saunas. It does not





Charging Instructions:
Compatible with computer USB ports or standard 5V mobile phone chargers. It takes approximately 150 minutes to fully charge.

Connecting Smart Glasses to Your Phone:
Download the "YAJIAO" App:
For iOS/Android Users:
Scan the QR code below using your phone's browser or WeChat. Select Android or iOS on the opened page, then download via your browser.
Alternative Download Methods:
Android: Search for "YAJIAO" on the App Store, Google Play, or your phone's app store.
iOS: Download from the App Store by searching "YAJIAO".



Based on the image content, here is the standard English translation of the four-step guide:

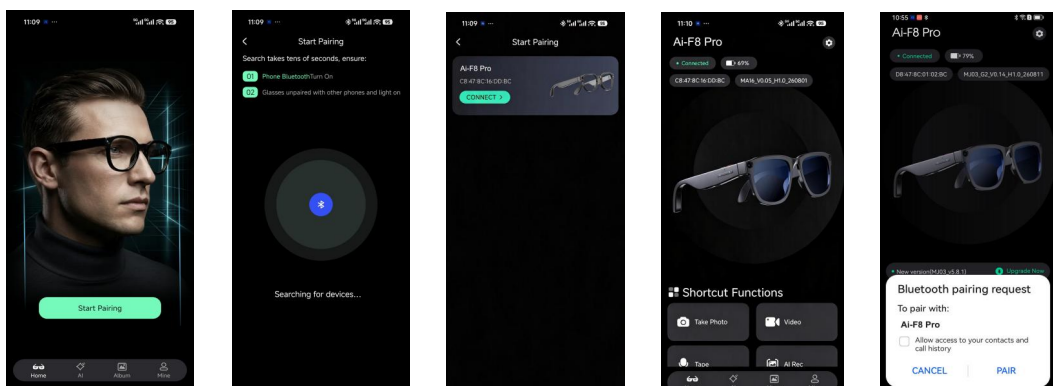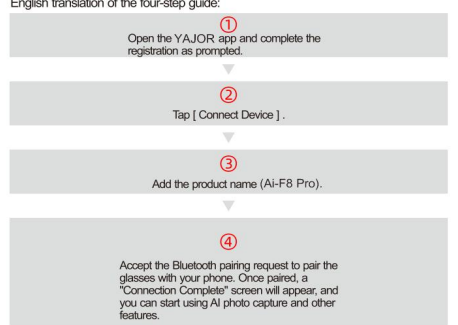

Introduction to Product Components



触摸滑动功能按键详细说明：

音乐播放/暂停：双击触控区域
调节音量：前滑调大音量，后滑调小音量
切换下一首：长按触控区域
切换上一首：三击触控区域

触控滑动功能按键说明
1、音乐播放/暂停（双击触控区域）
功能/操作：快速双击触控区域以播放或暂停当前音乐。
要点：
两次点击间隔短（<0.5秒），位置尽量一致，播放时双击暂停，暂停时双击恢复播放。
2、调节音量
操作：
增大音量：在触控区域向前（镜片方向）滑动
减小音量：在触控区域向后（耳朵方向）滑动。

要点：
滑动需连续连贯，有一定行程（约1厘米）。
每滑动一次调节一格音量，连续滑动可连续调节。
3、切换下一首（长按触控区域）
功能/操作：长按触控区域约3秒，切换到下一首。
要点：需持续按压至获得反馈，短按无效。
此操作将跳过当前播放项。
4、切换上一首（三击触控区域）
功能/操作：极快速三击触控区域切换到上一首（或当前曲目开头，若刚开始播放）。
要点：
三次点击速度需快于双击，位置尽量一致。注意与双击操作区分。

Detailed Description of Touch-Slide Function Keys:

Music Play/Pause: Double-tap the touch area
Volume Control: Swipe forward to increase volume, swipe backward to decrease volume.
Next Track: Long-press the touch area
Previous Track: Triple-tap the touch area
Touch-Slide Function Key Instructions
1 Music Play/Pause (Double-tap the touch area)
Function/Operation: Quickly double-tap the touch area.
Key Points:
• Keep the interval between two taps short (<0.5 seconds) and ensure they occur at roughly the same location.
• Double-tap to pause during playback; double-tap again to resume playback when paused.
2 Volume Control:
• Increase Volume: Swipe forward (toward the lenses) on the touch area.
• Decrease Volume: Swipe backward (toward the ears) on the touch area.

Swipes must be clear and continuous, with a defined travel distance (approximately 1 cm).
Each swipe adjusts the volume by one level.
Continuous swiping enables rapid adjustment.
3 Next Track (Long-press the touch area)
Function/Operation: Press and hold the touch area for about 3 seconds to skip to the next track.
Key Points:
• Maintain pressure until feedback is received. Short presses are invalid.
• This action skips the currently playing item.
4 Previous Track (Triple-tap the touch area)
Function/Operation: Extremely quickly triple-tap the touch area to return to the previous track (or restart the current track if near the beginning).
Key Points:
• Three taps must be faster than a double-tap and occur at roughly the same location.
• Ensure this gesture is distinct from double-tap actions.

安装更换镜片操作说明：



在镜框边缘处，找到标记有箭头的更换位置（即凹槽入口）。将新的镜片边缘，对准箭头所指方向的这个凹槽。用手轻轻地镜片向下压，镜片会顺势沿着凹槽滑动并平稳地镶嵌进镜框的相应卡位中。当感觉到镜片完全嵌入，并且四周与镜框紧密贴合、无松动时，即为安装完成。






Instructions for installing/replacing lenses:



Locate the replacement position marked with an arrow (the groove entrance) on the frame edge. Align the edge of the new lens with the groove in the direction indicated by the arrow. Gently press the lens downward—it will slide along the groove and smoothly snap into place. When the lens is fully seated, fits snugly with no gaps, and feels secure, installation is complete.

Its core function is to support translated video chat with friends on social media platforms. Please follow these steps: Select the languages for both parties in the call. Click "Copy Link to Share". After copying the link, choose the social media app your friend uses (e.g., Facebook, WhatsApp, Twitter, WeChat). You may share the link directly or paste it into your friend's chat window to send it. After sharing, return to the app. Once your friend opens the link, you can start translated audio and video chat immediately.

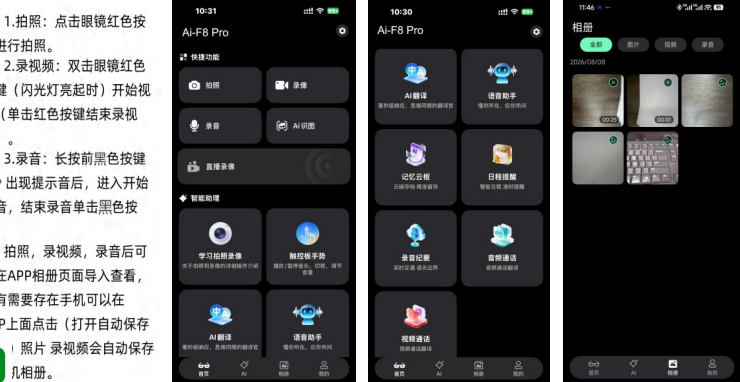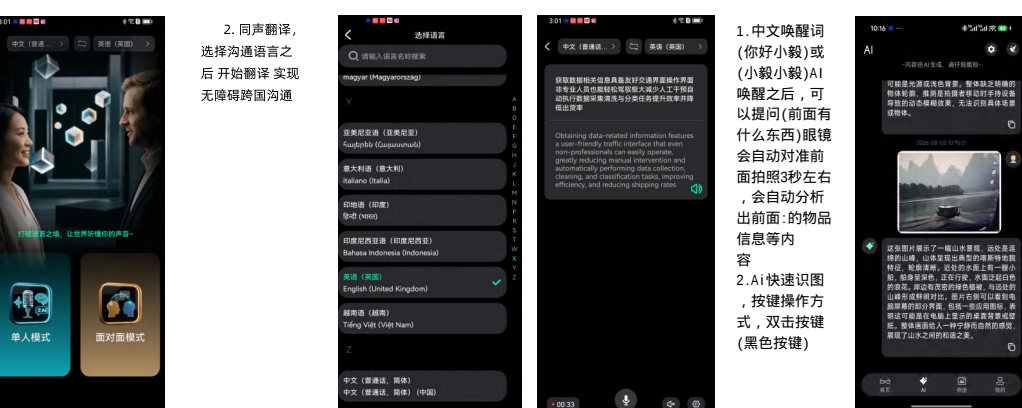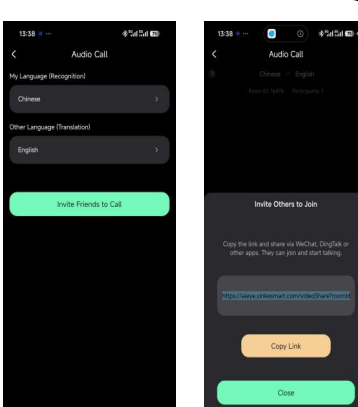


使用合规声明

本产品仅用于合法合规的个人记录、工作拍摄、生活摄影等场景，严禁用于偷拍、窃听等侵犯他人隐私权或违反国家法律法规的非法行为。使用者若违规操作，需自行承担全部法律责任，本公司不承担任何连带责任。

温馨提示

本产品支持拍照和录像，但使用时功耗相对较高，在电量低于20%时，设备将暂停传输数据到手机，充电后可恢复使用。
本产品支持Wi-Fi传输数据到手机并保存，需要手机允许APP使用相关权限后方可实现。。

购买日期：	客户签名：
产品条码：	店员签名：
购买商店：	商店盖章：

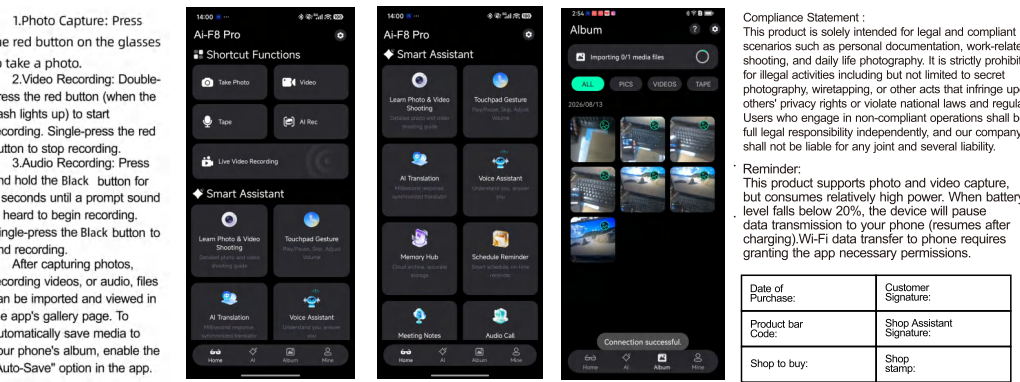

Compliance Statement :

This product is solely intended for legal and compliant scenarios such as personal documentation, work-related photography, and daily life photography. It is strictly prohibited for illegal activities including but not limited to secret photography, wiretapping, or other acts that infringe upon others' privacy rights or violate national laws and regulations. Users who engage in non-compliant operations shall bear full legal responsibility independently, and our company shall not be liable for any joint and several liability.

Reminder:

This product supports photo and video capture, but consumes relatively high power. When battery level falls below 20%, the device will pause data transmission to your phone (resumes after charging). Wi-Fi data transfer to phone requires granting the app necessary permissions.

Date of Purchase:	Customer Signature:
Product Bar Code:	Shop Assistant Signature:
Shop to buy:	Shop stamp:

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment, This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device can be used in portable exposure conditions without restriction.