




ZOWEETEK

Presenter ZWP03

**2.4GHz Wireless Presenter
User's Manual**



www.zoweetek.com

Overview

Thanks for your purchase of this wireless air mouse presenter. It is a mini wireless remote with laser pointer and USB receiver.

In meeting, lecturing, training and speech, this remote can perfectly operate the computer screen, HTPC and projectors, at a distance of 30m; you can also use it to enjoy home, theatre, car entertainment system, tablet and internet surfing.

In most circumstances, the red laser pointer can be used for clearing presentation at a distance of 30m; you can walk freely to interact with the audience.

Shortcuts like Page up and Page down allows you to browse data fast, the buttons are soft and easy to use.

The plug-and-play USB receiver requires no software installation, which can be place back to receiver chamber to avoid being lost.

Operation system

support Windows7, Windows8,8.1. Windows 10,
Mac OS, Linux, Android 4.3 and above.

Package contents

- 1) Wireless presenter*1
- 2) User Manual*1
- 3) Charging Cable*1

Specifications

Technology: Radio Frequency

Frequency: 2.4GHz

Control Distance: >30m

Battery: 360mAh Polymer Lithium Battery



Working Voltage: 3.7V

Sleep Current: < 10 μ A

Dimension 120*30*11.05 mm

Weight: 2g

Function Modification

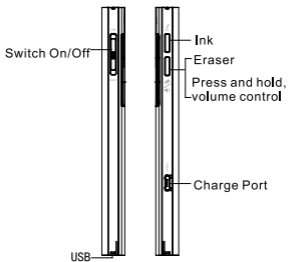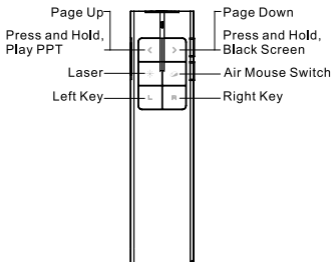


Function Description


- 1) Open PowerPoint files
- 2) Press "Page Up" button for 2 seconds to start the presentation, Press it again to Stop the presentation.
- 3) Simply press "Page Up" or "Page Down" to go forward/backward the presentation
- 4) Press "laser pointer" button to turn on the laser.
- 5) Press the mouse button to active the air mouse, press it again to lock the air mouse.
- 6) During the presentation,press the ink button and hold it to take notes, release to stop taking notes.
- 7) During the presentation, press eraser to wipe the notes.
- 8) Long press the "eraser" button to active the volume function, keep pressing it for 1 sec and hold it to control volume up/down by moving the presenter up/down

Installation

1) Take out the mini USB receiver from the wireless presenter

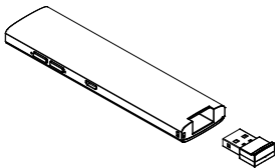


It will take several mins for the first time when using the presenter, insert the USB receiver into USB port and power on the presenter, after the driver installed, you may use the presenter freely.

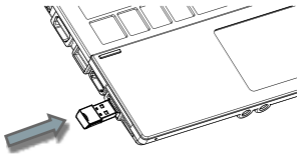

Charging the wireless presenter

- 1) Once the battery is low, the red LED light will flash slowly to remind you of charging the device.
- 2) Connect the wireless presenter to USB port, the red LED will stop flashing and show steady red, it goes into charging status.
- 3) When the red light turns off, it means the battery is full. (Usually it will take about 2 hours to fully charge the device)

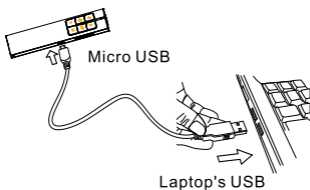

Recharging the wireless presenter via USB cable

Warning

Never try to open or repair this product yourself.
Keep this device away from fluids, such as water

Maintenance

- Do not attempt to disassemble the device.
- Doing so will avoid the warranty.
- The battery will discharge if it is stored for a long time without operation.
- Do not expose the device in extreme heat or cold environment, which will shorten the battery life.

Disposal



Always dispose the used appliance at a recycling centre. Do not dispose the used appliance together with the household waste.

Notice:

Due to 2.4G wave technolog adoption, the connection can be subject to interference from obstacles, like walls, metals or other electronic devices. Please keep the space between the keyboard and USB receiver free of obstacle.

In line with the policy of continued development, the manufacture reserves the right to amend the specifications without prior notification. The illustrations in the user manual are for reference only. Please operate according to the real design.



Website: www.zoweetek.com

Email: info@zoweetek.com

Contact: +86-755-85251755

Add: 4/F, Block 1, Zhongkenuo Industrial Park, Hezhou Industrial Zone, Xixiang, Baoan District, Shenzhen, China