


AYANEO 2_用户说明书 A_182x91mm_20220929


正面

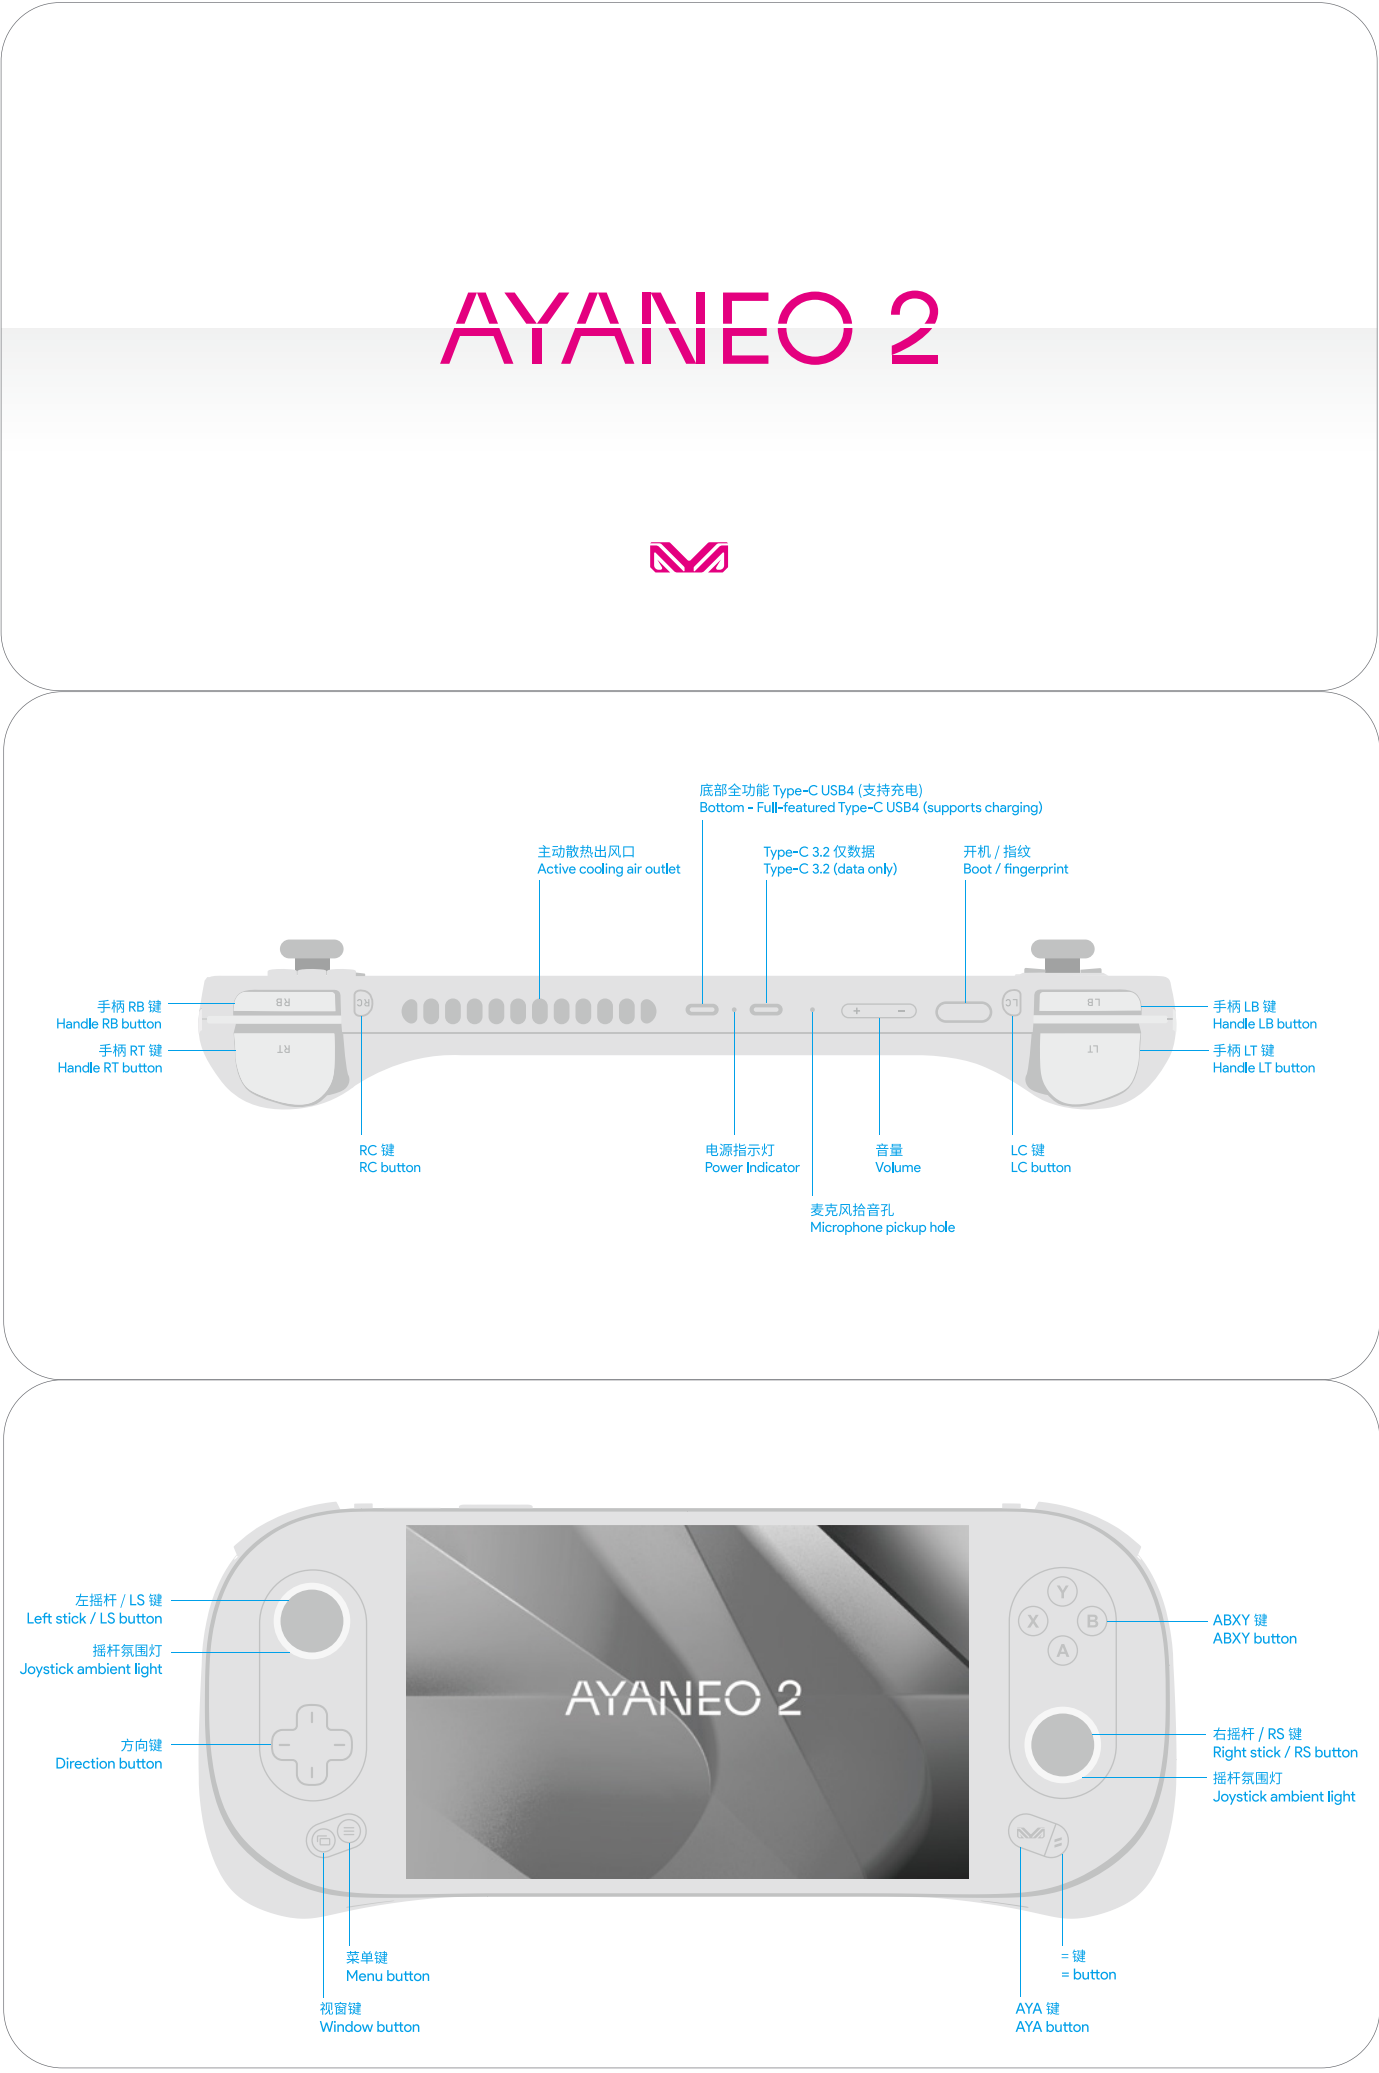

PANTONE Cool Gray 5C

PANTONE Cool Gray 8C

背面

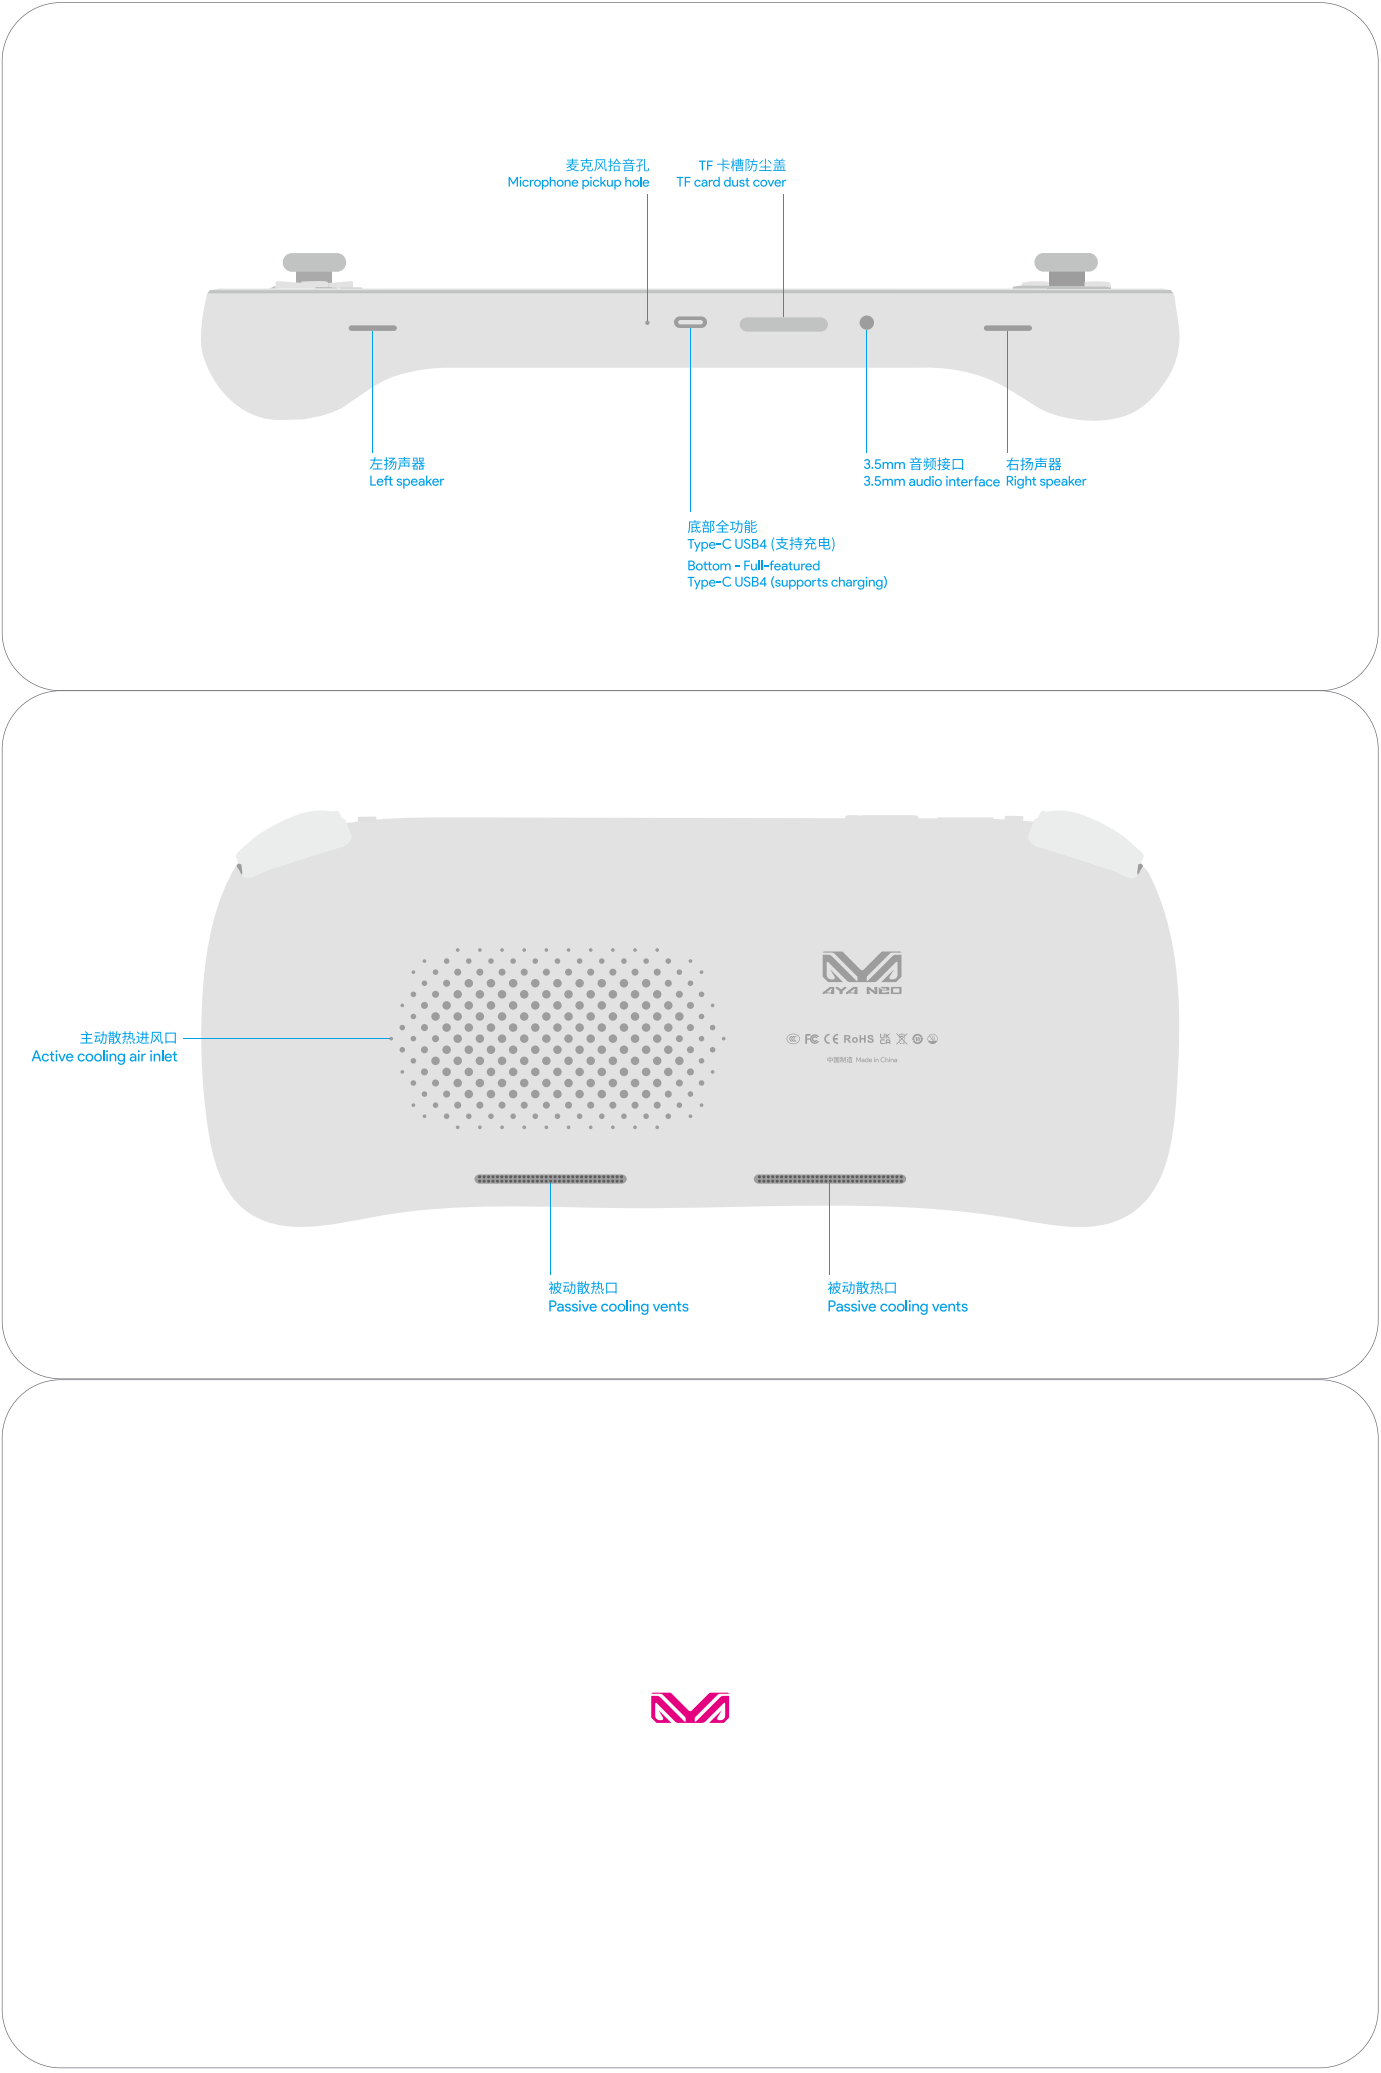

PANTONE Cool Gray 5C

PANTONE Cool Gray 8C

AYANEO 2_用户说明书 B_182x91mm_20220929

正面

Power On / Power Off / Fingerprint

In the power-off state, press and hold the power button  for 2 seconds to turn on the AYANEO. The indicator light turns in white with high brightness, and the light returns to normal brightness after entering the system interface.

In the power-on state, press and hold the power button  for 2 seconds, and a pull-down power-off menu will pop up at the top of the screen. At the same time, press and hold the power button and touch down and slide "slide to turn off the computer" to complete the shutdown of AYANEO. Or click the screen Window  > Power  > Shut Down to turn off AYANEO .

In the power-on state, press and hold the power button  for about 8 seconds to forcibly turn off AYANEO. (Note: This operation is not recommended for normal usage as it may cause a risk of data corruption)

Fingerprint recognition is supported. You need to log in to your Microsoft account or set up your own local account and password to enable the Windows Hello biometric function before you can set up the fingerprint recognition function normally.

In the Windows 11 desktop view, Window  > Settings  > Accounts  > Sign-in in Options >  Windows Hello Fingerprint Identification (Windows Hello) , register fingerprints for secure login, and each account supports a maximum of ten fingerprints.

Wake up from sleep

In the power-on state, press the power button  and then AYANEO goes to sleep, or click on the screen Window  > Power  > Sleep . When sleeping, the cooling fan stops rotating, and the indicator light breathes slowly and regularly with white light.


In the sleep mode, tap the power button  to wake up AYANEO, and the fingerprint supports S3 deep wake-up. If Windows Hello has been configured with fingerprint security login, tap the power button for about 2 seconds to wake up directly to the OS interface with the finger that has registered the fingerprint in the sleep mode, or tap the power button to wake up the screen and then tap the fingerprint recognition to enter the OS interface. No need to enter a PIN or password to log in. After a successful wake-up, the light of the joystick is always in white (default), and the cooling fan rotates normally. In different interfaces, it takes 1~3 seconds to complete the wake-up after the screen is turned on.

Battery and Charging

While AYANEO device is charging, the light turns red and after full charge, it turns to white light. When turning on the device and the power is lower than 15%, the red light flashes regularly. Please use the official included adapter to charge AYANEO devices, do not charge AYANEO with a non-safety certified adapter, it may cause damage to internal components and unpredictable danger.

When Type-C is plugged into a power source, long-time skin touch should be avoided, as this may cause discomfort or injury. DO NOT ATTEMPT TO REPLACE AYANEO BATTERIES BY YOURSELF, BATTERY MAY BE DAMAGED AND OVERHEATING TO CAUSE FIRE AND PERSONAL INJURY!

Li-ion batteries should be recycled by AYANEO and it is separate from household waste. Please follow the local environmental regulations to dispose of the battery. The battery can only be replaced by AYANEO or AYANEO authorized service centers since there is explosion or in danger once used in the wrong one.

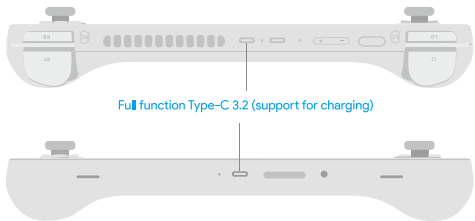

Cleaning


Please use a lint-free cloth to clean AYANEO, never get any openings wet or use aerosol sprays, solvents, or abrasives.

Volume

Tap the volume + button  to increase the volume step by step, long press to increase the volume continuously. Tap Volume -  to decrease the volume. Or click the volume icon  in the lower right corner of the system desktop interface, and slide the pop-up menu to adjust the volume .

WLAN / Bluetooth

When you need to connect to a Wi-Fi network, click the Wi-Fi icon  in the lower right corner of the desktop > click  > in the pop-up menu, select and enter the name of the network to be connected to, enter the password, and click "Next" to connect to the Wi-Fi network. To connect a Bluetooth device, click the Bluetooth icon  in the lower right corner of the screen > Add a Bluetooth device >  Click to search for the Bluetooth device to be connected.



Text input

When you need to text, click the icon  in the lower right corner to have the touch keyboard and start to text.



Notice

The operating system of this product is Windows 11 64-bit Home Edition produced by Microsoft Corporation. In desktop mode, the basic operations of Windows can be performed through the touch screen.

In desktop mode, press and hold the screen with three fingers simultaneously for 1 second, then swipe up to bring up the task view to quickly switch between applications and create a new desktop, and swipe down to minimize all applications.

If the application is unresponsive and cannot be turned off normally, long-press the window  and select Task Manager in the pop-up menu, and select the unresponsive process in the task manager to perform the "End Task" operation.

Medical device interference

Some of AYANEO's internal components contain magnets and radio-emitting electromagnetic fields that may interfere with medical devices, pacemakers, defibrillators, or other medical devices. Please maintain a safe distance between medical equipment and AYANEO. Consult your physician and medical device manufacturer for medical device information. Discontinue use of AYANEO if you suspect that AYANEO is interfering with your pacemaker, defibrillator, or other medical device.

AYANEO warrants the included hardware products and accessories for a period of one year from the date of original retail purchase. AYANEO does not warrant normal wear and tear, nor does it warrant damage from accident or abuse. To obtain services, please visit the AYANEO Marketplace or an AYANEO Authorized Service Provider, available service options depend on the country or region in which the service is requested and may be limited to the country of origin of sale. Call charges and international shipping may apply, depending on your location.

AYANEO will repair, replace or refund your AYANEO at its discretion when you submit a valid claim under the Warranty Service Policy. Your warranty rights are in addition to those provided by local consumer laws. Details of proof of purchase may be required when you make a claim under this Warranty Policy.

Warranty and support

You may consult with your local dealer for warranty and support service, and you can get online support from our website (www.ayaneo.com). Or you can contact us by service@ayaneo.com if you have any inquiries.

背面

开机 / 关机 / 指纹

关机状态下, 长按开机按钮  2秒将 AYANEO 开机. 指示灯以较高亮度亮白色灯, 正进入系统界面后指示灯恢复正常亮度。

开机状态下, 长按开机按钮  2秒屏幕顶部弹出下拉关机菜单同时按住电源键不放向下触控滑动"滑动以关闭电脑"完成关闭 AYANEO 操作, 或者点击屏幕 视窗  > 电源  > 关机  关闭 AYANEO。

开机状态下, 长按开机按钮  约 8 秒则强制关闭 AYANEO。
(注: 正常使用场景不推荐此操作, 此操作可能会导致数据损坏风险)

支持指纹识别, 需登录微软账户或自行设置本地账户及密码后启用 Windows Hello 生物识别功能才可正常使用指纹识别功能。
Windows 11 桌面视图下: 视窗  > 设置  > 账户  > 登录选项  > 指纹识别 (Windows Hello) , 录入启用指纹安全登录, 每个账户最大支持录入十个指纹。

睡眠唤醒

开机状态下点按开机按钮  AYANEO 进入睡眠状态, 或者点击屏幕视窗  > 电源  > 睡眠 。睡眠时散热风扇停止转动, 指示灯以白灯缓慢有规律呼吸。


睡眠状态下点按开机按钮  将 AYANEO 唤醒, 指纹支持 S3 深度唤醒, Windows Hello 已配置指纹安全登录的, 休眠状态下用已录入指纹手指轻触开机按钮约 2 秒直接唤醒进入 OS 界面, 或者点按开机按钮唤醒屏幕后再轻触识别指纹后进入 OS 界面, 无需输入 PIN 及密码登录。成功唤醒后插杆氛围灯常亮白色 (默认), 散热风扇正常转动, 不同界面下需要等待 1~3 秒才可以亮屏完成唤醒。

电池和充电

AYANEO 进行充电时, 指示灯橙红色常亮, 当电池充满时白灯常亮。开机状态下电量低于 15% 时, 指示灯将橙红灯并有规律闪烁。请使用附带的适配器对 AYANEO 进行充电, 切勿使用无安全认证适配器对 AYANEO 充电, 可能会造成内部元件损坏和不可预知的危险。

当 Type-C 插入电源时应避免皮肤与插头长时间接触, 否则可能会引起不适或受伤。请勿尝试自行更换 AYANEO 电池, 您可能会损坏电池, 从而导致过热可能引发火灾和人身伤害。

AYANEO 的锂离子电池应由 AYANEO 提供相关服务或进行回收, 它必须和家庭垃圾分开回收处理。请按照当地的环保法规来处理电池。电池只能由 AYANEO 或者 AYANEO 授权服务提供商进行更换, 用错误型号号电池更换会有爆炸危险。

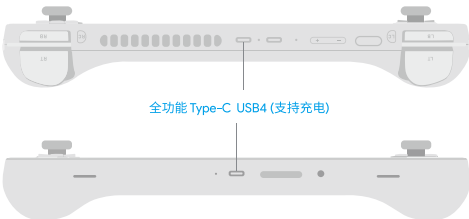

清洁

请使用不起绒的布来清洁 AYANEO, 切勿使任何一个开口处受潮或使用气雾喷射、溶剂或研磨剂。

音量

点按音量  音量逐级增加, 长按则连续增加音量。点按音量  音量减小, 或者系统桌面界面下点击右下角音量图标  在弹窗菜单滑动调节音量大小 .

WLAN / 蓝牙

需要连接 WLAN 网络时, 点击桌面右下角 WLAN 图标  > 在弹窗菜单点击  进入并选取需要连接网络名称, 输入密码后点击"下一步"连接到 WLAN 网络。需连接蓝牙设备时, 点击屏幕右下角蓝牙图标  > 添加蓝牙设备 >  点击搜索需要连接的蓝牙设备。



文本输入

需要输入文本时, 点击右下角  图标呼出触摸键盘, 使用触控输入文本。



注意事项

本产品的操作系统为微软公司出品的 Windows 11 64 位家庭版, 在桌面模式下, 可以通过触控屏幕进行 Windows 的基本操作。

桌面模式下三指同时点按住屏幕 1 秒后向上滑动, 调出任务视图可快速切换应用及新建桌面, 向下滑动则最小化所有应用。

应用程序出现无响应, 无法正常关闭的情况下, 长按视窗  在弹出菜单选择 任务管理器, 在任务管理器中选中无响应的进程进行"结束任务"操作。

医疗设备干扰

AYANEO 内部部分元件包含磁体及无线电发射电磁场, 这些电磁场可能会干扰医疗设备、心脏起搏器、除颤器或其他医疗设备。请在医疗设备和 AYANEO 之间保持一定的安全距离。请咨询您的医师和医疗设备制造商以获得医疗设备信息。如怀疑 AYANEO 干扰您的心脏起搏器、除颤器或者其他医疗设备, 请停止使用 AYANEO。

AYANEO 保证所附硬件产品和配件, 从原先零售购入的日期起一年内, AYANEO 对正常磨损不作担保, 对事故或滥用造成的损坏也不做担保。若要获取服务, 请访问 AYANEO 商城或者 AYANEO 授权服务提供商, 可用的服务选项取决于请求的服务所在的国家或地区, 并且可能限制为销售的原始国家和地区。可能需要支付通讯费用和运费, 这取决于您的位置。

当您根据保修服务政策提交有效的索赔时, AYANEO 将为您 AYANEO 酌情进行维修、更换或退款。您享有的保修权益是附加在本地消费者法律所提供的权力以外的。当您根据本保修政策提出索赔时, 可能需要提供购买凭证的详细信息。

支持

更多支持和故障排除信息、驱动软件、及最新的 AYA Space 下载, 请访问 www.ayaneo.com.cn。

PANTONE Cool Gray 8C

PANTONE Cool Gray 8C

AYANEO 2 _三包说明书 C_182x91mm_20220929

正面

背面

说明

一、请妥善保管本三包凭证,本三包凭证和购机发票一起作为保修凭证,在保修期内享受免费保修。

二、“三包”有效凭证

在“三包”有效期内产品出现故障,消费者需凭购机发票和此三包凭证享受免费维修服务,所修理产品机身号码同三包凭证上的产品机身号码必须一致。如无购机发票,则以产品机身号码的生产出厂日期作为消费者产品“三包”有效期的起始时间。如两者全无的消费者,则不能享受免费维修服务,我司将实行收费维修服务。

三、根据《部分商品修理更换退货责任规定》,属下列情况之一者,不实行“三包”,但可实行收费维修:

1. 超出本公司产品保修期范围内的;

2. 无法同时出示购机发票和填写保修凭证,或保修凭证上与维修产品的型号、机身号码不符或涂改;

3. 非承担三包的修理者进行修理或者拆卸、改装等引起的故障和损坏;

4. 未按照产品使用说明的要求使用、维护、保管而造成的故障和损坏;

5. 使用非本公司所制造的产品配件引起的产品故障和损坏;

6. 由于跌落、移动、运输等非产品质量原因引起的故障和损坏;

7. 油烟、灰尘、受潮、直射阳光等恶劣条件下使用产生的故障和损坏;

8. 由于雷击、水灾、火灾、地震、风灾等自然灾害及异常电压、公害、化学物质的侵蚀而造成的故障和损坏;

9. 使用盗版软件造成损坏的;

10. 使用过程中感染病毒造成损坏的。

四、超过“三包”有效期或“三包”责任范围的,按照 AYANEO 规定的收费标准实施收费服务。

在线自助服务: www.ayaneo.com.cn

技术支持热线: 400-039-8088

维修记录项目

送修日期	故障描述 故障原因 处理结果	使用配件	交验日期	修理单位 名称	维修人员 签字

AYANEO 商品三包凭证

商品名称

商品商标

商品序列号

商品产地

销售单位名称

销售单位地址

销售单位邮政编码

销售发票号码

销售日期

消费者姓名

消费者地址

消费者邮政编码

消费者联系电话

修理单位名称

修理单位地址

修理单位邮政编码

修理单位联系电话

产品标签

销售单位印章

AYANEO 严格按照《微型计算机商品修理更换退货责任规定》,为购买 AYANEO 商品的消费者实行三包。若服务条款与三包规定有不符之处,以三包规定及三包凭证内容为准。对于执行特别三包目录的地区,AYANEO 承诺遵守当地的相关规定。



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information: This device meets the government's requirements for exposure to radiowaves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.