

Air conditioner

User manual

AC***HEH*KG, Ducted split indoor unit

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.



DB68-13833A-00

SAMSUNG

Contents

Safety Information	3
Safety Information	3
At a Glance	8
Indoor Unit Overview	8
Cleaning and Maintenance	9
Periodical checks	9
Internal protections via the unit control system	10
Appendix	11
SmartThings app	11
Troubleshooting	14
Operation Features	20
Operating temperature and humidity	20
DEMAND RESPONSE MODE (DRM 1, 2, 3)	21



***Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)***

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Safety Information

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have any questions, call your nearest contact centre or find help and information online at www.samsung.com.



WARNING

Hazards or unsafe practices that may result in severe personal injury or death.



CAUTION

Hazards or unsafe practices that may result in minor personal injury or property damage.



NOTE

Supplementary information that may be useful

Symbol	Meaning
A2L 	WARNING: Low burning velocity material (This appliance is filled with R-32.)
	Refer to operating manual
	Read operating manual
	Read installation and service manual

Safety Information

FOR INSTALLATION



WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury.

This product is equipped with a safety device that operates on electricity.

- To ensure normal operation of the safety device, power must be supplied to the product at all times after installation, except when repairing it.

This product is equipped with a refrigerant leak sensor for the purpose of safety.

- To ensure normal operation of the refrigerant leak sensor, power must be supplied to the product at all times after installation, except when repairing it.



CAUTION

The product shall be stored in a room with no ignition sources (e.g. open flames, gas appliance, electric heater, etc.).

- Note that the refrigerant has no odour.

FOR POWER SUPPLY



WARNING

When the circuit breaker is damaged, contact your nearest service centre.



CAUTION

When during a thunder/lightning storm, cut the power at the circuit breaker.

- Failing to do so may result in electric shock or fire.

FOR USING



WARNING

If the appliance is flooded, please contact your nearest service centre.

- Failing to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, cut-off the power supply immediately and contact the nearest service centre.

- Failing to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power line. Do not touch the appliance or power line.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

To reinstall the air conditioner, please contact your nearest service centre.

- Failing to do so may result in problems with the product, water leakage, electric shock, or fire.
- A delivery service for the product is not provided. If you reinstall the product in another location, additional construction expenses and an installation fee will be charged.
- Especially, when you wish to install the product in an unusual location such as in an industrial area or near the seaside where it is exposed to salt in the air, please contact your nearest service centre.

Do not touch the circuit breaker with wet hands.

- This may result in electric shock.

Do not turn the air conditioner off with the circuit breaker while it is operating.

- Turning the air conditioner off and then on again with the circuit breaker may cause a spark and result in electric shock or fire.

Do not touch the front panel with your hands or fingers during the heating operation.

- This may result in electric shock or burns.

Do not insert your fingers or foreign substances into the air inlet/outlet of the air conditioner.

- Take special care that children do not injure themselves by inserting their fingers into the product.

Do not strike or pull the air conditioner with excessive force.

- This may result in fire, injury, or problems with the product.

Do not place an object near the outdoor unit that allows children to climb onto the machine.

- This may result in children seriously injuring themselves.

Do not use this air conditioner for long periods of time in badly ventilated locations or near infirm people.

- Since this may be dangerous due to a lack of oxygen, open a window at least once an hour.

If any foreign substance such as water has entered the appliance, cut-off the power supply and contact the nearest service centre.

- Failing to do so may result in electric shock or fire.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse.
- Failing to do so may result in electric shock, fire, problems with the product, or injury.

Safety Information



CAUTION

Do not place objects or devices under the indoor unit.

- Water dripping from the indoor unit may result in fire or property damage.

Check that the installation frame of the outdoor unit is not broken at least once a year.

- Failing to do so may result in injury, death or property damage.

Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

When the air conditioner does not operate properly for cooling or heating, there is a possibility of refrigerant leakage. If any leakage, stop operation, ventilate the room, and consult your dealer to recharge the refrigerant.

The refrigerant is not harmful. However, if it comes in contact with fire, it may generate harmful gases and there is a risk of fire.

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not drink the water from the air conditioner.

- The water may be harmful to humans.

Do not apply a strong impact to the remote controller and do not disassemble the remote controller.

Do not touch the pipes connected with the product.

- This may result in burns or injury.

Do not use this air conditioner to preserve precision equipment, food, animals, plants or cosmetics, or for any other unusual purposes.

- This may result in property damage.

Avoid directly exposing humans, animals or plants to the air flow from the air conditioner for long periods of time.

- This may result in harm to humans, animals or plants.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR CLEANING



WARNING

Do not clean the appliance by spraying water directly onto it. Do not use benzene, thinner, alcohol or acetone to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, cut-off the power supply and wait until the fan stops.

- Failing to do so may result in electric shock or fire.



CAUTION

Take care when cleaning the surface of the heat exchanger of the outdoor unit since it has sharp edges.


- To avoid cutting your fingers, wear thick cotton gloves when cleaning it.
- This should be done by a qualified technician please contact your installer or service centre.

Do not clean the inside of the air conditioner by yourself.


- For cleaning inside the appliance, contact your nearest service centre.
- When cleaning the internal filter, refer to the descriptions in the 'Cleaning and Maintaining' section.
- Failure to do so may result in damage, electric shock or fire.
- Make sure to prevent any injury from sharp edges of the surface when handling the heat exchanger.

Indoor Unit Overview


AC071HEHDKG/SA, AC090HEHDKG/SA, AC100HEHDKG/SA, AC120HEHDKG/SA, AC140HEHDKG/SA

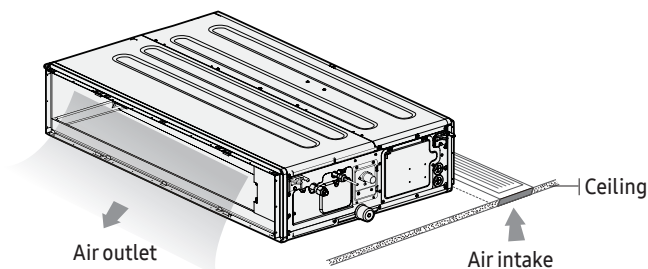

AC100HEHPKG/SA, AC120HEHPKG/SA, AC140HEHPKG/SA, AC100HEHFKG/SA, AC120HEHFKG/SA
AC140HEHFKG/SA, AC160HEHPKG/SA

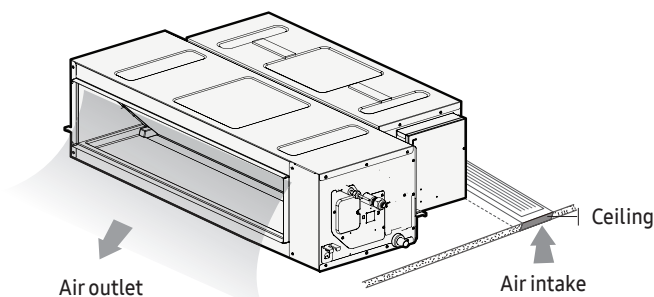

AC160HEHFKG/SA, AC180HEHPKG/SA (Flare Type)
AC180HEHFKG/SA, AC200HEHPKG/SA (Braze type)

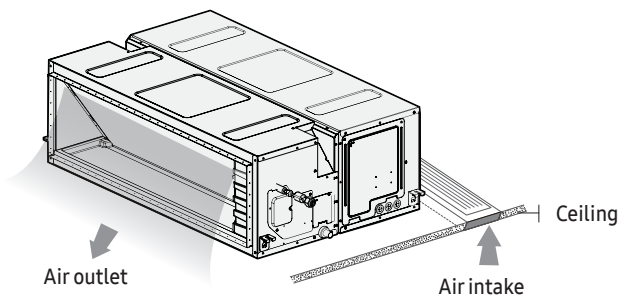

NOTE

- Your air conditioner and display may look slightly different from the illustration shown above depending on your model.

Maintaining the Air Conditioner

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain in best conditions.

1. Dry the air conditioner thoroughly by operating in Fan mode for 3 to 4 hours and disconnect the power plug. There may be internal damage if moisture is left in components.
2. Before using the air conditioner again, dry the inner components of the air conditioner again by running in Fan mode for 3 to 4 hours. This helps remove odours that may have generated from dampness.

Periodical checks

Refer to the following chart to maintain the air conditioner properly.

Unit	Maintenance item	Interval	Requires qualified technicians
Indoor unit	Clean the condensate drain pan.	Once a year	Required
	Clean the heat exchanger.	Once a year	Required
	Clean the condensate drainpipe.	Once every 4 months	Required
	Replace R-32 detecting sensor. (The R-32 refrigerant detection sensor is an optional product.)	10 years	Required
Outdoor unit	Clean the heat exchanger.	Once every 3 months	Required
	Clean the electric components with jets of air.	Once a year	Required
	Verify that all the electric components are firmly tightened.	Once a year	Required
	Clean the fan.	Once a year	Required
	Verify that the fan assemblies are firmly tightened.	Once a year	Required
	Clean the condensate drain pan.	Once a year	Required

NOTE

- The checks and maintenance operations described above are essential to guarantee the efficiency of the air conditioner. The frequency of these operations may vary depending on the characteristics of the area, the amount of dust, etc.
 1. The above mentioned operations should be performed more frequently if the area of installation is very dusty.
 2. These operations must always be performed by qualified personnel. For more detailed information, refer to the Installation Manual.
 3. In some cases, if the period of use date exceed 10 years (3650 days), "E699" is displayed on the wired remote control and the product works normally. If the period of use date exceed 10 years 3 months (3740 days), "E700" is displayed on the wired remote control and the product does not work. It must be replaced through Samsung Electronics Service Center before the expiration of the period of use date.



Maintaining the Air Conditioner

Internal protections via the unit control system

The air conditioner control system has internal protections for user comfort and system faults.

Type	Description
Cold air prevention	While in heat mode, the internal fan will not operate while the indoor unit coil is warming up to prevent circulation of cold air.
De-ice cycle	While the heat pump defrosts, the internal fan will not operate to prevent circulation of cold air.
Anti-protection of internal battery	The compressor will be off to protect internal battery when the air conditioner operates in Cool mode.
Protect compressor	The air conditioner does not start operating immediately to protect the compressor of the outdoor unit after it has been started.

 NOTE

- If the heat pump is operating in Heat mode, the de-ice cycle is actuated to remove frost from an outdoor unit that may have deposited at low temperatures.
- The internal fan is switched off automatically and restarted only after the de-ice cycle is completed.
- When the de-ice cycle is operating, it may generate strange sound. It is normal operation for product safety.



SmartThings app

To use the SmartThings app, connect the product to the network in the sequence described below. The images shown may differ depending on your smartphone model, OS version and manufacturer. You need to set up the Wi-Fi access point only when connecting the product to a Wi-Fi network. Once the product is connected, you can use the SmartThings app via Wi-Fi, 3G, LTE, 5G or more wireless networks. You can easily install the SmartThings app or use the product with your smartphone by scanning the SmartThings QR code on the label.

1 Checking the power connections

Check if the power is connected to the product and the access point.

2 Setting up and connecting to a Wi-Fi access point using your smartphone


1 To connect the product to a Wi-Fi network, turn on Wi-Fi at “Settings > Wi-Fi”, and then select the access point to connect to

- Only alphanumeric characters are supported for wireless access point names (SSIDs). If an SSID has a special character, rename it before connecting to it.
- This product supports only Wi-Fi 2.4 GHz.



2 Turning off “Switch to mobile data” at “Settings > Wi-Fi” on your Smartphone

- If “Switch to mobile data” or “Adaptive Wi-Fi” is turned on, you cannot connect to the network. Be sure to turn off these functions before connecting to the network.

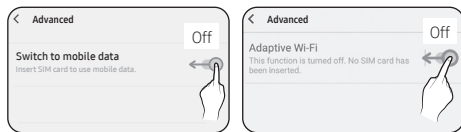

NOTE

- The setup may differ depending on your smartphone model, OS version and manufacturer.

3 Checking the Internet connectivity

- After connecting to Wi-Fi, check that your smartphone is connected to the Internet.

NOTE

- A firewall may prevent your smartphone from connecting to the Internet. Contact your Internet service provider for troubleshooting.

3 Downloading the SmartThings app and registering your Samsung account

1 Downloading the SmartThings app

- Search for “SmartThings” on the Play Store or App Store and download the SmartThings app to your smartphone.
- If the SmartThings app is already installed on your smartphone, update it to the latest version.

NOTE

- The SmartThings app supports Android OS 7.0 or later (with at least 2 GB RAM) and iOS 12.0 or later. The app is optimized for iPhone 6s or later and Samsung smartphones (Galaxy S and Note series). The updates of the SmartThings app or the functions supported by it may be discontinued for the previously supported OS versions due to reasons such as usability and security.
- The SmartThings app may change without prior notice to improve product usability and performance.

SmartThings app

2 Registering your Samsung account

- A Samsung account is required to use the SmartThings app. To create your Samsung account and log in to your account, follow the instructions displayed on the SmartThings app. You do not need to install an additional app.


NOTE

- If you already have a Samsung account, log in to the account. If you have a smartphone that is a Samsung device and you have a Samsung account, your smartphone is automatically logged in to your account.
- If you log in from a smartphone produced for another country, you need to log in with its country code when you create your Samsung account, and the SmartThings app may not be used on some smartphones.

4 Connecting the SmartThings app to your product

1 Selecting the product to connect to

- 1) Start the SmartThings app about one minute after turning on the product to connect to.
- 2) After the SmartThings app is started, select 'ADD NOW' when a pop-up window saying that a product to connect to is found appears.

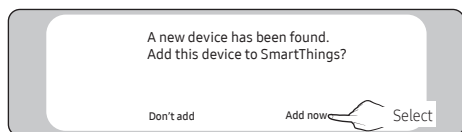


- 3) If the pop-up window does not appear, select "+", and then "Add Device".



You can add a product you want to connect to by selecting it manually or by selecting "Scan nearby".

- Select manually: Samsung devices > Air conditioner
- Scan: Scan nearby > Air conditioner

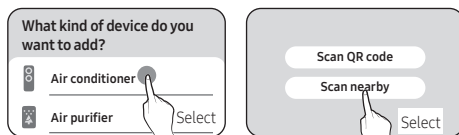

2 Connecting the SmartThings app to your product

- Follow the instructions displayed on the SmartThings app to connect to your product.
- For information on how to use the SmartThings app, select the How To menu on the app.

NOTE

- If any pop-up window appears on the top of the smartphone while connecting to your product, do not select it.
- If a pop-up window saying that the device is already registered appears during connecting to your product, get permission using "REQUEST PERMISSION" from a user already connected to the product, or create a new account using "REGISTER MY ACCOUNT" to independently connect to the product.
- If a Samsung account-related country error occurs while connecting to your product, log out of your current Samsung account, log in to your previous Samsung account, and then delete all devices that have been connected previously. Then, log in to your current Samsung account again, and then configure the settings.

- If a failure message appears while adding a device, see “Setting up and connecting to a Wi-Fi access point using your smartphone” on page 11. The connection may fail temporarily due to an installation location problem of the access point or other problems.
- If a message appears on the SmartThings app, follow its instructions.

NOTE

- For the security protocols for wireless/wired access points, WPA-PSK and WPA2-PSK are recommended. For the authentication methods, AES is recommended. New Wi-Fi authentication specifications and Wi-Fi non-standard authentication methods are not supported.
- The product supports the IEEE802.11 b/g/n (2.4 GHz) communication protocol. (Samsung recommends IEEE802.11n.)
- If your Internet service provider permanently has registered the MAC address (a unique identification number) of your PC or modem, you may not be able to connect your product to the Internet. Contact your Internet service provider and ask how to connect devices other than your PC (such as an air conditioner and an air purifier) to the Internet.

Open Source Announcement

The software included in this product contains open source software.

The following URL http://opensource.samsung.com/opensource/SMART_TP1_0/seq/0 leads to open source license information as related to this product.



Security updates information

Security updates are provided to strengthen the security of your device and protect your personal information. For more information on security updates, visit <https://security.samsungda.com>.

* The website supports only some languages.

Troubleshooting

Refer to the following chart if the air conditioner operates abnormally. This may save time and unnecessary expense.

Problem	Solution
The product does not work. Error E696	• This is intended to determine whether there is a leak or not, as R-32 refrigerant is sensed. • The indoor unit determines again whether or not there is a refrigerant leak while operating for 2 minutes using Fan mode (specifically High speed). If there is no refrigerant leak, the indoor unit stops operating, the error is cleared and the product can operate normally. • The R-32 sensor, embedded in the indoor unit, reacts not only to R-32 refrigerant but also to high-concentration chemicals (e.g. organic solvents, hair spray and paint). Do not use any high-concentration chemicals in the vicinity of the indoor unit, as these may cause false operation of the sensor.
The product does not work. Error E697	• This error occurs when indoor unit detect R-32 refrigerant leaks. • Ventilate the room for which the alarm was activated. • Contact the Samsung Electronics service center for assistance.
The product does not work. Error E116, E698, E700	• This error occurs when the R-32 refrigerant sensor has a malfunction or the sensor's life has expired. • Display "E116" or "E698" when a sensor failure occurs. • The R-32 sensor's lifespan is 10 years 3 months. If the period of use date exceed 10 years 3 months (3740 days), "E700" is displayed on the wired remote control and the product does not work. • Contact the Samsung Electronics service center for assistance.
The product does not work. Error E797	• This error occurs when another indoor unit that shares the outdoor unit detects the R-32 refrigerant. • Ventilate the of Room for which the alarm was acticated. • Contact the Samsung Electronics service center for assistance.

Problem	Solution
The air conditioner does not operate immediately after it has been restarted.	Because of the protective mechanism, the appliance does not start operating immediately to keep the unit from overloading. The air conditioner will start in 3 minutes.
The air conditioner does not operate at all.	- Check if the power plug is properly connected. - Check whether the auxiliary power switch (MCCB, ELB) is turned on. - If the auxiliary power switch (MCCB, ELB) is turned off, the air conditioner does not work although you press the  (Power) button. - When you clean the air conditioner or do not use it for an extended period of time, turn off the auxiliary power switch (MCCB, ELB). - After the air conditioner is not used for an extended period of time, be sure to turn on the auxiliary power switch (MCCB, ELB) 6 hours before starting operation.  NOTE - The auxiliary power switch (MCCB, ELB) is sold separately. - Make sure that auxiliary power switch (MCCB, ELB) is installed in the distribution box inside the building. - If the air conditioner is turned off by the Timed off function, turn on the air conditioner again by pressing the  (Power) button.
The temperature does not change.	Check whether the Fan mode is running. In the Fan mode, the air conditioner controls the set temperature automatically, and you cannot change the set temperature.
Warm air does not come out of the air conditioner.	- Check whether the outdoor unit is designed for cooling only. In this case, warm air does not come out although you select the Heat mode. - Check whether the remote control is designed only for cooling only. Use a remote control that supports both cooling and heating.

Troubleshooting

Problem	Solution
The fan speed does not change.	Check whether the Auto or Dry mode is running. In these modes, the air conditioner controls the fan speed automatically, and you cannot change the fan speed.
The wireless remote control does not operate.	- Check whether the batteries are discharged. Replace the batteries with new ones. - Make sure that nothing is blocking the remote control sensor. - Check whether any strong lighting sources are near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interfere with the remote control.
The wired remote control does not operate.	Check whether the  indicator is displayed at the bottom right of the remote control display. In this case, turn off both the air conditioner and the auxiliary power switch, and then contact a service centre.
The air conditioner is not turned on or off immediately with the wired remote control.	Check whether the wired remote control is set for group control. In this case, the air conditioners connected to the wired remote control are turned on or off sequentially. This operation takes up to 32 seconds.
The Timed on/off function does not operate.	Check whether you pressed the  (SET) button on the remote control after setting the on/off time. Set the on/off time.
The indoor unit display blinks continuously.	- Turn on the air conditioner again by pressing the  (Power) button. - Turn off and then turn on the auxiliary power switch, and then turn on the conditioner. - If the indoor unit display is still blinking, contact a service centre.
I want to get cooler air.	Operate the air conditioner with a electric fan to save energy and enhance the cooling efficiency.

Problem	Solution
The air is not cool or warm enough.	• In the Cool mode, cool air does not come out if the set temperature is higher than the current temperature. – Remote control: Press the Temperature button repeatedly until the set temperature [minimum : 18°C] is set to lower than the current temperature. • In the Heat mode, warm air does not come out if the set temperature is lower than the current temperature. – Remote control: Press the Temperature button repeatedly until the set temperature [maximum : 30°C] is set to higher than the current temperature.
The air is not cool or warm enough.	• Both cooling and heating do not operate in the Fan mode. Select the Cool, Heat, Auto, or Dry mode. • If a cover is on the outdoor unit or any obstacle is present near the outdoor unit, remove them. • Install the outdoor unit in a well-ventilated place. Avoiding places exposed to direct sunlight or close to a heating appliance. • Place a sunscreen over the outdoor unit to protect it from direct sunlight. • If the indoor unit is installed in a place exposed to direct sunlight, pull the curtains on the windows. • Close the windows and doors to maximize the cooling and heating efficiencies. • If the Cool mode is stopped and then started immediately, cool air comes out after about 3 minutes to protect the compressor of the outdoor unit. • When the Heat mode is started, warm air does not come out immediately to prevent cool air from coming out at the beginning. • If the refrigerant pipe is too long, the cooling and heating efficiencies may be decreased. Avoid exceeding the maximum pipe length.

Troubleshooting

Problem	Solution
The air conditioner makes strange noises.	- In certain conditions (especially, when the outdoor temperature is lower than 20°C), a hissing, rumbling, or splashing sound may be heard while the refrigerant is circulating through the air conditioner. This is a normal operation. - When you press the  (Power) button on the remote control, noise may be heard from the drain pump inside the air conditioner. This noise is a normal sound.
Unpleasant odours permeate the room.	- If the air conditioner is running in a smoky area or if there is a smell entering from outside, ventilate the room properly. - If both indoor temperature and indoor humidity are high, operate the air conditioner in the Clean or Fan mode for 1 to 2 hours. - If the air conditioner has not been operated for an extended period of time, clean the indoor unit and then operate the air conditioner in the Fan mode for 3 to 4 hours to dry the inside of the indoor unit for removal of unpleasant odours.
Steam is produced on the indoor unit.	In winter, if the indoor humidity is high, steam may be produced around the air outlet while the defrost function is running. This is a normal operation.
The outdoor unit fan continues to operate when the air conditioner is turned off.	When the air conditioner is turned off, the outdoor unit fan may continue to operate to reduce noise of the refrigerant gas. This is a normal operation.
Water drops from the piping connections of the outdoor unit.	Condensation may develop due to the difference in temperature. This is a normal condition.
Steam is produced on the outdoor unit.	In winter, when the air conditioner runs in the Heat mode, the frost on the heat exchanger melts and steam may be produced. This is a normal operation, neither product malfunction nor a fire.

Problem		Solution
The installed SmartThings app cannot access the air conditioner.		Make sure you have connected the air conditioner to a wireless router.
I cannot log in with my Samsung account.		Try recovering your ID and password from the Samsung account page.
Adding device(s)	A failure message appears while adding devices.	This may fail temporarily due to the distance from the router or some interferences. Try again later.
	I found a failure message in 0 to 1 percent of device addition process.	You cannot add any device without deleting it once the device has already been added to the SmartThings app. To add the connected device again, first remove it and then proceed with the process.
	I found a failure message in 99 percent of device addition process.	- If you are using a Samsung smartphone, the server may not be connected temporarily. Restart the SmartThings app and then try adding the device again. - If your phone is not a Samsung product, check that you have entered a wrong Wi-Fi password. Try adding devices again.
	The app displays an authorization failure before pressing the user agreement button.	Check if a Wi-Fi Kit Single is already connected from the SmartThings app. When there are devices added, first remove them and try again.
	The app displays an authorization failure on the user agreement screen.	Make sure to press the [Power] button within 2 minutes after the screen appears. Try adding devices again.
	The screen requests to initialize the user account.	This happens when the user has already added devices. Follow the instructions provided in the SmartThings app.
After adding a device, the SmartThings app displays the disconnection event.		This happens when a device is being added to the server or it is temporarily disconnected from the router. End the SmartThings app and then launch it again.

Operation Features

Operating temperature and humidity

Mode	Outdoor temperature	Indoor temperature	Indoor humidity
Cool mode	-15°C to 50°C	18°C to 32°C	80% or less
Heat mode	-20°C to 24°C	30°C or less	-
Dry mode	-15°C to 50°C	18°C to 32°C	80% or less


 CAUTION

- If you use the air conditioner at a relative humidity above 80%, it may cause a formation of condensation and a leakage of water on the floor.
- The rated heating capacity is based on an outdoor temperature of 7°C. If the outdoor temperature goes down below 0°C, heating efficiencies may decrease depending on the temperature conditions.
- If the indoor unit is out of the operating temperature and humidity range, the safety device may operate and the air conditioner may stop.

DEMAND RESPONSE MODE (DRM 1, 2, 3)

This air conditioner is equipped with a Demand Response unit which will respond to a signal sent by the power supply utility during emergency conditions.

- During a Demand Response Event, the indoor and outdoor unit will be operated according to DRM mode(DRM 1, 2, 3) and the remote controller will show “ ID1”, “ ID2”, “ ID3” on the display.

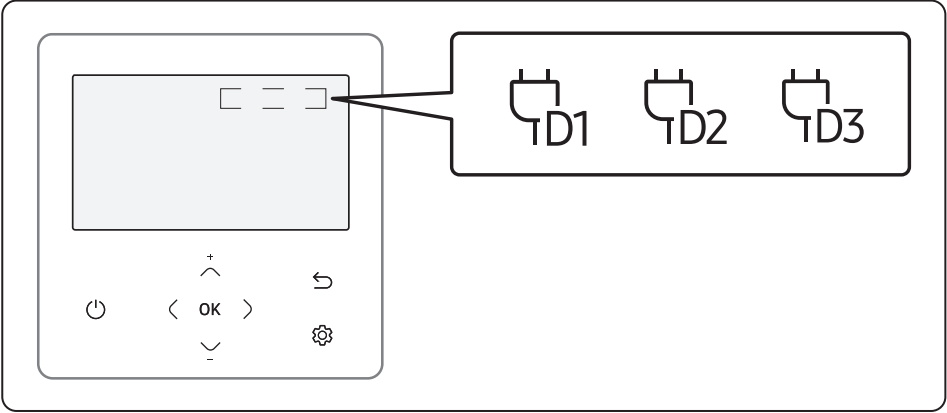

AIR CONDITIONER DEMAND RESPONSE MODES			
Operational instruction (OI)	Demand response mode (DRM)	Description of operation in this mode	Mandatory for compliance with this Standard (AS/NZS 4755.3.1)
OI 1	DRM 1	Compressor off	Yes
OI 2	DRM 2	The air conditioner continues to cool or heat during the demand response event, but the electrical energy consumed by the air conditioner in a half hour period is not more than 50% of the total electrical energy that would be consumed if operating at the rated capacity in a half hour period.	No
OI 3	DRM 3	The air conditioner continues to cool or heat during the demand response event, but the electrical energy consumed by the air conditioner in a half hour period is not more than 75% of the total electrical energy that would be consumed if operating at the rated capacity in a half hour period.	No

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au/support