

USER MANUAL



Baby Monitor

CONTENTS

SAFETY INSTRUCTIONS	01
CAUTION	01
PACKAGE CONTENTS	02
PRODUCT DIAGRAM	03
Camera	03
Baby Monitor	04
GETTING STARTED	05
1. Charging & Powering Baby Monitor	05
2. Powering Camera	05
3. Placing the Camera	05
FUNCTIONS & OPERATIONS	06
Monitor Interface overview	06
Top Status Indications	06
1. Talkback	07
2. Digital Zoom & Circulating	08
3. Pan-n-Tilt	08
4. Night Vision	08
5. Volume Adjustment	08
6. Display Brightness Adjustment	09
7. Camera	10
8. Alarm	13
9. Lullabies	14
10. VOX	14
11. Temperature Alert	15
12. Monitor Settings	15
SPECIFICATIONS	16
Screen	16
Camera	17

SAFETY INSTRUCTIONS

- Keep cord out of the reach of children (more than 3ft / 0.9m away) in case of STRANGULATION.

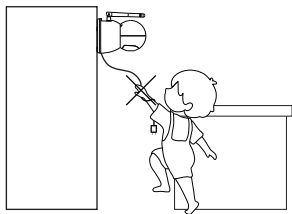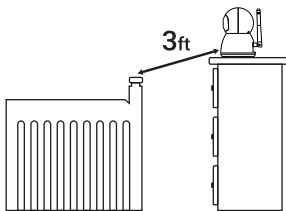



- NEVER place the camera or cord in or near the crib or playpen.
- NEVER mount the camera directly above the crib or playpen to avoid the risk of injury.
- Only use the AC adapters provided.
- Never use the unit near water, including near a bathtub, sink, laundry machine tube, wet basement, etc.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- Only use attachments and accessories specified by the manufacturer.
- Unplug this device when unused for long periods of time.

CAUTION

NOT toys. Do not allow children to play with them

- This product is NOT intended to replace the proper supervision of children. You MUST check your child's activity regularly.
 - This product is not intended for use as a medical camera and its use should not replace adult supervision.
 - Unplug the product during lightning storms.
 - Please check the operating range and condition of the camera carefully at the initial installation, and on a regular basis after that.
 - Check the reception regularly. Test the camera before use and after changing the camera's location.
 - Clean the camera with a dry cloth only.
- Do not block any ventilation openings.

PACKAGE CONTENTS

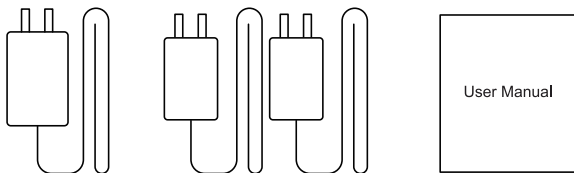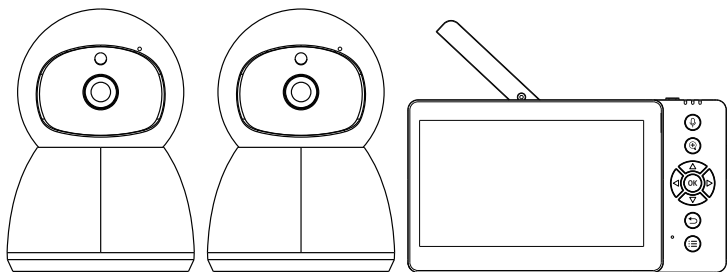


Baby Monitor & Camera (Model: VBM01)




- Adapter x 3 (5V 1A)
- USB-C Cable x 3
- User Manual

PRODUCT DIAGRAM

Camera

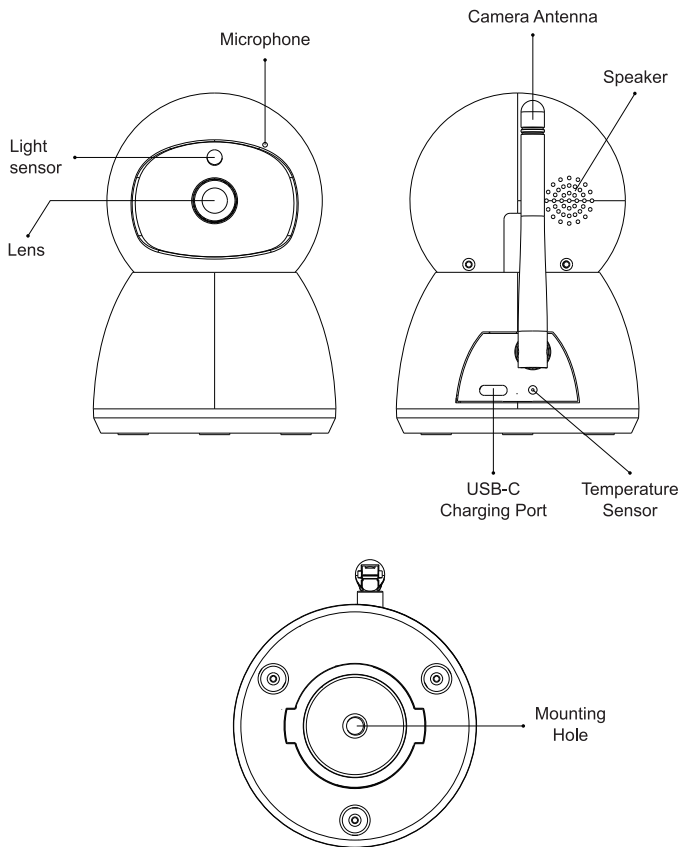

Baby Monitor

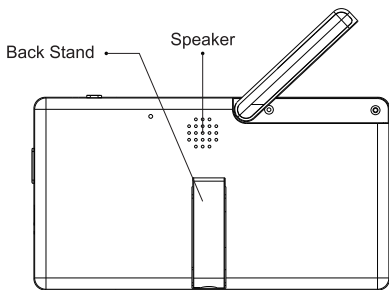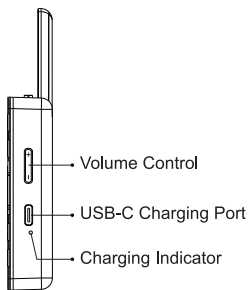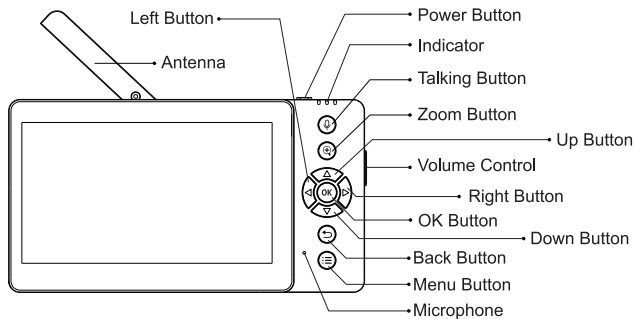

Press and hold the Talk button to speak the camera.
Press Power button to switch on/off the monitor screen. Press and hold the Power button 3 seconds to switch on/off the monitor.

GETTING STARTED

1. Charging & Powering Baby Monitor

- 1) Connect the monitor adapter to the monitor and a power outlet.
- 2) Unplug the unit when its power indicator light is green, indicating a full charge.
- 3) Press and hold the Power button on the monitor to power on.

2. Powering Camera


- 1) Connect the camera to power source via the TYPE-C cable and camera adapter.



- Only use the power adapters included in the package.
Do not place the camera and power cord within the reach of your baby.


3. Placing the Camera

Place the camera 1.5-2.5m/4.9-8.2ft away from your baby for safety reason and for a better view when in night vision mode.

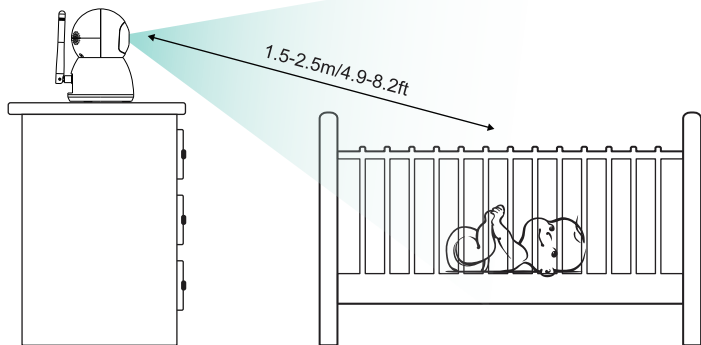

FUNCTIONS & OPERATIONS

Monitor Interface overview

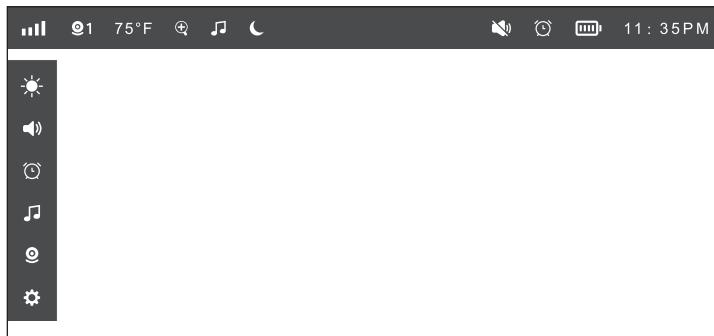

Top Status Indications

	Signal	4 levels
	Current Camera	Camera 1/ Camera 2
	Current Temperature	°C/°F
	Zoom	2X
	Mute	Mute all system sounds
	Night Vision	Auto ON in a dim environment
	Battery	4 levels
11:35PM	Current Time	12Hr
	Lullaby	Accommodates 4 lullabies/Adjustable lullaby playback volume
	Alarm	2 Hr/4 Hr/6 Hr/Set Time

Top Seatus Indications

	Brightness	1-8 levels
	Speaker Volume	0-7 levels
	Alarm	2 Hr/4 Hr/6 Hr/Set Time
	Lullaby	Accommodates 4 lullabies/Adjustable lullaby playback volume
	Camera	 Connect to Add (Max 2 Camera)
		 Scan (select to view or scan each at a time)
		 Delete cameras (select to delete camera)
	Settings	 Time
		VOX VOX
		 Warning
		 Temp Unit
		 Screensaver
		 Reset
		 Help

1. Talkback

Press and hold the Talk button to talk to camera and release to exit.



- When you enter the talking mode, the icon will be shown on the monitor.
- When you're pressing the Talk Button, the camera will not transfer the sound to the monitor. Please release the button to listen to your baby.

2. Digital Zoom & Circulating

Press Zoom Button to zoom in to 2X when viewing the camera. A second pressing of the button will restore to the original image.



The current zoom level number will be shown with the Zoom icon $\oplus$ on the monitor

3. Pan-n-Tilt

When viewing the camera, press Left/ Right/ Up/ Down Button to view at different angles, 108 degrees vertically and 350 degrees horizontally.


Long press "OK" key for 3 seconds, the PTZ will cruise automatically twice, and then press "OK" key again to end the cruise.

4. Night Vision


The night vision is automatically activated in a dim environment. The camera has high-intensity infrared LEDs for picking up clear images in the dark. Black and white images can be captured within 6m distance.

5. Volume Adjustment

1) Use the volume + - button on the right side of monitor to quickly adjust the volume.

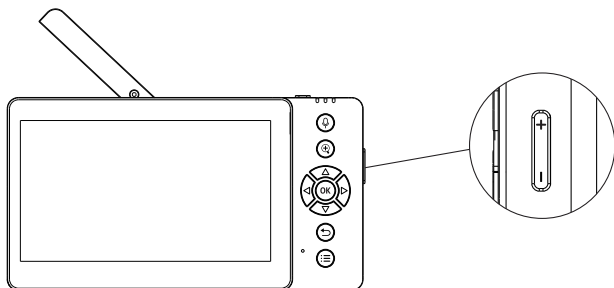


2) Or you can press Menu Button: Choose  -> **OK** Button ->   Left/ Right Button to volume down/ up.

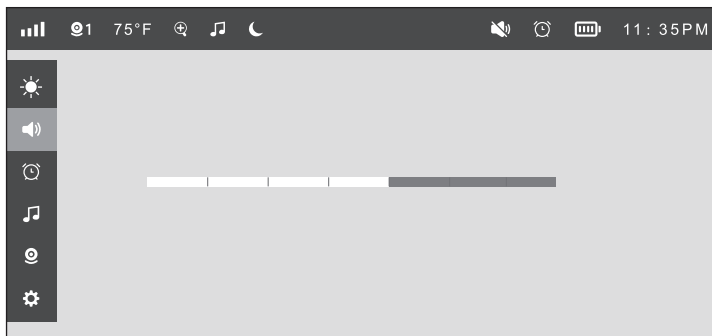

When the monitor is mute, you may not be able to hear the baby.

6. Display Brightness Adjustment


1) Press Menu Button: Choose  -> **OK** Button ->   Left/ Right Button to adjust the brightness.

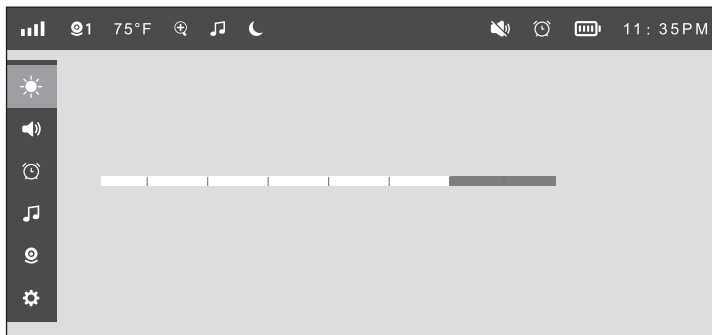


7. Camera

Connect to Add Camera


1) Press Menu button, select through  ->  ->  to add a camera.

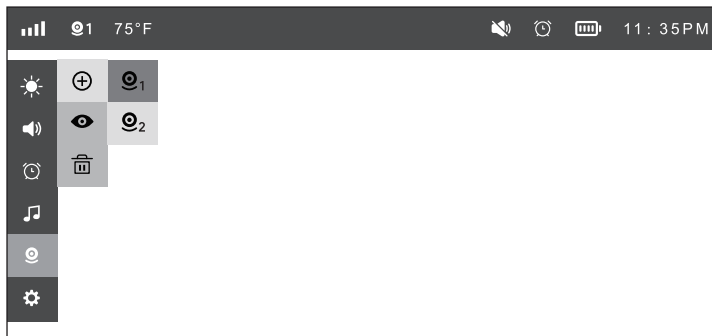


2) After connecting the camera to the power supply, rotate the camera upwards and press the Pair Button below to successfully connect.

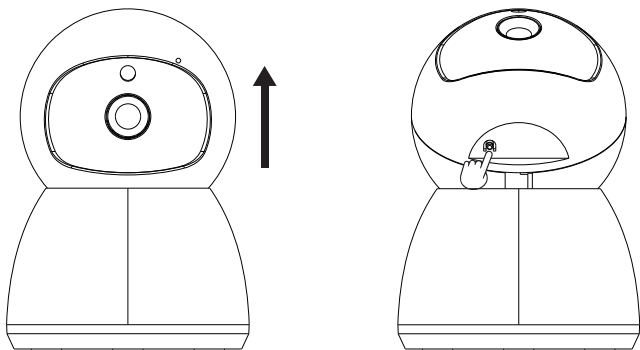

3) After successful pairing, the green LED on the upper right corner of the monitor will fast flash.

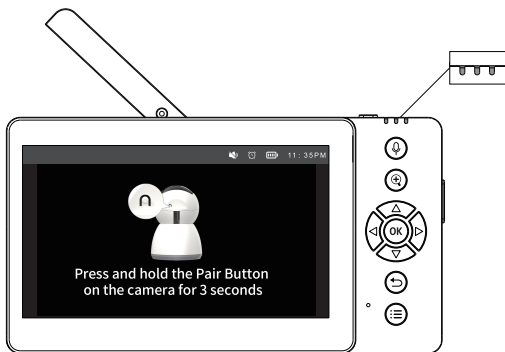

4) If the camera connection failed, the green LED on the upper right corner of the device will slow flash.

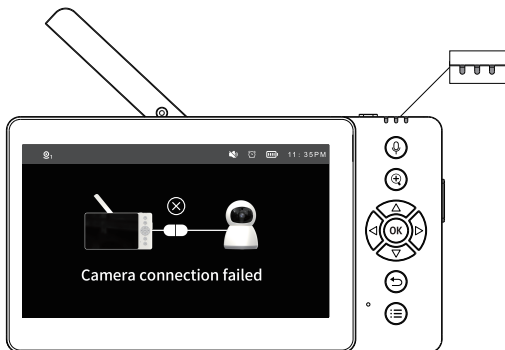


View Camera

1) Press Menu button, select through  ->  Scan-> _1 to view a camera.

If there are 2 or more cameras, select  to cycle through the added cameras every 15 seconds.


Select the camera number (1/2) to view the corresponding camera.

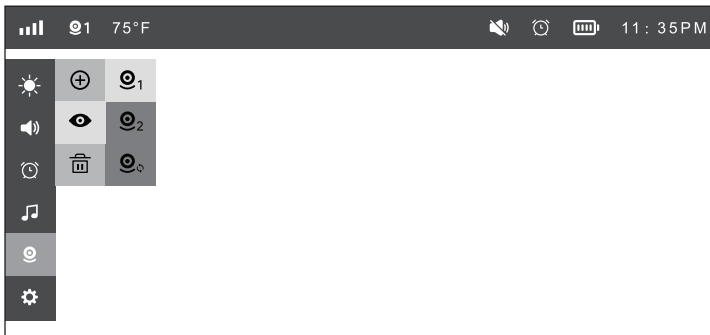

You can switch viewing different cameras; the current camera number will be shown with the Camera icon on the monitor.

Delete Camera

1) Press Menu button, select through  to delete a camera.

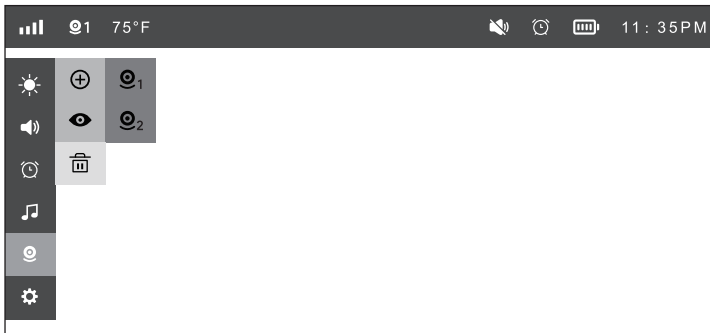




At least one camera shall be added. Do not delete all the cameras.
If necessary, please add a new camera before deletion.

8. Alarm

1) Explanation: This function is to remind you of feeding your baby. OFF means you shut down the function; 2 hour means it reminds you every 2 hours and so on for the other options.

2) Press Menu button, Choose  -> **2Hr** -> **OK** Button.


3) Select the time you want. or set the hour and minute otherwise. When the alarm time is reached, a beep will be heard. Press OK Button to stop; otherwise it'll keep beeping for 10s, beeping again in 1 min, stops after it's alerted 4 times.

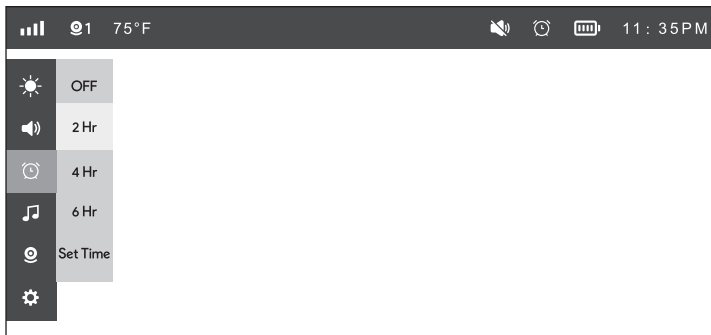

- When the timer is set, the Alarm icon  will be shown on the monitor.
- Before setting, please check that the monitor time is your current time.

9. Lullabies


- 1) Explanation: This function is to comfort baby when needed.
- 2) Press Menu button, Choose 🎵 -> 🎵₂ Button.
- 3) Select the lullaby you want. Select 🎵₂ -> **OK** to play the lullabies in a loop, and press OK again to stop playing.
- 4) Choose 🔊 -> **OK** -> ◀ ▶ Left/ Right Button to adjust the volume of the lullaby.

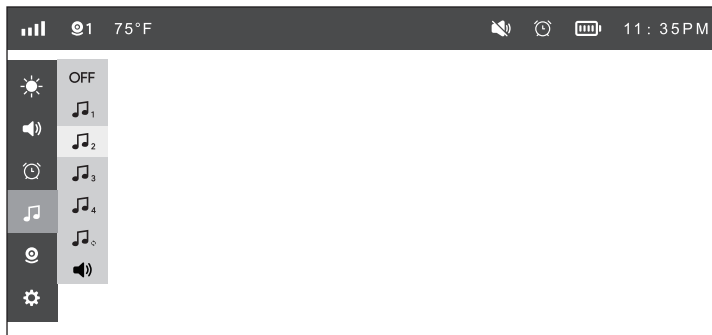

The lullaby will automatically stop looping after 1 hour.

10. VOX

- 1) Explanation:
There are three options of VOX, LOW, Middle and High. HIGH means the sound of Baby cry can be detected easier. Setting "off" turns off the alarm sound in VOX mode.
- 2) Press Menu button, Choose VOX -> **OK** Button.
- 3) Select the option you want. Press **OK** Button.

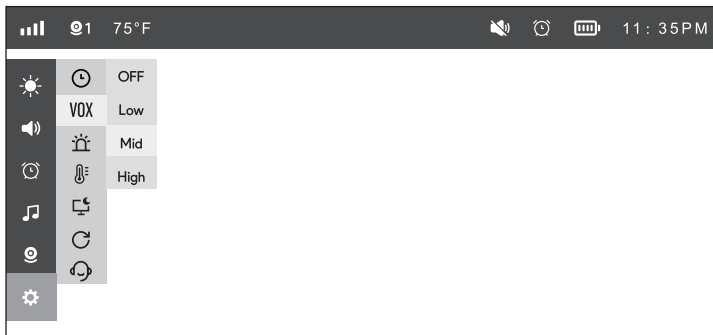

When VOX is turned off, the monitor will no longer emit an alarm sound, nor will it trigger a bright screen and icon alarm.

11. Temperature Alert

The monitor will prompt too high (>35°C/95°F) and too low (<0°C/32°F) temperatures with the "HH" and "LL" icon, accompanied with a  &  and a beep alert, Press any button to cancel the beep alert.



When monitor's "warning" is mute, you can't hear the beep alert.

12. Monitor Settings

Press Menu Button, Direction Buttons, and then OK Button to set the monitor.

- 1) Time setting: Set the current time by setting hour, minute, and AM/ PM.
- 2) VOX Automatically detect the baby's crying, wake up the display screen, and send out a prompt tone; the sensitivity can be set to OFF, Low, Middle or High.
- 3) Warning volume: Select between Low, High, and Mute.
- 4) Indicator: Volume and status indicator lights. Select between OFF and ON.
- 5) Temperature unit: Select between °C and °F.

- 6) Display (Screen auto-sleep time): Select between 1min, 2min, 5min, and Always on.
- 7) Reset: Press OK Button to confirm factory resetting screen;
"confirm factory resetting screen" will be shown when restoring, and you can't press any button to control the device during this period.
- 8) Help: Check the email and product information for customer service.

SPECIFICATIONS

Screen

Model	VBM01
Screen	5 IPS LCD
Image	16:9
Image compression	h.264
Temperature Alert	Yes
VOX	Yes
Volume Control	7 Levels
Brightness	8 Levels
Antenna	Rotatable (max. 90 degree)
Zoom	Zoom In(2X)
Auto-Pilot	2 cycles
Two-Way Talk	Yes
Channels	Max 2 cameras
Power Input	5V/1A (2m long USB C cable)
Storage Temperature	-10°C~55°C / 14°F-131°F
Operation Temperature	0°C~40°C / 32°F-104°F

Camera

Image compression	h.264
Pan-n-Tilt	108degrees vertical (Up=90, Down=18) 350 degrees horizontal (Left=175, Right=175)
Zoom	Zoom In(2X)
Auto-Pilot	2 cycles
View Angle	60°
Depth of Field	1.5m to 10m
Night Vision	Black & White image, 2m clear range, up to 10m
IR LED	Non-visible IR LED with wavelength 940nm
Light Sensor	Yes
VOX	Yes
Two-Way Talk	Yes
Temperature sensor	Yes
Power Input	5V/1A (2m long USB C cable)
Storage Temperature	-10°C~55°C / 14°F-131°F
Operation Temperature	0°C~40°C / 32°F-104°F

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

?Reorient or relocate the receiving antenna.

?Increase the separation between the equipment and receiver.

?Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

?Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.