

SereneLife



SLCMPGRDL2IN1 / R1310DPL

**propane stove
with griddle**

user manual

visit our website



SCAN ME

serenelifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE
REFERENCE. FOR HOUSEHOLD USE ONLY.

Table of Contents

Features and Technical Specs ----- 03

Warnings and Safety Information ----- 04

Additional Safety Warnings ----- 05

Parts Overview ----- 06

Assembly Instructions ----- 06

Startup and Operation ----- 08

Care and Maintenance ----- 09

Register Product ----- 09

Important Note

Before beginning assembly of the product, ensure that all parts are present. Compare the parts with the package contents list. If any part is missing or damaged, do not attempt to assemble or use the unit. Contact customer service for replacement parts.

CALIFORNIA PROP 65 WARNING

 **WARNING:**

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



Unique Elements:

Heavy-Duty Construction: Bigger, stronger build with solid quality—not flimsy like some competitors

Features:

- Dual-Function Griddle and Burner-in-One Design
- Piezo Ignition for Reliable, Match-Free Lighting
- Non-Stick, Ceramic-Coated Aluminum Griddle
- Independent Flame Control Knobs
- Weather and Rust-Resistant Construction
- Powder-Coated Lid, Windshield, and Case
- Stable Burner Supports with Non-Slip Coating
- Easy-to-Clean and Maintain
- Quick and Hassle-Free Setup
- Ideal for Backyard Barbecues, Camping Trips, Tailgating, and Outdoor Kitchens

What's in the Box:

- Burner with Griddle Stove
- Regulator
- Gas Tube

Construction Materials:

- Griddle Surface: Black Ceramic-Coated Aluminum
- Burner: Stainless Steel
- Burner Support: Rubber-Coated Metal
- Top Plate: Stainless Steel
- Case: Silver Powder-Coated Steel
- Lid: Black Powder-Coated Steel
- Windshield: Black Powder-Coated Steel

Technical Specs:

- Burner Power Output: 10,000 BTU
- Griddle Power Output: 5,000 BTU
- Ignition Type: Piezo Ignition
- Burner Type: 1 x Cook, 1 x Grill
- Fuel Type: Propane
- Gas Pressure: 15 PSI
- Gas Tube: Rigid
- Maximum Pot Diameter: 8 Inches
- Maximum Weight Capacity: 13 lbs.
- Finish: Chrome Plated
- Item Weight: 11.9 lbs.
- Top Plate Dimensions (L x W): 23 x 11 Inches
- Griddle Surface Dimensions (L x W): 12 x 9 Inches
- Total Product Dimensions (L x W x H): 23.5 x 12.5 x 4 Inches

Warnings and Safety Information

DANGER: CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide, an odorless and colorless gas that can cause death. Never use this appliance in enclosed or partially enclosed spaces such as tents, campers, vehicles, trailers, boats, or homes.

FOR OUTDOOR USE ONLY! Use only in well-ventilated areas.

- Use only 1 lb (0.45 kg) disposable propane cylinders marked USDOT-39 or TC CAN/CSA B339.
- Use propane fuel only.
- Use only the regulator supplied with this appliance. Do not modify or substitute.
- Do not use this appliance as a heater.
- Do not modify the appliance or use it for purposes other than intended.
- Place the appliance on a stable, flat, and level surface.
- Never leave the appliance unattended while in operation.
- Ensure the appliance is positioned at least 40 in (102 cm) away from combustible materials.
- Do not operate the appliance if it is leaking, damaged, or not functioning properly.
- Only authorized technicians should service or repair the appliance.
- Keep children and pets away at all times.
- Always use protective gloves when handling hot components.
- Never move the appliance while in use or while hot.
- Turn off the gas supply at the cylinder after use.
- Never store the appliance with the propane cylinder attached.

Stop Using the Appliance If:

- Flames repeatedly go out.
- Combustion becomes unstable.
- Lighting cannot be performed easily.
- Ambient temperature drops below -10°F (-23°C).
- The propane cylinder is empty.

CAUTION:

Allow the stove to cool for at least 15 minutes after use. Parts may remain very hot.

- Ensure the appliance is operated at least 24 in (61 cm) away from combustible materials.
- Always attach or detach the propane cylinder outdoors, away from ignition sources such as open flames, pilot lights, or electrical sparks, and away from other people.
- The openings at the base of the burner provide air for combustion and must never be obstructed. If the flame becomes noticeably orange, check these openings for blockage.
- If the appliance cannot be adjusted to operate properly, discontinue use until it has been serviced or repaired.

Additional Safety Warnings

- Use only 16.4 oz (465 g) disposable propane cylinders marked USDOT-39 or TC CAN/CSA B339.
- Use only propane fuel.
- Use only the regulator supplied with this stove. Do not attempt to modify or replace it.
- Do not use the stove as a space heater.

To check for gas leaks, always perform the test outdoors.

- Do not check for leaks with a flame. Use soapy water applied to joints and connections. Bubbles indicate a leak.
- If you hear or smell gas, or if the connection point becomes extremely cold, do not attempt to light the appliance. Disconnect the propane cylinder and contact your local dealer.

To check if the propane cylinder contains fuel, gently shake it.


A sloshing sound indicates fuel is present.

- Do not allow cookware to boil dry.
- Always disconnect the propane cylinder when the stove is not in use.
- Do not move the appliance while it is in use.

Discontinue operation and close the valve if:

- Ambient temperature drops below -10°F (-23°C)
- There is no fuel remaining in the propane cylinder
- Combustion becomes unstable
- Lighting cannot be performed quickly and easily
- Repeated flameouts occur

Parts Overview

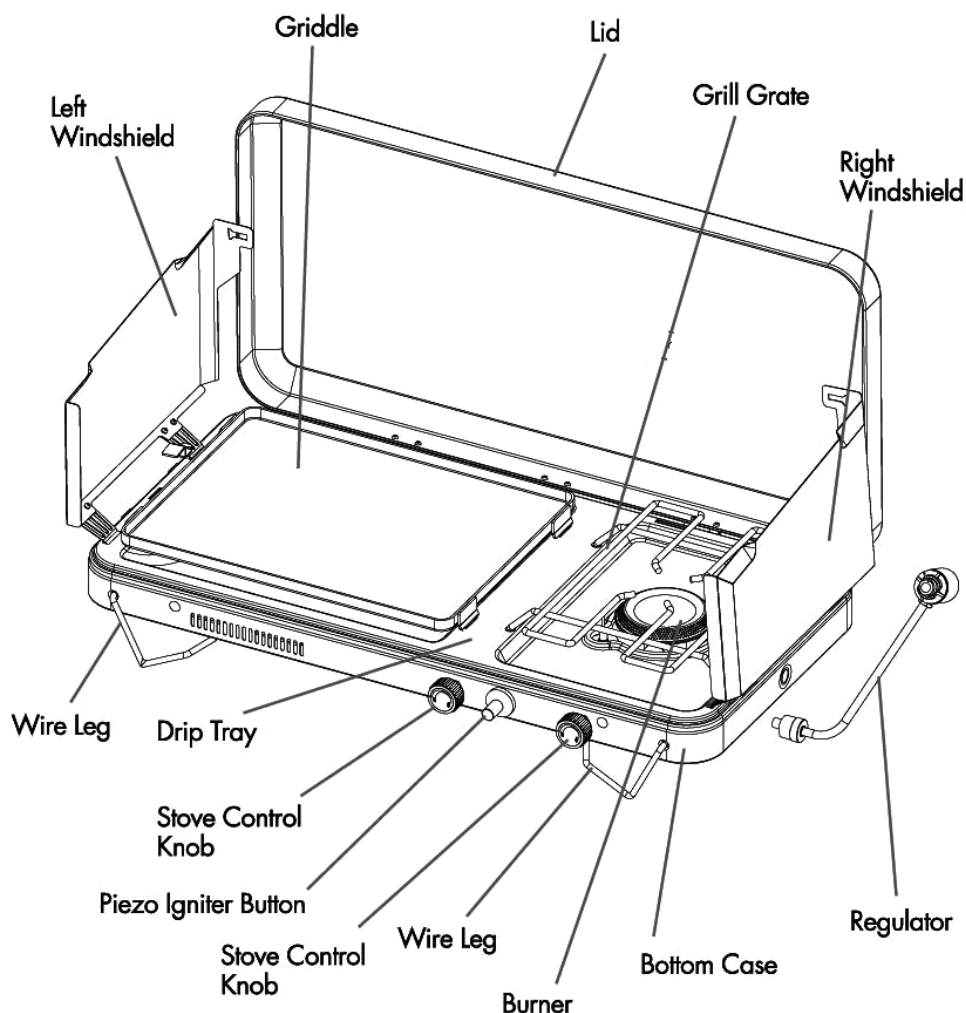


Assembly Instructions

1. Prepare the Stove


- Remove the appliance from packaging.
- Place the stove on a hard, flat, level surface.
- Unfold the wire legs underneath the appliance.
- Open the lid to a vertical position.

- Unfold the windshields and secure the lid using the clips on the lid and slots on the windshields.

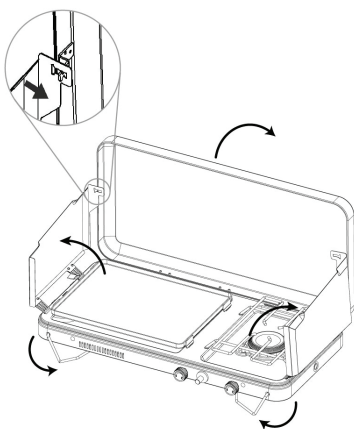


2. Install the Regulator

- Lift the grill grate and remove the regulator from its storage.
- Inspect O-rings for damage before installation.
- Inspect O-rings for damage before installation.
- Insert the regulator into the inlet connector on the stove side.
- Hand-tighten the nut securely (do not use tools).

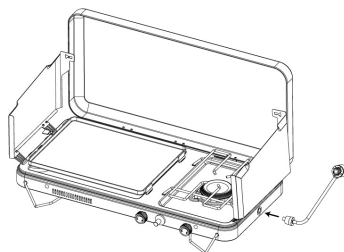

3. Attach the Propane Cylinder


- Ensure all stove control knobs are in the OFF position.
- Connect the propane cylinder to the regulator and hand-tighten firmly.

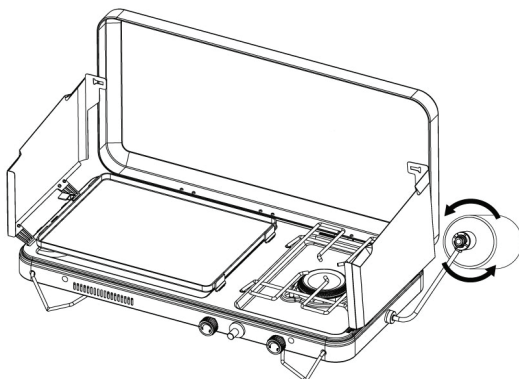


Startup and Operation

Lighting the Burner

1. Select the burner to ignite.
2. Turn the stove control knob almost fully counterclockwise to start the gas flow.
3. Press the piezo igniter button to spark the burner.

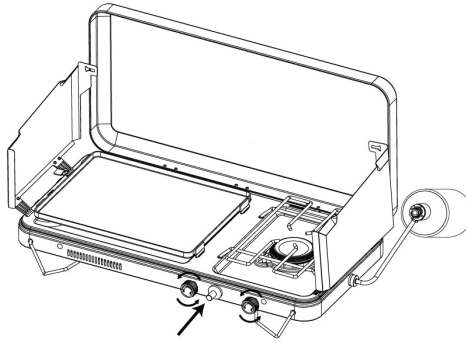

4. If the burner does not ignite, turn the knob OFF, wait 10 seconds, and repeat steps 2–3.
- Adjust flame intensity using the stove control knob.
 - Each burner operates independently. Both burners do not need to be used at the same time.
 - After use, turn all control knobs fully OFF and close the propane cylinder valve.

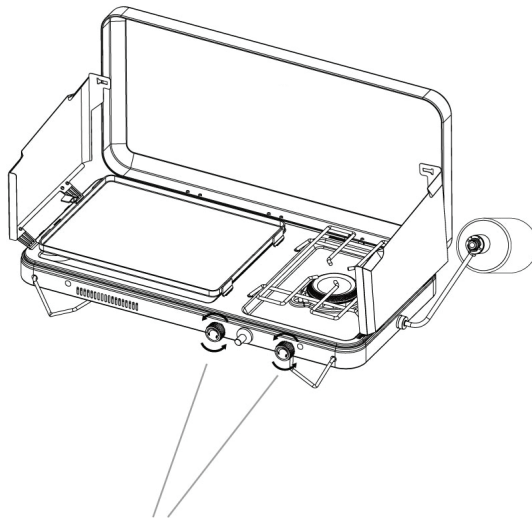

Turn knobs to increase
or decrease flame

Care and Maintenance

Cleaning

- Clean the body with a soft cloth and warm, soapy water.
- Do not use abrasive or flammable cleaners.
- Use a soft brush to clean burners.
- Allow stove to cool at least 15 minutes before cleaning or moving.
- Only use non-combustible, non-corrosive cleaning agents.

Storage

- Store in a dry, well-ventilated area out of reach of children.
- Ensure stove is fully cooled.
- Confirm all knobs are OFF.
- Disconnect and properly store the propane cylinder.

Checking for Gas Leaks

- After assembly, turn on the gas and apply soapy water to all connections.
- If bubbles appear, tighten connections and retest.
- If leaks persist, disconnect the cylinder and contact an authorized service technician.
- Never use an open flame to check for leaks.

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:
SLCMPGRDL2IN1

[Serenelifehome.com/pages/register](https://serenelifehome.com/pages/register)



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)