




Smart WiFi Dash Camera P1 Duo

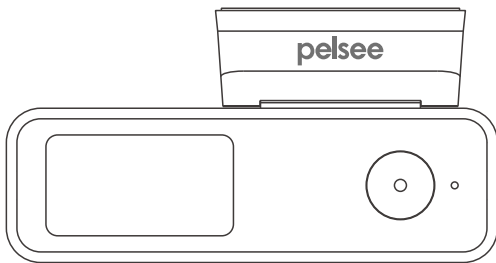

USER MANUAL

Please carefully read the user manual before using
and keep it well for future reference.



Youtube:
@Pelsee_official



www.pelsee.com



Facebook:
@pelsee

We'll regularly update the user manual as we continuously improve our product based on user feedback.
Access the latest manual at www.pelsee.com when it's available

Dear Customer,

Thank you for selecting **Pelsee** as your preferred brand!

We sincerely hope that you will enjoy using our product as much as we do.

If you happen to encounter any issues while using the product, or if you have any ideas on how we can enhance it, please don't hesitate to get in touch with us. You can contact us through our official website at **www.pelsee.com** or by emailing us at **support@pelsee.com**.

Our dedicated support team will be delighted to help you find a solution that meets your satisfaction as quickly as possible.

Yours Sincerely,
Pelsee Team


ENGLISH

SAFETY PRECAUTIONS

To prevent injury or damage, please read and follow these safety precautions:

1. Read and understand the user manual before using the product and keep it safe for future reference.
2. Only use the original accessories provided by the manufacturer.
3. Remove the protection film on the LCD display and lenses before using the product.
4. DO NOT try to disassemble, alter or repair the product yourself. Please ask for the help from the manufacturer or similarly qualified person in order to avoid a hazard. After repairing, please do a safety check to ensure that the product is working properly.
5. This product must not be placed in a location that may affect the deployment of air bags, and must not obstruct the driver's view.
6. If there is a malfunction or abnormality, such as smoke or strange odor, please stop using the product immediately, then cut off the power supply and contact us.
7. NEVER install the unit in the place where is exposed to the direct sunlight or extremely high temperature. The operating temperature of this product ranges from -10°C (14°F) to 60°C (140°F).
8. Drive safe! NEVER operate the App and the product when you are driving to avoid a traffic accident caused by distraction. Be sure to park the car in a safe place before operating.
9. This product must be securely mounted before driving.

WHAT'S INCLUDED



Mini WiFi Dash Camera




Rear Camera
(19.7ft/6m)



Car Charger
(11.5ft/3.5m)



Adhesive Cable Clip x4



Screw Driver x1



Easy Pry Tool



Adhesive Pads
(2 on Cameras)



Cleaning Cloth




Static Sticker x4



User Manual

KNOW YOUR DASH CAM


Dash Cam

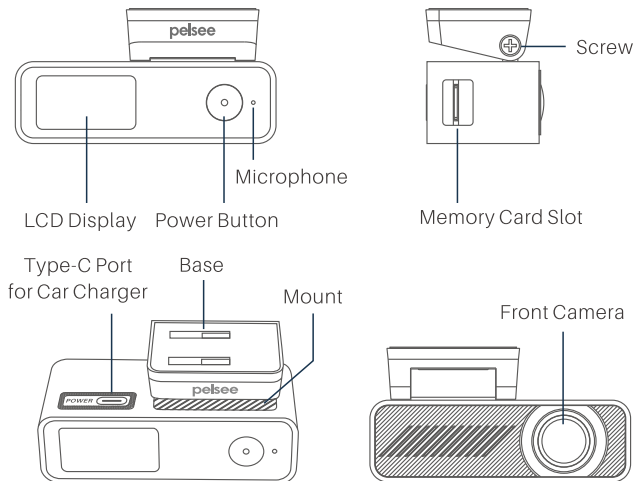

Function of the Power Button

- ① Press this button once to check the live view from the rear camera if you have installed it.
- ② Press this button twice to see the date and time.
- ③ Press this button three times to check the WiFi information of the camera.
- ④ Press this button the fourth time to go back to the recording interface.
- ⑤ Press and hold this button for 3 seconds until you hear the first beep to manually power off/on the camera.
- ⑥ Press and hold this button for 8 seconds until you hear the second beep to restore the camera to factory settings.
- ⑦ After you install a memory card into the dash camera, press this button once to format the card.

LCD Display

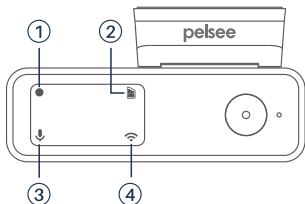


- ① **Recording Status:**
Flash Red: Recording Standard Videos
Flash Yellow: Lock the Current Video
- ② **Memory Card Status**
- ③ **Microphone On/Off**
- ④ **WiFi Connection Status:**
WiFi Not Connected: Gray
WiFi Connected: Green

INSTALLATION INSTRUCTIONS

Step 1:

To start, insert a memory card into the dash cam. This dash cam can take a card with a capacity of up to 256GB.

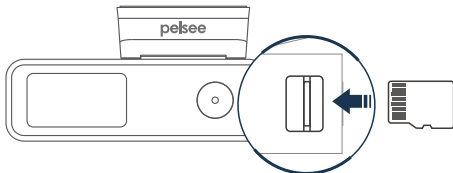

Tips:



1. Turn on the camera, then press the power button once to format the memory card, or use two other options for formatting.
Option 1: Install the memory card into a card reader, then connect it to the computer to format it to FAT32.
Option 2: After connecting the camera to the **Pelsee Cam App**, install the memory card into the dash cam and go to the **Pelsee Cam App > Camera Settings > Format SD Card** to format the card.
2. To ensure smooth video recording, use a reputable Class 10 or higher speed memory card.
3. To avoid damaging the card, please do not remove or install the card while the camera is powered on.
4. Memory cards have a limited lifespan. After numerous data overwrites, they may become inoperable. When this occurs, kindly replace your memory card.
5. For consistent performance, it's advisable to regularly format the memory card. We suggest doing this once a month.

Step 2:

Turn off your vehicle's engine, and find a suitable location on the front windshield to attach the dash cam. Use the cleaning cloth provided to clean the spot and affix the larger static sticker on it.



Step 3:

Peel off one side of the **3M Adhesive Pad** on the base of the camera and affix the base to the static sticker. When mounting the camera on the static sticker, ensure that the lens is positioned outside the area covered by the sticker to get a clear view.

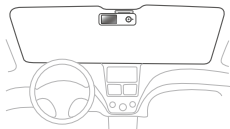


Step 4:

Connect the Type-C connector of the **Car Charger** to the **Type-C Port** on the camera, and plug the other end into the **Cigarette Lighter Receptacle** in your vehicle.

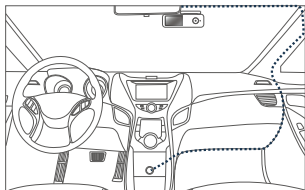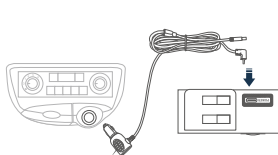


Tips:

1. After installation, start your vehicle's engine to ensure the dash cam powers on and records automatically. If it does, stop the engine and proceed to install the rear camera.
2. You can adjust the angle of the base to adjust the lens view.




3. To prevent your dash cam from being stolen while parked, you can easily remove it from the base. To remove it from the base, first disconnect the Type-C cable, then firmly press and hold the base while slowly sliding the dash cam leftward with force.

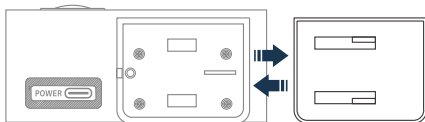


Step 5:

Connect the 4-pin male connector of the rear camera to the 4-pin female connector of the car charger cable. Snake the cable of the rear camera through the vehicle to the rear part.




Tip:

To keep your vehicle tidy, we recommend using the **Adhesive Cable Clips** provided to fix the cables of the car charger or rear camera over the edge of your vehicle.

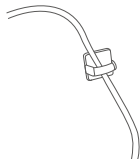

Step 6:

Select an appropriate location on the upper part of your vehicle's rear windshield, clean it thoroughly, and affix the smaller static sticker onto it. Next, peel off one side of the **3M Adhesive Pad** on the rear camera and securely attach the camera to the static sticker. The camera lens can be adjusted by rotating it to alter the viewing angle.

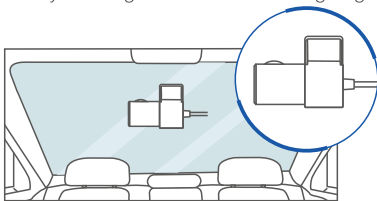

Attach the rear camera inside the back windshield as shown to avoid upside down view.

The selected spot should avoid the shadows from the car's spoiler, so the camera can capture natural lighting and display a more genuine image.

Step 7:

Start your vehicle's engine to verify that the rear camera is installed correctly and working well.

Step 8:

Clean front/rear windshields and remove protective materials from LCD, cameras lenses for clear view.

OPERATION GUIDE OF USING THE APP

1. Connect the Dash Cam with the App

Step 1:

Download and install the **Pelsee Cam** App on your mobile device by scanning the QR code below or searching for it on Google Play™/App Store™.




Step 2:

Ensure that the dash camera is turned on and mobile device is within 5 meters of the camera.



Step 3:

Press the power button three times to activate the WiFi of the dash cam.

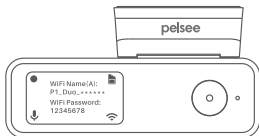



Step 4:

Open the **Pelsee Cam** App and grant the necessary permissions.
Tap on **Add Camera** to check the wizard and start connecting.

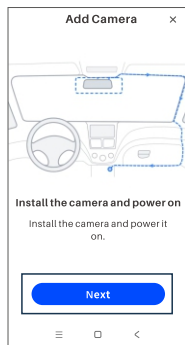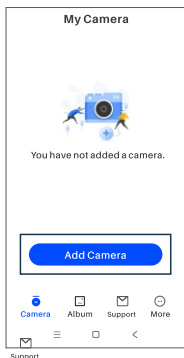

Step 5:

Tap on **Connect WiFi** and go to the **Settings > WLAN** of your mobile device to search for the **P1_Duo_******* WiFi. Enter the password **12345678** to complete the connection process.

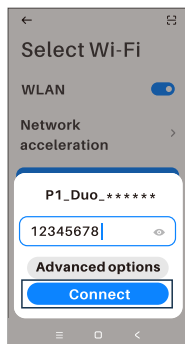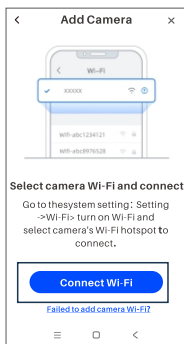

Step 6:

Return to the App and wait for the connection. Tap on **Access Camera** to enter the homepage.




Tips:

- ① If a window pops up on your mobile device asking if you want to continue connecting to the camera's WiFi even though it can't access the Internet, select **Yes**. Selecting **No** will disconnect the camera's WiFi.
- ② Only one mobile device can connect to one camera at a time.
- ③ Any videos or photos downloaded from the App will also be saved in the **Album** on the main page. Tap on **More** to access options such as **App Settings**, **Help**, and **About**. In **App Settings**, you can change the language of the App and the date format of the camera; **Help** provides access to frequently asked questions on our website; **About** lets you check and update the App version, and view the official website and email address.

2. Overview of the App



Homepage

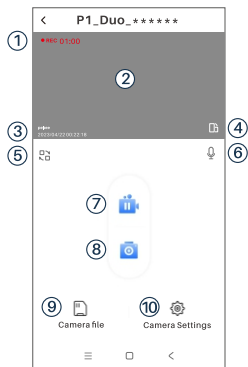

- ① Recording Status
- ② Live View
- ③ Date and Time
- ④ Orientation
(Portrait or Landscape)
- ⑤ Switch Front and Rear Cameras' Views
- ⑥ Audio On/Off
- ⑦ Start/Stop Recording
- ⑧ Take Photo
- ⑨ Recorded Videos and Captured Images
- ⑩ Camera's Detailed Settings

Camera File



To view and manage your camera files, tap on **Camera File** on the homepage. From here, you can see all your videos and photos, and select a file to delete or download.

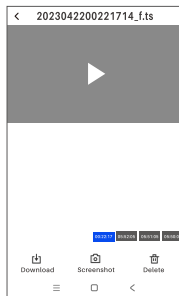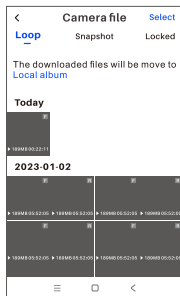

- ① **Loop:** Standard Videos from the front and rear cameras
Snapshot: Captured Photos from the front and rear cameras
Locked: Locked Videos from the front and rear cameras
F: Videos or Photos from the front camera
R: Videos or Photos from the rear camera
- ② Tap **Select** on the upper right corner to select the file(s) to download it/them into your mobile device or delete the file(s).
 After downloading the file(s), you can edit or directly share it(them) to social media.

Settings

Tap **Camera Settings** on the homepage to check and change the settings of your dash cam.

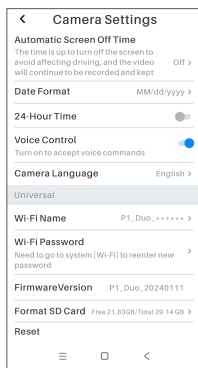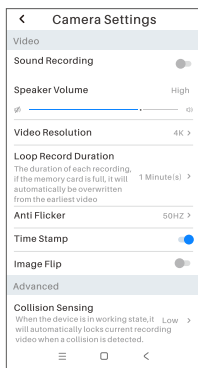

① Sound Recording

Turn on or turn off the audio when recording videos.

② Speaker Volume

Set the volume of the speaker for the camera.

③ Video Resolution

Adjust the resolution of the front camera from three different options.

④ Loop Record Options

Change the recording time of each video. The recording time is set to be 1 minute by default. You can choose from **1 Minute(s)**, **2 Minute(s)** and **3 Minute(s)**

⑤ Anti Flicker

Change the light source frequency between 50Hz and 60Hz.

⑥ Time Stamp

Show or hide the date and time watermark on the recorded videos and captured photos.

⑦ Image Flip

Flip the rear camera view vertically to change the orientation between upward and downward.

⑧ Collision Sensing

Set the G-sensor sensitivity for collision detection while driving. You can select from **Low**, **Medium**, **High**, and **Off** as needed. If you select High (low), the camera would automatically lock the current video when your car encounters a minor(severe) collision. A flashing yellow dot on the upper left corner of the LCD display will be displayed, indicating the camera is locking the current video.

⑨ Automatic Screen off Time

Set a designated time for the screen to turn off automatically.

⑩ Date Format

Set the date format for the dash camera.

⑪ 24-Hour Time

Set the time format for the dash camera.

⑫ Voice Control

Turn on or turn off the voice control function. This camera can be controlled via four voice commands, including **Turn on Audio**, **Turn off Audio**, **Lock the Video**, and **Take Photo**.

⑬ Camera Language

Change the language displayed on the dash cam.

NOTE: If you have installed a hardwire kit (sold separately), the Parking Mode option will be available. Enabling any sensitivity level activates the parking monitor function. The camera will power on when a collision is detected and begin recording a locked video. Additionally, time-lapse video recording will also be available. Please contact the Pelsee customer service team for more information.

⑭ Wi-Fi Name

Check and change the camera's WiFi name.

⑮ Wi-Fi Password

Check and change the camera's WiFi password.

⑯ Firmware Version

Check the firmware version of the dash camera.

⑰ Format SD Card

Format the memory card.

18 Reset

Restore the dash camera to the factory settings.

SPECIFICATIONS

Memory Card	Support up to 256GB
Resolution(Front Camera)	4K
Resolution(Rear Camera)	1080P
Video Format	TS
Photo Format	JPG
Storage Temperature	-22°F(30°C)~ +185°F(85°C)
Working Temperature	-14°F(10°C)~ +140°F(60°C)

FCC CAUTION

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 20cm.

L'appareil est conforme aux directives d'exposition aux RF, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité. La distance minimale du corps pour utiliser l'appareil est de 20 cm.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

 The symbol indicates DC voltage



This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

This product can be used across EU member states.

EU Compliance Statement: Shenzhen Vycol-Glint Innovations Technology co., Ltd hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.



GLOBAL ONE SOLUTION LTD
Address: 6 rue d'Armaillé 75017 Paris
E-Mail: GstarUK.service@hotmail.com



GLOBAL STAR UK SOLUTION LTD
Address: 7 COPPERFIELD ROAD COVENTRY, WEST
MIDLANDS, ENGLAND UNITED KINGDOM CV2 4AQ
E-Mail: GstarUK.service@hotmail.com

Manufacturer:

Shenzhen Vycol-Glint Innovations Technology co., Ltd

Address:

No. 26, Gangsheng Road. Building A, Room 509, Bao'an District,
Shenzhen, Guangdong