


Dog Training Collar

User Manual


Model p-collar 320

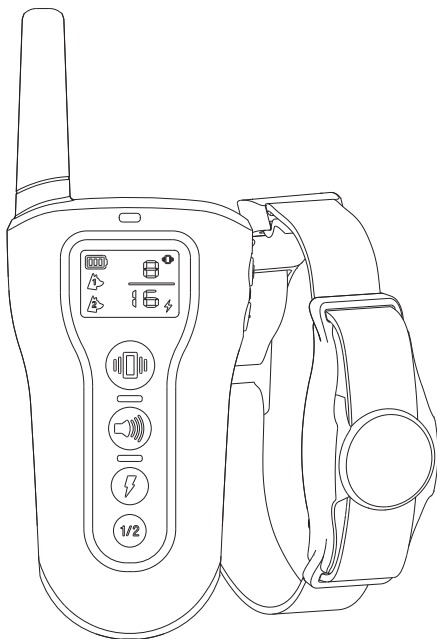

Package Contents



① Hand Remote



② Receiver Collar




③ Charging Cable



④ Wrist Strap



⑤ User Manual



⑥ Test Light Tool



⑦ Contact Points





⑧ Silicone Caps




⑨ Contact Spring Sheet

The Remote

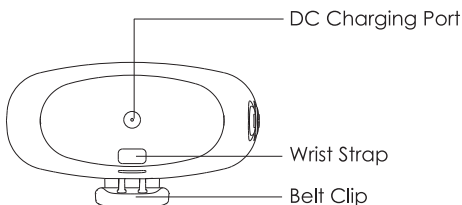
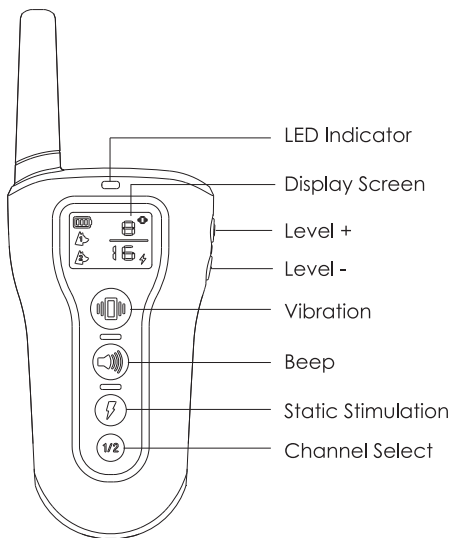


Overview

Display Screen

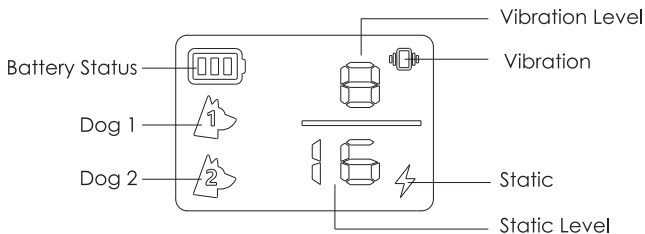

Receiver Collar

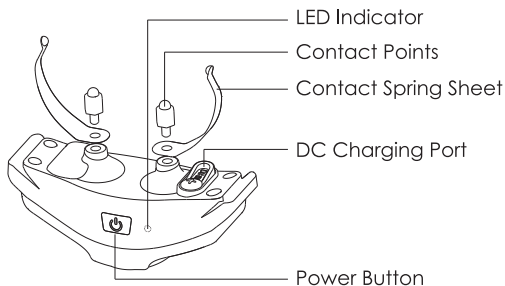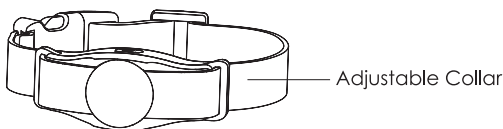

Important Safety Information

This is the safety alert symbol. It is used to alert you to potential injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.

WARNING

Not for use with aggressive dogs. Do not use this product if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury to their owners and others. If you are not sure if this product is right for your dog, please check with your veterinarian or a certified trainer.

CAUTION

Safety during on-leash training.

While during on-leash training, your dog should be on a solid leash, it should be long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase something.


Risk of skin damage.

A collar worn for too long or made too tight on the pet's neck may cause skin damage ranging from redness to pressure ulcers. This condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 8 hours per day.
- When possible reposition the collar on the pet's neck every 1-2 hours.
- Never connect a lead to the electronic collar. It will cause excessive pressure on the contacts.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.
- This product is not a toy, please keep away from children.
- This product is only for use with healthy dogs over 6-month old.

1

Charge The Remote And Receiver Collar

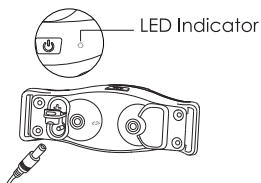

LED Indicator

DC Charging Port

When charging, the red light will come on and be steady. When fully charged, the screen will display the fully charged battery compartment and the red light will be flashing.

When charging, the red light will come on and be steady. When fully charged, the light will turn green and be steady.

(**Caution:** Please charge the product with a 5V 1A adapter. Do not use an adapter that does not meet the specifications.)

2

Turn On The Remote





Press any of the  /  / 

to turn on the remote. The red LED will flash once and the command will be issued at the same time.

3

Turn On The Receiver Collar

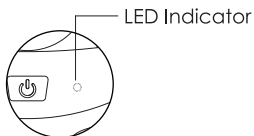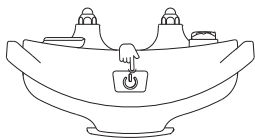

Click the power button to turn on the receiver collar. The green LED will flash once.


(Caution: The receiver collar will turn off automatically when it does not receive a command for over 8 hours.)

Press and hold the power button for 3 secs to turn off the receiver collar, the red LED will flash 3 times.


Note: To extend the battery life, please turn the receiver collar off when it is not in use.

4


Fit The Receiver Collar

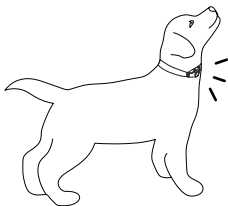

The contact points must have direct contact with the dog's neck skin. Check the tightness of the collar by inserting one finger snugly between the collar and neck.

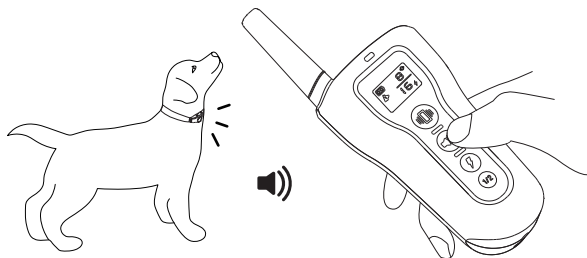


Delivers a beep tone with non-adjustable volume to the receiver collar.

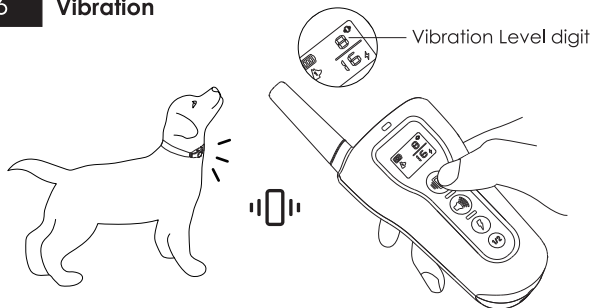

Delivers currently selected level vibration to the receiver collar.

Note: Press and hold 1/2 until the vibration level digit flashes. Then press "+" & "-" to adjust vibration level from 1-8. Level 1 means the lowest vibration level. Level 8 means the highest vibration level.

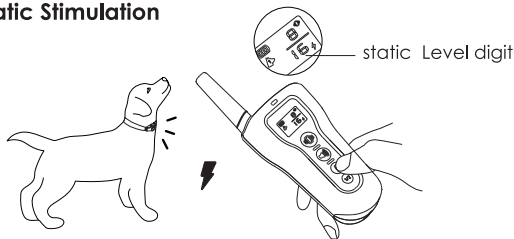

Delivers currently selected level static stimulation to the receiver collar.

Note: Press and hold 1/2 until the Static Stimulation digit flashes. Then press "+" & "-" to adjust the static level from 1 to 16. Please use the static level with caution. Always from the lowest level and increase the level up till your dog responds. Please refer to "How To Find The Best Static Level For Your Dog" on page 8. Level 1 is the lowest static level. Level 16 is the highest static level.

Very Important: Always start at the lowest level and choose the best level for your dog.

Follow the steps below to find the best Level:

1. Start at Level 1. Press the static button to see the dog's reaction.
2. If your dog still shows no response at over level 6, please check if the collar is fitted properly.
3. Skin contact is crucial for the static mode effectiveness. If your dog has long or thick hair, please use the contact spring sheet. Or you can have your dog's neck hair trimmed to make sure there is direct skin contact between the top of the contact points and the dog's neck skin.

Note: if your dog still shows no response to the static after trying all above steps, please use the test tool to see if the shock itself works normally. Please refer to the page 10 "How to Use Test Light Tool".

Main Features



Beep, Vibration and Static training mode



1-8 adjustable Vibration level



1-16 adjustable static level



Receiver collar is IP67 waterproof
(**Caution:** Remote is non-waterproof)



Remote range is 300-1000 feet



Long-life rechargeable lithium-polymer battery




Support maximum 2 receiver collars with 1 remote



DC charging cable


How to Use Test Light Tool

1. Make sure the Remote and Receiver Collar are paired.
2. Put the test light tool vertically on the 2 contact points, ensuring the metal wire has direct contact with the top of the 2 points.
3. Press the static button on the remote. The test light will be on. The higher the static level is, the redder the light will be.

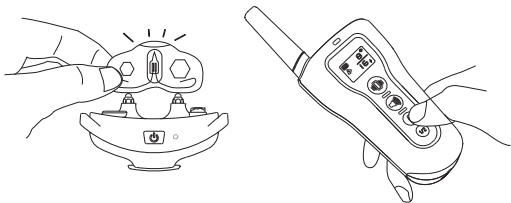

Note: For short or thin hair dogs, you can use the contact points covered with silicone caps alone. For long or thick hair dogs, you can use the contact points and the contact spring sheet simultaneously. For small dogs, if you don't need the shock mode, you may consider using the collar without the contact points.

Caution: When installing the contact points, please do use the test lamp to tighten the contact points and then push the silicone caps hard till there is no space between the top of the contact points and the caps to avoid falling off easily.

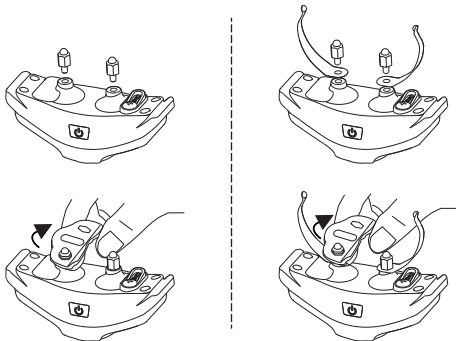


Training Tips

If you want to correct the dog's bad behavior, for example, barking, please follow these training steps.

1. Put a separate non-metallic collar on your dog's neck above the receiver collar, and attach an 8-10 feet leash.

Caution: Be sure the extra collar does not put pressure on the contact points.


2. Hold the leash and the remote.
3. Choose your pet's recognition static level.
4. As soon as your pet is barking, press the stimulation button and give a command "No" or "No barking".
5. Release the stimulation button immediately once your dog stops barking and praise it.
6. If your pet ignores the stimulation, increase the Intensity Level by 1 to 3.
7. Practice this training in several different scenes.

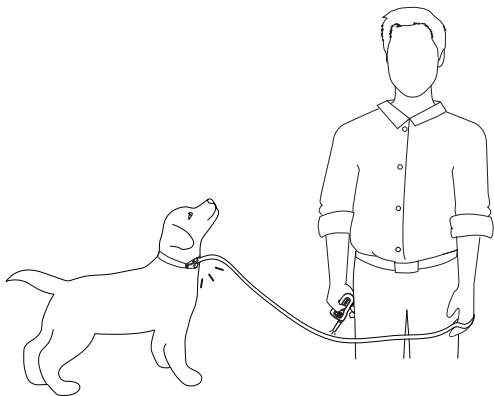

Pairing

Note: You may skip this step because the set is already paired by factory setting.


1. Make sure the receiver collar is turned off and the channel switch of remote is on "Dog 1".
2. Press and hold the power button of receiver collar for 3 secs until the red and green lights flash alternately.

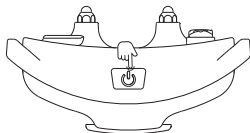

3. Press and hold any of the  /  /  buttons of remote to pair the receiver collar.



4. Pairing successfully, the green light on the receiver collar will flash 3 times.

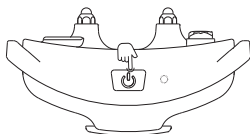

Two Receiver Collars System


Part I : Pairing 2nd Receiver Collar.

Note: You need own an additional receiver collar.

1. Make sure the receiver collar is turned off and the channel button of remote is on "Dog 2".
2. Press and hold the power button of receiver collar for 3 secs until the red and green lights flash alternately.
3. Press and hold the Beep and Vibration buttons of remote simultaneously to pair the receiver collar.
4. Pairing successfully, the green light on the receiver collar will flash 3 times.

Part II : Receiver Switching.

You are able to train 2 dogs separately. Use the channel button to select which dog to train.

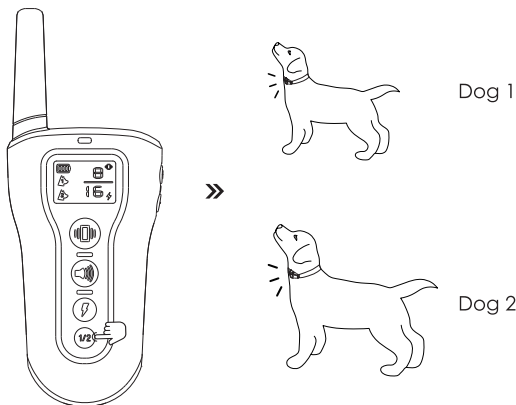

Question & Answer

Q: Is the static safe for my pet?

A: The static electricity is safe for your pet. So please feel at ease to use the collar. But please do select the appropriate static electricity level. And do start from the lowest level and increase the level gradually until your dog responds.

Q: How old does my pet have to be before using the electronic training collar?

A: Your pet should be able to recognize basic obedience commands such as "Sit" or "Stay". Pets should be at least 6 months old before using the training collar.

Q: Once my pet is trained and has been obeying my commands, will he have to continue to wear the receiver collar?

A: It is recommended to wear it until you completely correct the dog's bad behavior.

Q: Is the receiver collar waterproof?

A: Yes, the receiver collar is IP67 waterproof. But the remote is not waterproof. Please keep the remote away from water.

Q: Will I get exactly 1000 feet of range with the electronic training collar?

A: The effective wireless communication range will be affected by terrain, weather, vegetation, and interference from other radio equipment.

Q: How can I get support when I have product problems?

A: Any problems about the product, please feel free to contact us at any time via ✉ support@bousnic.com. We will do our best to help you.

Troubleshooting

The Receiver Collar will not turn on.

1. Make sure the Receiver Collar has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2-3 hours.
2. Check if your receiver is able to take charge. While plugged in the charger, see if the red light on the receiver comes out or turns to green. If the red light doesn't come out or turn to green, contact support team.
3. Try different outlets or chargers to check if the charging device is workable.
4. If the receiver can be charged normally, help confirm if you can hear the click when the button is pushed.

No shock function /My pet does not respond when I press a button.

1. Make sure the Contact points or the Contact Spring Sheet is in contact with the dog's skin and not blocked by hair.
2. Make sure the Receiver Collar has been turned on.
3. If the range has reduced from the first time you used the Remote Training Collar, the battery(s) may be low in either the Remote or Receiver Collar.
4. The distance between the transmitter and the receiver is too far, or blocked by metal objects.
5. Test the Receiver Collar. Refer to "Function Test"for details.
6. Increase the Shock Level. Maybe the level is too low for the dog to feel.

Warranty

1-Year Warranty

The original purchaser for this unit is provided with a 1-YEAR Warranty. The warranty begins on the date of purchase. For the first year, coverage is provided for both parts and labor on warranty repair services. After the first year, the Limited Lifetime Warranty covers parts only, and does not cover labor fees and Accessories. Accessories such as straps and batteries are covered for the first year only. All shipping fees incurred, the cost of accessories after the first year, and labor fees associated with out of warranty repair work are the customer's responsibility.

Not Covered Under Warranty

We DO NOT offer warranty for products that have been bought secondhand or were resold. Issues of replacement and refunds on units purchased less than 30 days from an authorized dealer must be addressed to the dealer directly. If the products purchased from an authorized dealer are after 30 days from the date of purchase, please send the units to us for service and repair. We DO NOT cover the cost of repairs and replacements due to misuse by the owner or dog, improper maintenance, and/or lost units. The warranty is void if the unit has been altered or an unauthorized person has damaged the unit while attempting repair work.

Procedure for Repair Work

If the unit is malfunctioning, please refer to the "Troubleshooting" in the manual before sending it back for service. A copy of the sales receipt showing the purchase date may be required before warranty work is initiated. Please include a brief explanation outlining the problem, and include your name, address, city/state/zip code, daytime phone number, evening phone number, and email address.

Compliance FCC - USA

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Modification or changes to this equipment not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



✉ support@bousnic.com

📘 @Bousnic



MADE IN CHINA

装订方式	骑马钉	尺寸	95mm*140mm	颜色	单色
名称	320—灿毅版说明书	材质	128g双铜，单色印刷+印哑油	版本日期	2022年5月17日