

SerenLife



SLPRPNLMP75 / 1041

**propane camping
lantern**

user manual

visit our website



SCAN ME

serenlifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE
REFERENCE. FOR HOUSEHOLD USE ONLY.

Table of Contents

Features and Technical Specs 03

Warnings 04

Important Safety Information 04

Operating Conditions 05

Parts List 06

Assembly Instructions 06

Care and Maintenance 09

Register Product 09

Important Note

Before beginning assembly of the product, ensure that all parts are present. Compare the parts with the package contents list. If any part is missing or damaged, do not attempt to assemble or use the unit. Contact customer service for replacement parts.

CALIFORNIA PROP 65 WARNING

 **WARNING:**

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



Unique Elements:

- High-output Dual-mantle Propane Design for Wide-area Lighting
- Piezo Ignition, No Matches or Lighters Required
- Stable Four-leg Base for Improved Balance on Uneven Terrain
- Heat-resistant Enamel-coated Lid for Outdoor Durability
- All-metal Plated Frame for Long-term Reliability

Features:

- 7500 Lumens of Bright, Reliable Illumination
- Dual-Mantle for Broad Light Coverage
- Stable Four-Legged Round Base
- Adjustable Gas Control Valve
- Durable Plated Metal Frame
- Heat-Resistant Enamel-Coated Lid
- Built-In Piezo Ignition for Easy, Match-Free Lighting
- Carrying Handle for Easy Transport or Hanging
- Protective Plastic Cup Covers Internal Components
- Compatible with Standard Propane Tanks
- Ideal for Camping, Hiking, Backyard, and Emergency Use

What's in the Box:

- Propane Lantern

Construction Materials:

- Frame: Metal (Plated)
- Lid: Enamel-Coated Metal
- Protective Cup: Plastic
- Control Valve: Pressure Control
- Base: Plastic

Technical Specs:

- Brightness: 7500 Lumens
- Fuel Type: Propane
- Mantle Type: Dual Mantle
- Ignition Type: Piezo Ignition
- Power: 1640 Watts
- Gas Control Valve: Adjustable
- Base Type: Four-Legged Round Base
- Operating Time: 4 Hours
- Item Weight: 2.2 lbs.
- Product Dimensions (L x W x H): 6.9 x 6.3 x 9.6 Inches

Important Note

Before beginning assembly of the product, make sure all parts are present.

Compare all parts with the package contents list. If any part is missing or damaged, do not attempt to assemble or use the unit.

Failure to follow these instructions could result in fire or explosion, which may cause property damage, personal injury, or death.

Warnings

Carbon Monoxide Hazard

This appliance can produce carbon monoxide, which is poisonous and odorless. Using it in an enclosed space can cause death.

Never use this appliance in an enclosed or partially enclosed space, such as a camper, tent, car, or home.

 **This symbol indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.**

For Your Safety — If You Smell Gas

1. Do not attempt to light the appliance.
2. Extinguish any open flames.
3. Disconnect the appliance from the fuel supply.

For Your Safety

Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.

Important Safety Information

Read these instructions carefully and familiarize yourself with the product before connecting the appliance to the propane cylinder. Review the instructions periodically to maintain awareness. Retain these instructions for future reference.

• FOR OUTDOOR USE ONLY

- **Use only in well-ventilated areas**
- **Do not use the lantern inside a tent or any enclosed area**
- Do not modify this appliance
- Always check that the seals between the appliance and the propane cylinder are in place and in good condition before connection

- Do not misuse the appliance or use it for purposes other than those intended
- Do not use the appliance if it has damaged or worn seals, missing parts, or damaged mantles
- Do not use the appliance if it is leaking, damaged, or does not operate properly
- This appliance must only be serviced by an authorized service technician
- If the appliance cannot be adjusted to function properly, do not use it until it has been serviced or repaired
- To check if the propane cylinder contains fuel, gently shake it — a sloshing sound indicates fuel is present
- Do not attach or detach propane cylinders near any flame or fire
- Do not use the lantern as a space heater
- Never leave the lantern unattended while in use
- Always use the lantern in an upright position
- Use caution when handling the lantern, as it becomes very hot during operation
- Always use the carrying handle to move the lantern
- Operate the lantern at least 24 in (61 cm) away from combustible materials
- Keep the area around the lantern clear of combustible materials, gasoline, and other flammable vapors or liquids
- Visually inspect burner flames to ensure proper operation

Operating Conditions

Discontinue operation and close the gas valve if:


- Ambient temperature drops below -10°F (-23°C)
- There is no fuel remaining in the propane cylinder
- Combustion becomes unstable
- The lantern does not light quickly or easily
- Repeated flameouts occur

To check for gas leaks, always perform the test outdoors. Do not use a flame. Apply soapy water to joints and connections. If bubbles appear, a leak is present. If you hear or smell gas, do not attempt to light the lantern. Disconnect the propane cylinder and contact customer service.

Caution: Parts will be very hot after use. Keep children away during lighting and operation. The lantern top and glass globe become extremely hot. Always turn the gas off and allow the lantern to cool before moving.

Parts List

1. Lantern Lid Nut
2. Lantern Lid
3. Burner Tube
4. Carry Handle
5. Burner Nut
6. Mantle
7. Frame
8. Gas Tube
9. Mixing Tube
10. Electrode Bracket
11. Regulator
12. O-Ring for Spindle
13. Spindle
14. Spindle Nut
15. Control Knob
16. Base (Foundation)
17. Heat Shield
18. Piezo Electrode
19. Glass Globe

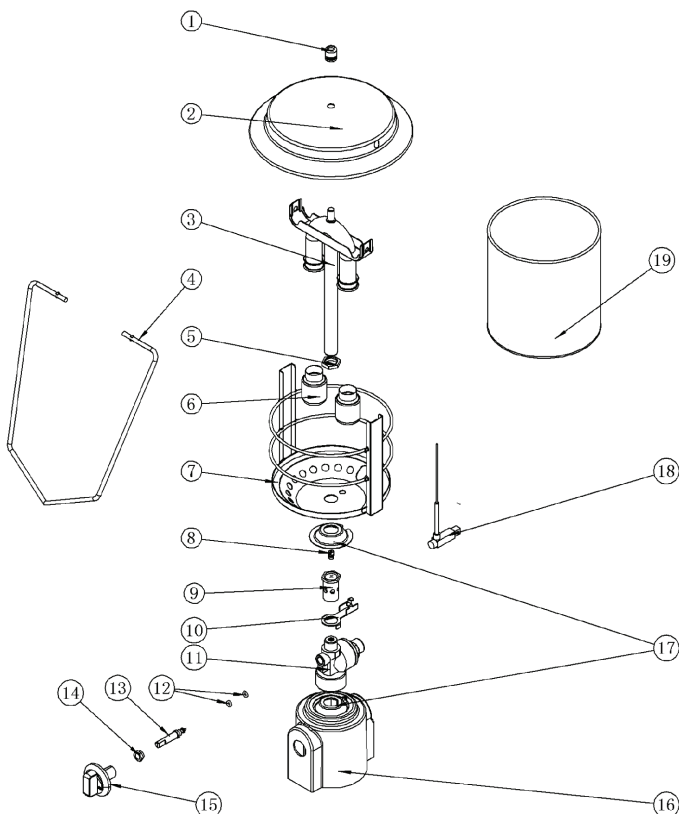


Tools Required

The lantern is fully assembled at the factory. No tools are required. When replacing mantles, only hand-tighten the top nut that secures the lid over the glass globe.

Assembly Instructions

Step 1

Carefully remove the lantern from the carton.
Remove the plastic protective cap from the bottom of the regulator assembly.

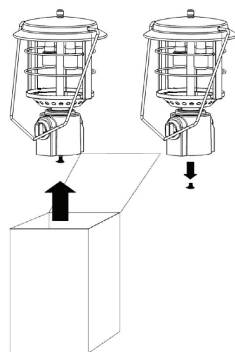


Step 2

Ensure the regulator knob is in the OFF position.

Gently screw a standard 16.4 oz (465 g) propane cylinder onto the bottom of the lantern.

Align the threads carefully to prevent damage.


Hand-tighten until the regulator assembly is firmly sealed against the top of the propane cylinder.

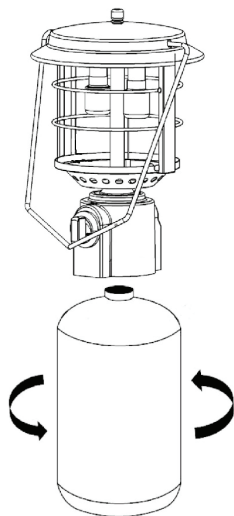

Step 3 — Mantle Replacement (If Required)

Unscrew the lid nut and remove the lid, carry handle, and glass globe. Securely tie the mantle to the end of the burner tube. Ensure the mantle fits correctly into the groove and spread it evenly around the burner tube. Reassemble the lantern.

Do not operate the lantern if the mantle is damaged.

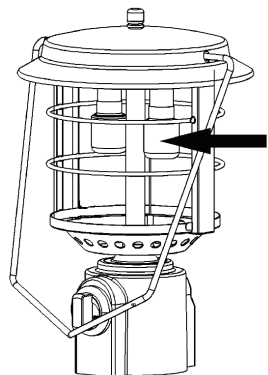

Step 4 — Leak Check


Check the connection between the propane cylinder and the regulator assembly.

- If you smell gas, a leak is present
- If the connection area becomes extremely cold, a leak is present

If a leak is suspected, do not use the lantern.

Apply soapy water to the connection area.

Bubbling indicates a leak. Never use an open flame to check for leaks.

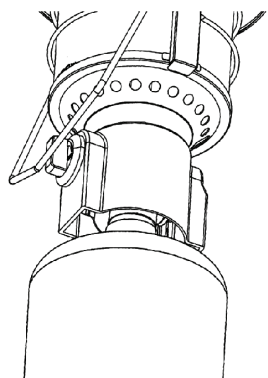

Step 5

Fold out the base support legs and attach them to the bottom of the propane cylinder. Place the lantern on a flat, stable surface before lighting.

Step 6 Lighting the Lantern

Mantle Pre-Burning (Required for First Use and After Mantle Replacement)

Before lighting the lantern for the first time, or after replacing a mantle, the mantles must be pre-burned.

1. Remove the lid nut, lid, carry handle, and glass globe.
2. Before turning on the propane, ignite the mantles with a match or lighter, starting from the base. Allow them to burn completely to ash.
3. Once fully burned and cooled, reinstall the globe, carry handle, lid, and lid nut.

For the first lighting after pre-burning, use a match to allow the mantles to fully expand and shape properly.




Lighting Instructions

Turn the regulator knob approximately half a turn to allow gas flow.

Lighting with a Match: Insert a flame through the lighting hole while keeping your head and body away. If the mantle does not ignite, turn the valve off, wait 5 minutes, and try again.

Lighting with Piezo Ignition: Press and hold the piezo ignition button firmly to create a spark. If ignition fails, turn the valve off, wait 5 minutes, and try again.


Tip: Always keep spare mantles available.

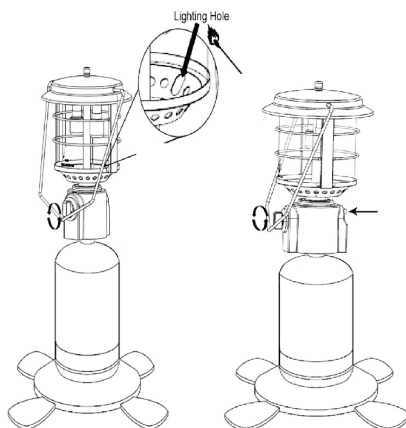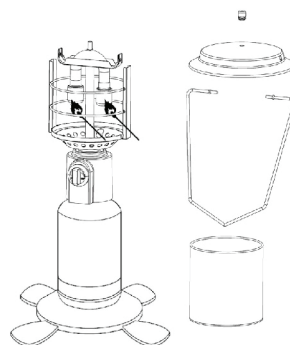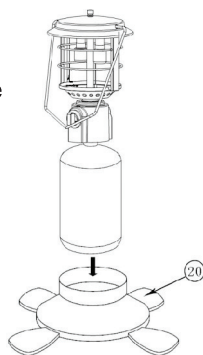

Step 7 – Adjusting Brightness

Once lit, turn the regulator knob counterclockwise to increase brightness or clockwise to decrease brightness or turn off the lantern. Do not open the valve beyond maximum brightness, as this may cause flaring and waste fuel.

After use, ensure the regulator knob is fully in the OFF position. Allow the lantern to cool for at least 15 minutes before handling.

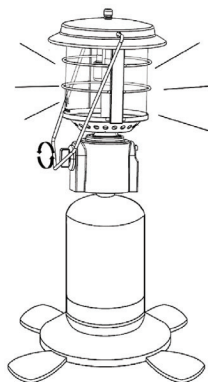

Care and Maintenance

Replacing Mantles

Remove all remnants of the old mantle. Tie the new mantle securely into the burner cap grooves and spread evenly. Pre-burn the mantle before use.

Annual Maintenance

Clean the lantern body using a soft cloth with warm, soapy water. Do not use abrasive or flammable cleaners. Use a soft brush to clean the burner. Cleaning agents must be non-combustible and non-corrosive.

Storage

When not in use, store the lantern in a dry, well-ventilated area out of reach of children. Ensure the regulator knob is in the OFF position and disconnect the propane cylinder before storage.

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:
SLPRPNLMP75

[Serenelifehome.com/pages/register](https://serenelifehome.com/pages/register)



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)