

AURAPRO说明书(UL)		服务品牌	
书型	骑马订		
尺寸	140×140mm		
比例	1: 1		
时间	2026年5月		
颜色	单色 C:0 M: 0 Y:0 K: 85		
技术要求:			
1、材质: 封面封底内页105g铜版纸。			
2、印刷图文颜色: 单色印刷, 不得见坑纹/黑点/褶皱/杂物, 外观整洁, 不得有错印漏印; 印刷内容以提供原档为准。			
3、尺寸误差: <1mm。			
4、结合方式: 优先骑马订, 若文档过厚, 则采用胶粘方式, 确保文字无遮挡, 以实际装订效果为准。			
5、材料符合RoHS, HSF等环保要求。			
6、“  ”分页线。			





Use Camera or QR Scanner to Scan
Email Address: service@ride5thwheel.com



The illustrations and function descriptions in this user manual are for illustration purposes and reference only, and the products are subject to the real product. The mentioned technical performance indicators are based on the specific experimental environment, and the actual indicators may vary depending on the setting and environment. This product needs to be used with mobile phones or other smart devices. The realization of all functions of this product requires network support, with the network fee being subject to the supplier's service rate. This product is only used to assist safety management and cannot replace other safety measures. Do not use this product for any illegal purpose. Some services are provided and supported by third parties, which may change at any time. Invanti does not provide any guarantee for third-party services. Please read the terms of the third-party service and privacy policy carefully before use.

The text and logo of 5TH WHEEL are trademarks or registered trademarks of enterprises affiliated with Invanti. Other company, product or service names mentioned may be trademarks or registered trademarks of their respective owners.

© 2026 Invanti (Beijing) Technology Co., Ltd all rights reserved.

Model: AURAPRO



5TH WHEEL Electric Scooter User Manual



The picture is for reference only.
Before using the product, please read this manual.
IMPORTANT! Read carefully and keep for future reference.

V1.0



Contents

1.Safety Instructions	2
2.Introduction to Functions	9
3.Product Display	11
4.Scooter Assembly	13
5.Unfolding/Folding/Carrying	14
6.Riding and Parking	17
7.Control System	18
8.Indication Description	21
9.About Charging	22
10.About the Battery and Charger	22
11.App Description	24
12.Maintenance	25
13.Common Problems and Solutions	26
14.Authentication	27
15.Contact US	29

* Please read and know the instructions described in the user manual carefully before using the electric scooter and keep it for future reference.

Please do not dispose of this product casually, it needs to be disposed of in accordance with local recycling regulations.

Welcome


Thank you for choosing 5TH WHEEL Electric Scooter. Enjoy the ride.




1 Safety Instructions

Note: Before using this product, please carefully read the following important safety information.


1.This electric scooter can be used by one adult only. Never carry others.

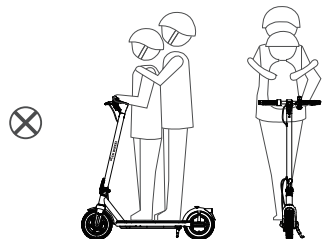


2.Wear safety helmet and other protective equipment while using this product.

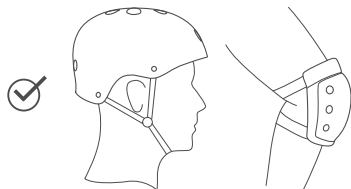


3.Never ride this product in an unsafe or illegal place.

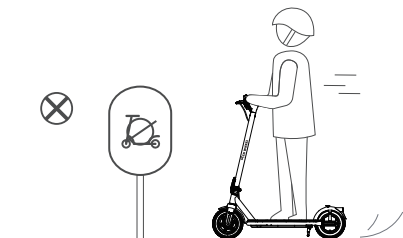


4.Please practice in an open area (not on lanes) first and use this product until you are skilled in operation.

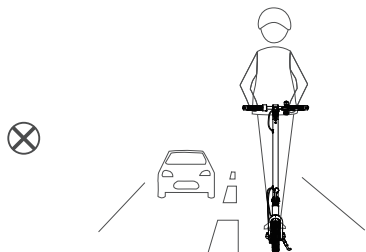


5.Do not make dangerous actions or ride with one hand only. Keep your feet on the scooter.

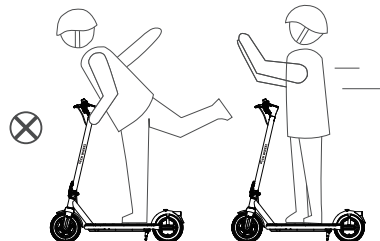

6.Avoid obstacle jumps and anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. Meanwhile, get out of the vehicle when these obstacles become dangerous due to their shape, height or slippage. Do not try to directly pass steps higher than 1.2inch (3cm).

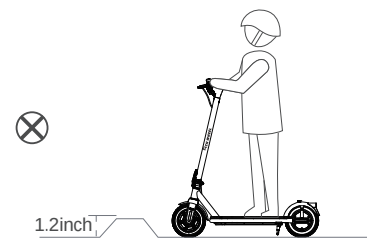


7.If you use this product at night, turn on the headlight and control the speed to 10mph(16km/h) or less.

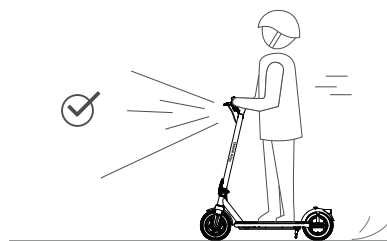


8.Do not use this product at the ambient temperature below 23°F. Temperature range of charging and cycling environment:50°F-104°F.



9. In the event of bumps or poor road conditions, please use this scooter slowly or get off the scooter and push it forward.

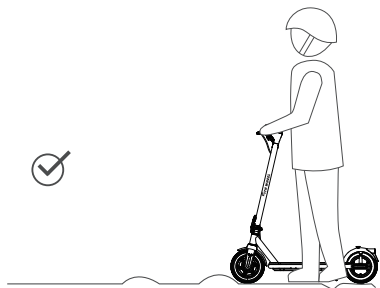

10. Do not use this product on an oily or icy surface.

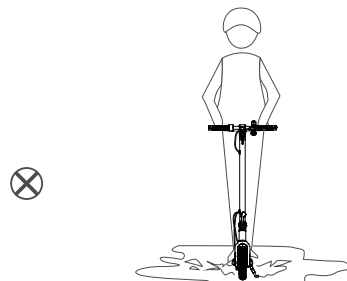


11. To avoid damage caused by water to its electrical parts, Please Do not immerse this product at a depth of more than 1.57inch(4cm) in water.




12. Avoid using this product as much as possible in bad weather such as rain, snow and wind, to prevent unnecessary damage




13. Use this product in accordance with relevant instructions in this manual. Do not use this product beyond the allowable load range.

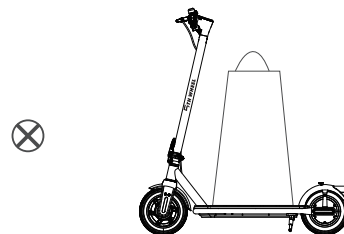

14. Avoid using or keeping this product at high or extremely low temperatures, or keeping this product together with flammables.

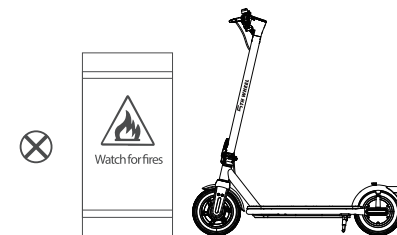


15. The scooter is a special riding product. Please ride it on smooth roads without pits.

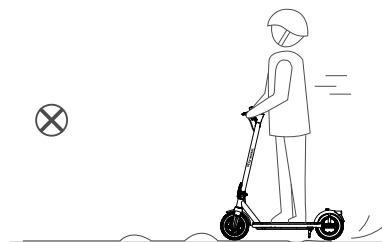


16. Do not attach any load to the handlebar which will affect the stability of the scooter.



17. Engage the kickstand when the vehicle is not in use; Flip up the kickstand before use; Do not park the scooter on a slope. Do not park the scooter on a slope.

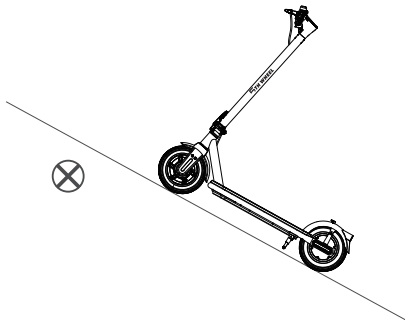


18. The minimum height of the user is 55 inch (1.4m), while the maximum height is no more than 86.6 inch (2.2m); the maximum age of the user is 60 years old, while the minimum age is no less than 14 years old.

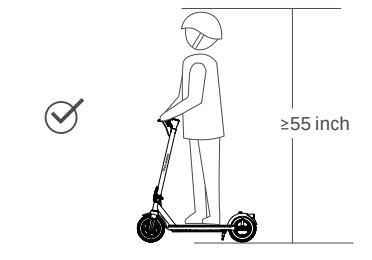


19. Braking performance and friction between the tire and road deteriorates in wet conditions, so it is harder to control the speed and easier to lose control. Slow down and brake early when it is raining.




20. WARNING Keep plastic covering away from children to avoid suffocation.

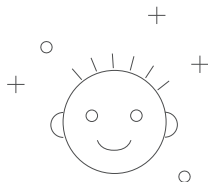


21. The user needs to take time to learn basic use practices to avoid any serious accident that can occur during the initial learning stage of use.

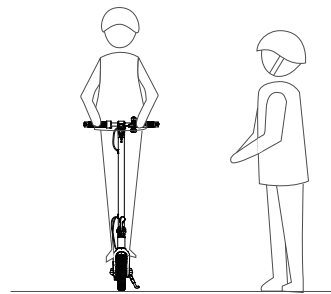


22. Notify your presence when approaching a pedestrian or cyclist when you are not seen or heard. Avoid high traffic areas or overcrowded areas.

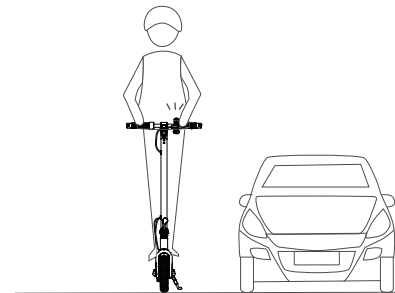


23. Walk the scooter through protected areas. In all cases, take care of yourself and others.

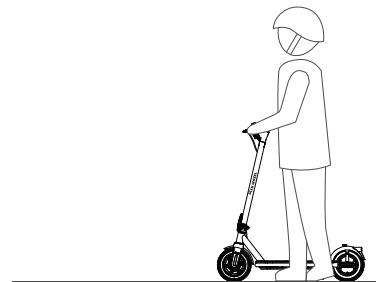


24. This vehicle is not intended for acrobatic use.

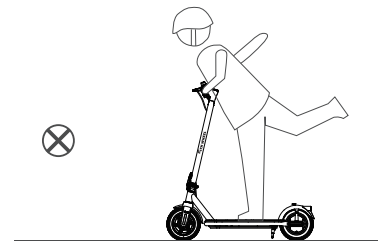


25. Caution, the brake may become hot in use. Do not touch after use.

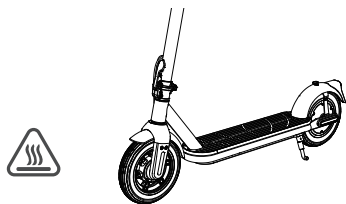


26. Eliminate any sharp edges caused by use. Do not modify or transform the vehicle, including the steering tube and sleeve, stem, folding mechanism and rear brake.

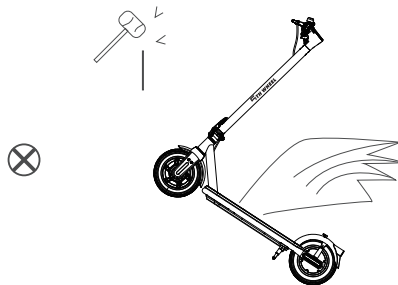

27. Users should always wear shoes when riding the scooter.

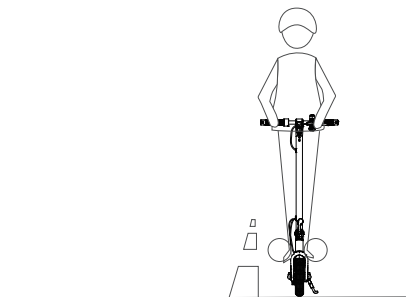


28. Anticipate your path and speed. Follow road and sidewalk rules, and obey all local laws when riding. Ride responsibly. Respect traffic rules, sidewalk codes, and local regulations. Always control your speed and follow the rules. Observe all local laws while riding.

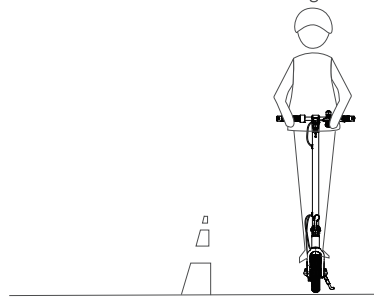

2 Introduction to Functions

1. Product Overview

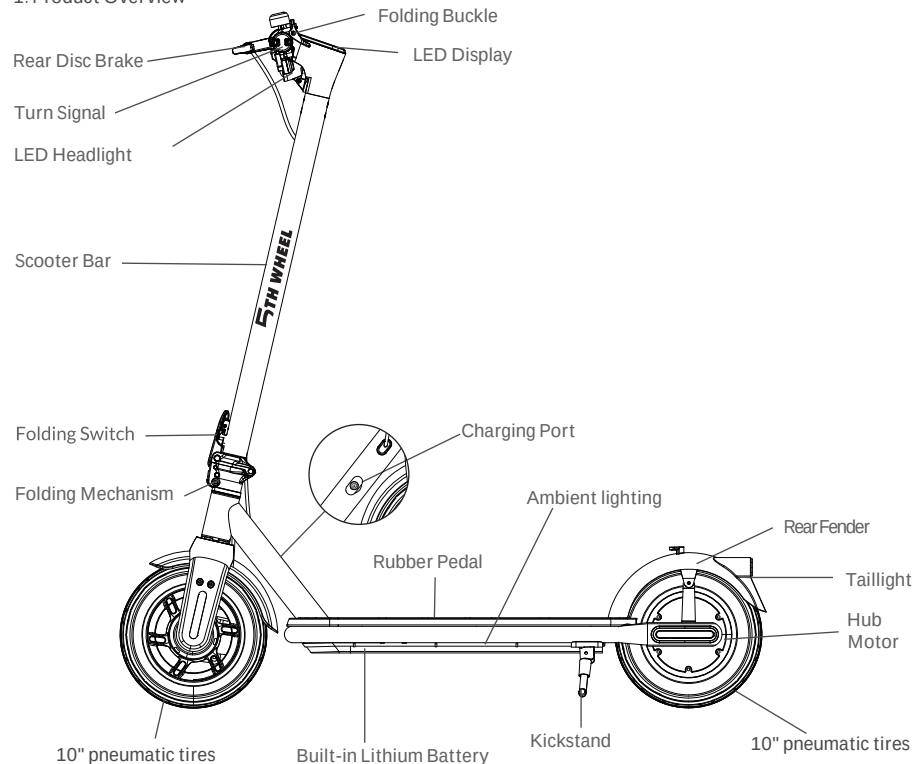

***The accessories and any additional items which are not approved by the manufacturer shall not be used.**

Accessories




Manual



Screw



Screwdriver

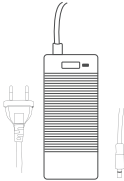

Power Adapter

Note: Please check out all the items in the package carefully. If anything is missing or damaged, please contact email: service@ride5thwheel.com


Product Contents	Quantity
User Manual	1
M5*12 Screw	6
M5*16 Screw	4
Screwdriver	2
Power Adapter	1

3 Product Display

Unfolded status



Folded status

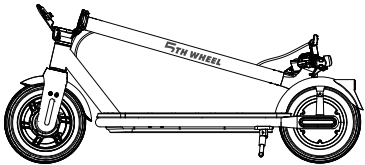



This QR code is a video tutorial for product use. It is recommended to scan this QR code to learn more about how to use the product.




Pay attention

1. Press the power key to open the scooter.
- ⚠ 2. **For safety, the factory setting of scooter is non-zero start, you need to slide the scooter to 2mph(3km/h), and the throttle can be used normally.**
3. The scooter can be turned on normally and cannot ride in walking mode, but can only be pushed.
- ⚠ 4. **Can't start when charging.**
5. Do not throw away the manual, please refer to the manual for specific operations.
6. Devices are not intended for use at elevations greater than 2000 m above sea level.
7. Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials, Store Indoors When Not in Use.
8. WARNING-Risk of Fire- No User Serviceable Parts.
AVERTISSEMENT - Risque d'incendie - Aucune des pièces ne peut être réparée par l'utilisateur.
9. WARNING - Risk of Fire and Electric Shock - Battery and/or battery components are not user replaceable.
AVERTISSEMENT - Risque d'incendie et de décharge électrique - Les batteries ou leurs composants ne peuvent pas être remplacés par l'utilisateur.

4 Scooter Assembly


1. Take out the scooter, install the kickstand with the tool kit and unfold it. Then unfold scooter and fix the folding mechanism.
(Refer to "Folding and Carrying" for details of unfolding.)

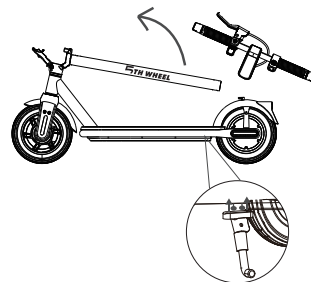

3. Use the tools included in the package to tighten the screws.




2. Insert the handlebar into the scooter bar.

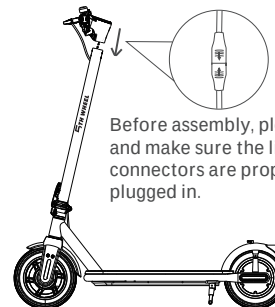

Before assembly, please check and make sure the line connectors are properly plugged in.


4. After assembly, check whether the power switch can work normally.

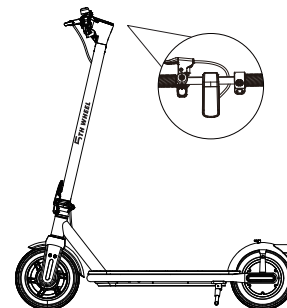


5 Unfolding/Folding/Carrying

1. Unfolding Operations


1. Turn the folding clip clockwise until it is fully open.

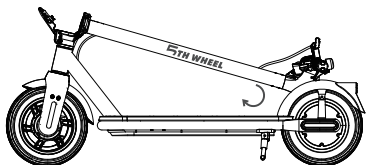

2. Pull up the body lever while opening the folding clip.

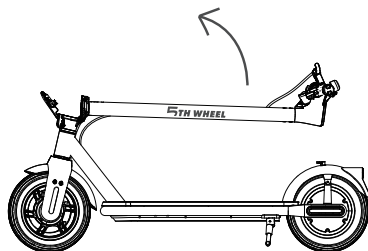

3. Turn the latch clockwise until it is fully snapped.

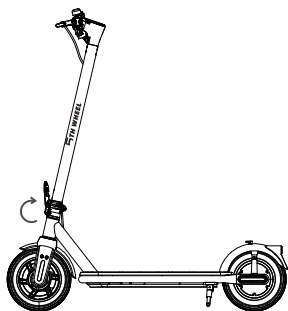

4. Check whether the latch key is returned to the bottom.




2. Folding Operations

Note: For safety, it is recommended to fold the scooter after it is shut down.


1. Lift the latch key up.




2. Rotate the latch counter clockwise while lifting the latch key.

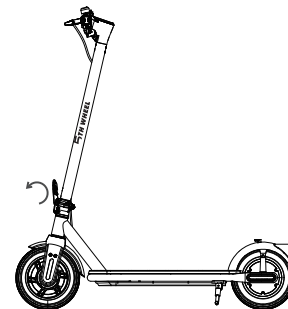


3. Lower the body rod slowly.

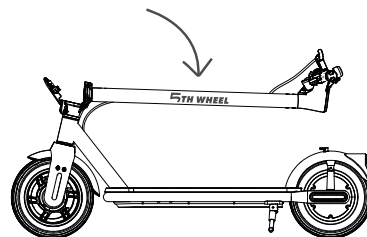

4. Open the folding clip and hang it on the rear fender buckle.

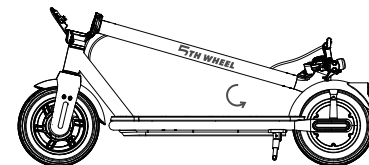

3. About Carrying

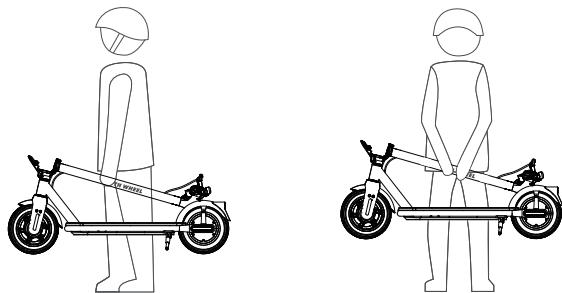


After folding, you can carry the scooter with one or two hands. Please check whether the folding hook is reliable before moving the scooter.

4. About Charging

⚠️ **Use only with specified charger in instruction.**


⚠️ **When the indicator light is red, it indicates that it is charging, and when fully charged, it will turn green. During charging, the scooter cannot be opened and the charger needs to be unplugged to open it.**

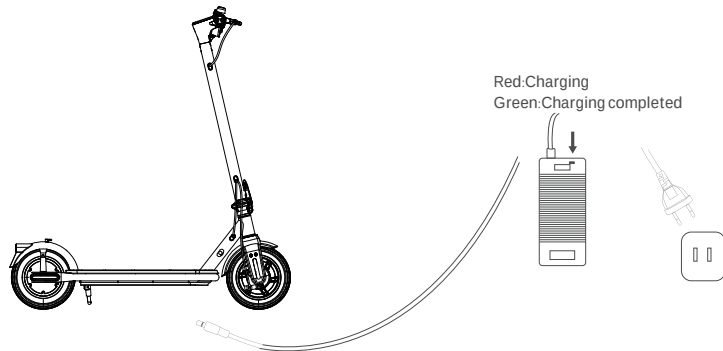

6 Riding and Parking

Preparation for riding


1. Select an appropriate riding place.
2. Unfold the scooter according to the unfolding instructions and wear protective equipment.
3. It is necessary to check that the steering system is correctly adjusted, that all connection elements (such as a folding system) are correctly tightened and not broken, and that the brakes and wheels are in good condition.

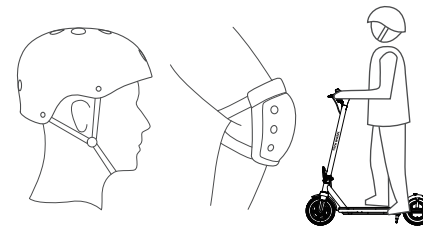

Riding

1. Press the power button to turn on the scooter.
2. Put one foot on the footboard and the other foot on the ground.
3. Make the scooter body slide forwards to 2mph (3km/h) and gently press the right thumb accelerator. The scooter will slowly run forwards. When the scooter is running steadily, put the other foot onto the footboard. The larger holding angle of the right thumb accelerator, the higher the speed.


⚠️ **Note: For the riding safety, The scooter has a non-zero start mode. The accelerator cannot be enabled until the body slides forwards for a certain**

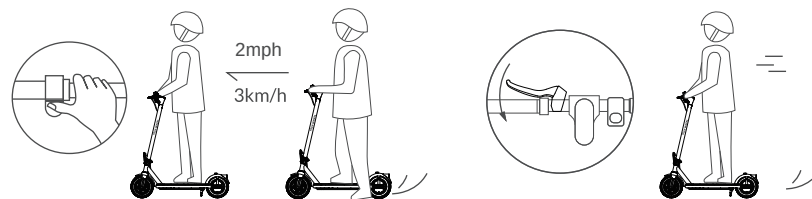


Stop

Under normal circumstances, if you hold the left brake lever, the motor will be immediately powered off and subject to braking. The greater the holding force, the greater the braking force.

7 Control System

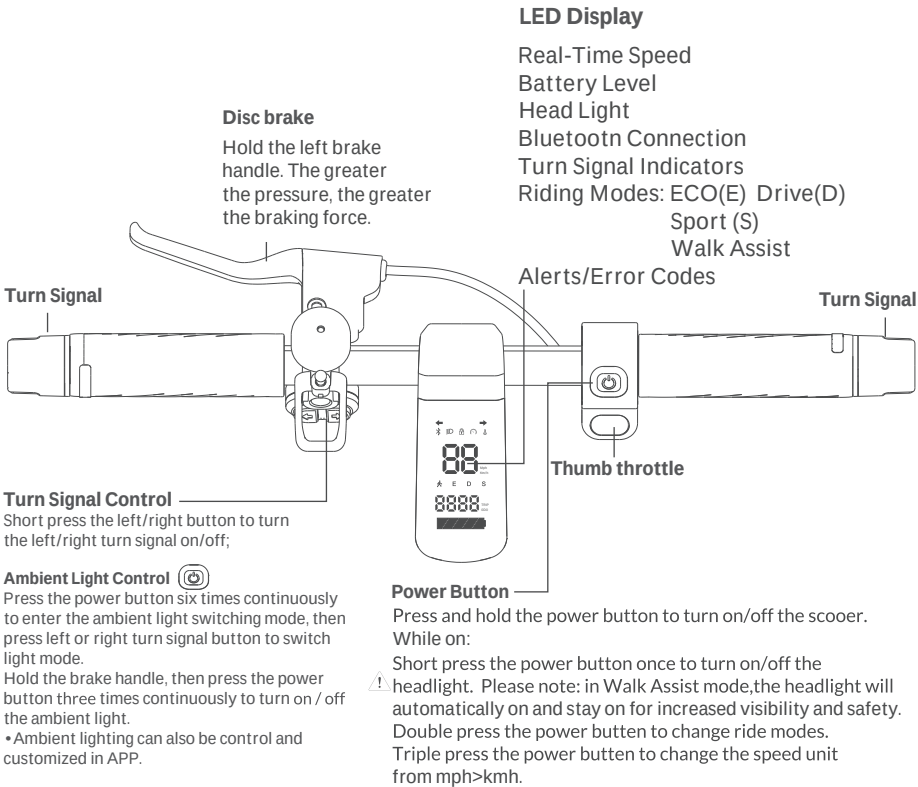

LED Display

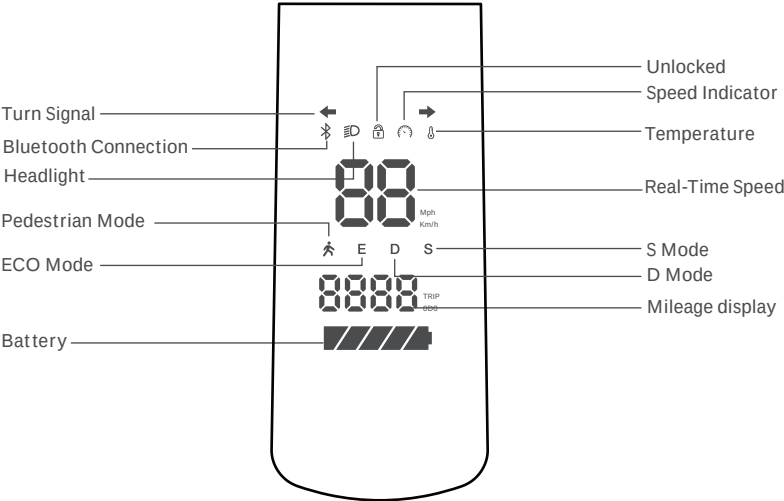

Power Switch

Short press to turn on, long press to turn off;
Press the button once to turn on the headlight; Double press the button to shift the gear mode; Press the switch key three times continuously to switch the speed unit.

Gear Setting

Quickly press the power key twice to switch gears. Gears can be set to pedestrian mode, ECO mode, D mode and S mode.

Speed Control

When riding the scooter at a speed faster than 2 mph(3km/h), the throttle will get started and take effect. By pressing the throttle, the user can control the riding speed.

Brake Control

Hold the left brake handle. The greater the pressure, the greater the braking force.

LED Headlight

After the scooter is turned on, the single power switch turns on/off the front lights.

Turn Signal Control

Short press the left/right button to turn the left/right turn signal on/off.

Ambient Light Control

Press the power button six times continuously to enter the ambient light switching mode, then press left or right turn signal button to switch light mode. Hold the brake handle, then press the power button three times continuously to turn on / off the ambient light. These functions can also be set in the mobile APP.

Speed Unit Switching

After opening the vehicle, press the switch key three times continuously to switch the speed unit.

Cruise Mode

Press and hold the throttle at the same speed (≥3mph) for 5 seconds to activate cruise control mode. Cruise mode can be turned off by braking or re-pressing the throttle. The cruise control function is activated by default, which can be turned off by pressing the button five times continuously or operated in the mobile APP.

Zero Start



This function is off by default, which can be activated by pressing power button four times continuously or operated in the mobile APP. After activation, you need to squeeze the brake once to start the vehicle.

8 Indicator Description


If there is anything abnormal about the scooter, the warning indicator will flash with the following codes.

Codes	Describe	Maintenance and treatment
E1	Motor Hall anomaly	BOOT failure, Check that the motor Hall wiring is normal,Brake occurs, need to check the replacement of motor or controller to eliminate the problem.
E2	Throttle Hall anomaly	Check if the throttle is zero, the throttle line and the throttle are normal, Unplug the throttle cord and restart the car to troubleshoot the problem.
E3	Brake Hall anomaly	Check whether the brake will be reset to zero position, and the brake line and the brake will be normal, Can unplug the electronic brake wiring and restart the car to eliminate the problem.
E5	Bus high voltage	The main line voltage is too high, BOOT failure, need to check whether the battery voltage is normal, cycling failure, need to replace the battery or controller to remove the problem.
E6	Short circuit fault	Check if a short circuit is wired or installed, Or replace the controller to troubleshoot.
E8	Instrument panel communication failed	Check the connection between the instrument panel and the Controller Assembly line is normal. Shut down the machine and restart the car after the connection of the assembly line is replugged.
E9	Motor Overheated	The motor temperature is too high. Allow the vehicle to cool down before restarting. If restarting fails, replace the motor to resolve the issue.

9 About Charging

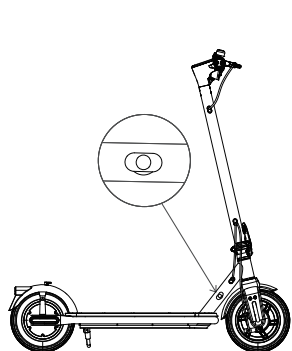

Remove the rubber protective cover of the charging port



Connect the charger.



After charging push the rubber protective cover back in

- 1.Remove the rubber protective cover, and insert the charger connector into the charging port of the body.
- 2.Insert the power plug of the charger into the power socket.
- 3.When the charger indicator is red, it indicates that the battery is being charged. When the charger indicator turns green, it indicates that the battery has been fully charged.
- 4.Requirement to power-off the vehicle during charging, or into a certain non-operational mode.

10 About the Battery and Charger

The electric scooter is equipped with a dedicated lithium battery and charger cable. Both the scooter and its accessories have product identification numbers. It is forbidden to use the charger cable of other brands. The charger cable provided by the company must not be used for other purposes. The company is not responsible for the resultant damage to the battery or charger.

Battery 

The lithium battery provided by the company can be recharged for at least 300 times. Please charge full battery for the first time before using it. The battery can be charged at any time, and there is no any damage to charge it frequently. Meanwhile, please don't forget to charge it per 3 months if you don't use it for a long term.

Temperature limit
Charging: 32°F ~ 113°F (0°C~45°C)
Operating: -4°F ~ 113°F (-20 °C~45°C)
Storage: -4°F ~ 113°F (-20 °C~45°C)

Charger



Use only the dedicated charger provided by the company, which includes built-in charging protection. The charger will automatically shut off once the battery is fully charged. Typical charging time is 5-6 hours. Battery damage caused by water, collisions, or other abnormal factors is not covered under the warranty.

Production factory: SHENZHEN XIN SHENG LI POWER SUPPLY TECHNOLOGY CO.,LTD.
MODEL: XSL065-4200150
INPUT: 100-240V~50/60Hz 1.5A
OUTPUT: 42V  1.5A

Charging instructions



- 1.Open the rubber cover and insert the charging plug into the port.
- 2.Connect the other end of the charger to a power outlet.
- 3.The indicator lamp will turn red while charging, When it turns green ,charging is complete.
- 4.Power off the scooter and keep it away from water before charging.
- 5.Use only the specified charger provided with the product.
- 6.Warning: Handle with care to avoid electric shock.

Kinetic energy recovery



Press the brake in the running process to enable the kinetic energy recovery system and convert part of kinetic energy into electrical energy to be stored and used. The kinetic energy recovery system can enhance the experience of emergency braking. At the same time, the recovered kinetic energy can help increase the endurance.Changes in the power are displayed simultaneously.


11 App Description

We pay great attention to user experience and constantly inject new functions into the App, so the App UI may change with version updating. The following contents are for reference only, please follow the instructions based on the current App version.

1.1. Please use your mobile phone to scan the QR code to download the App, or search "5thWheel" in the app store to download and install it. If you have installed the App, please ensure it is the latest version.



2. 2. Open the App, complete the registration for the first time use. After registering, please login to the homepage, tap "+" on the upper right or Search Devices button in the mid-lower section, then follow prompts to add your scooter. If you fail to scan, please ensure your Bluetooth and scooter are on, and try again.

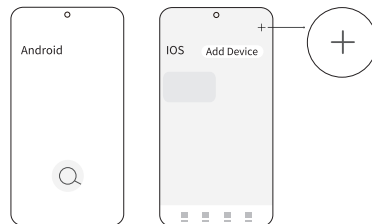

Special note: About the locking function, it can only ensure that the scooter can't run normally. Due to the light weight of the scooter and the whole scooter is composed of mechanical parts, it can be removed with corresponding tools. To prevent your electric scooter theft, suggest always park your scooter in a well-lit and highly visible area for you, or invest in a high-quality and sturdy lock that can keep it securely locked up.

12 Maintenance

Lubrication



For maintenance, add a small amount of white grease or lubricant to the folded part once every six months. Check the scooter once every three months for screw loosening. Tighten the loose screw.

Battery



When you get the electric scooter for the first time, please fully charge the battery before using the scooter. The battery can be charged at any time to ensure the power supply. It will not be damaged during charging. When not in use, the battery needs to be charged once every three months.

*Laboratory data

Storage and daily maintenance



Avoid leaving scooter under direct sunlight or in severely humid places for a long time. Keep the scooter clean.

Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.

Cleaning Recommendations



If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth. Do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent fire damage. Do not wash the scooter with a high-pressure water spray. During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

Routine Inspection



1. Before riding, please confirm the folding mechanism is locked;
2. Please check whether the tires are badly worn. Please contact the local authorized dealer if they needs to be replaced;
3. Please check whether the tire pressure is at the standard value. If the tire pressure is too low, please inflate the tires immediately;
4. Please check whether the wear condition of the brake pad affects the use of the brake system. If so, please contact the local authorized dealer to deal with the problem;
5. The screws used in this product are self-tightened screws. Please note that the effect may be gone after several times of tightening.
6. WARNING – Risk of Fire and Electric Shock – No User Serviceable Parts.
7. Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials, Store Indoors When Not in Use.

13 Parameter Configuration

Parameter	Model	AURAPRO
Size	Upright: L x W x H	44.3x20.3x46.8 inch (1125x515x1190 mm)
	Folded: L x W x H	44.3x20.3x18.7 inch (1125x515x475 mm)
Weight	Net Weight	31.7lbs (14.4kg)
Status	Load Range	110 ~ 265 lbs (50~120kg)
Main parameters	Max Speed	20mph(32km/h)
	Range	14~19miles (22~30km) *Depending on the environment, angle, speed, driving habits and other factors; *Ambient light has a noticeable impact on battery range.
	Max Incline	Approx.21%
	Tire	10" pneumatic tires
	Brake System	Disc brake+Electronic brake
	Display	Speed, unit, gear, error, etc.
	Lighting System	LED high-brightness headlight, taillight, turn signal, ambient light
	Motor Power	350W
Charging parameters	Adapter	Input: 100-240VAC 50/60Hz 1.5A Output: 42.0V  1.5A
	Lithium Battery	36VDC 7.8AH
	Charging Time	5-6h
Wireless parameters	Wireless Frequency Range	2402~2480 MHz
	Wireless Maximum Output Power	Max 10dbm

14 Authentication

The product has passed the ANSI/CAN /UL-2272 certification of the CSA.

The battery complies with the UN/DOT 38.3.

According to the Federal Communications Commission (FCC) Compliance Statement as follows:

The product complies with part 15 of the FCC rules, and the operation must meet the following two conditions: (1) the product should not cause harmful interference, and (2) the product must accept any received interference, including interference that may lead to accidental operation. Any change or modification not expressly approved by the responsible party may make void the user's right to operate the product.



The EU Compliance Statement is as follows:



WEEE needs to properly dispose of and recycle the product. This sign indicates that the product should not be disposed of together with other domestic waste throughout the EU.

Therefore, in order to prevent possible harm of uncontrolled waste treatment to the natural environment or human health, it is necessary to recycle it and promote the sustainable reuse of material resources. To recycle the used product, use the return and collection system or contact the retailer who can use the product for environmentally safe recycling.



EU Battery Recycling Information:

Batteries or battery compartments are marked in accordance with the European Directive 2006/66/EC and the amendment 2013/56/EU on batteries and accumulator cells and scrap batteries and accumulator cells.

The directive applies to the recycling framework of waste batteries and accumulator cells throughout the EU. The label on the battery indicates that the battery should not be discarded, but recycled at the end of its service life according to the

According to the European Directive 2006/66/EC and the amendment 2013/56/EU, batteries and accumulator cells are labeled to indicate that they will be collected separately and recycled at the end of their service life. The label on the battery may also contain the chemical symbols of the relevant metals in the battery (Pb, Hg and Cd). Users should not dispose of batteries and accumulator cells as garbage, but use the collection framework available to customers to recycle and dispose of batteries and accumulator cells. With the engagement of users, it is important to minimize any potential impact of batteries and accumulator cells on the environment and human health due to the presence of potentially hazardous substances.

Before placing electrical and electronic equipment (EEE) into a waste collection stream or waste collection facility, users of equipment containing batteries and/or accumulator cells must remove these batteries and accumulator cells for separate collection.



Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive

The products and parts (cables, wires, etc.) of Invanti (Beijing) Technology Co., Ltd comply with the requirements of directive 2011/65/EU on restricting the use of certain hazardous substances in electrical and electronic equipment ("RoHS recasting" or "RoHS 2")

Trademark and Legal Statements

5TH WHEEL and the 5TH WHEEL logo are trademarks of Invanti (Beijing) Technology Co., Ltd., used under license. Android and Google Play are trademarks of Google Inc. and the App Store is the service mark of Apple Inc. Their respective owners reserve the trademark rights mentioned in this user manual.

The products involved in the registered trademark of 5TH WHEEL are protected by relevant patent laws.

In this user manual, we make our utmost to describe all the instructions and functions of the scooter electric scooter. With constant updates and iteration, the electric scooter received may be slightly different from the product features shown in this manual. For more information, please visit the Apple App Store (iOS) to download the App.

Please note that Invanti has developed products with many functions and different models of products, and some of the functions mentioned here may not be applicable to the product or equipment received. The manufacturer reserves the right to change the design and function of the electric scooter and documents without notice.

2026 Invanti (Beijing) Technology Co., Ltd all rights reserved.

FCC 15.21 Information to user

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC 15.105 Information to the user(Class B)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

*RF warning for Mobile device: This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux RSS exemptés de licence d'innovation, sciences et développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas causer d'interférences.

2. Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un fonctionnement indésirable de

Disposal



Packaging materials can be transferred back to the raw material cycle. Dispose of packaging materials in accordance with legal requirements. Information can be obtained from your community's recycling organization.

15 Contact US

If you encounter any problems when using the product, please feel free to contact us through the following methods or **scan the QR code** to get a quick response and a satisfactory solution



Aftersales QR Code



Unbox QR Code

Important Notice

Please check following first before return to retailers:

If you experience any issues with this product:
Do not return it to the store where it was purchased.

Our authorized service team is here to help.

Please contact Customer Support at:

1. Please check FAQ first.
2. Email Address: service@ride5thwheel.com
3. More support and resources available at our website: ride5thwheel.com.



FAQ QR Code

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED STATEMENT

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction.

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux RSS exemptés de licence d'innovation, sciences et développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas causer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un fonctionnement indésirable de l'appareil.

Déclaration relative à l'exposition aux rayonnements :

Cet équipement est conforme aux limites d'exposition aux rayonnements d'ISED définies pour un environnement non contrôlé. L'appareil peut être utilisé dans des conditions d'exposition portatives sans restriction.