



Kieslect Lady Watch Lora 3 Series User Manual





Get the manual
in more languages

Notes:

1. Our company reserves the right to modify the contents of this manual without prior notice. It is normal that some functions may differ in some software versions.
2. Please read this manual carefully before using the watch.
3. Before using this watch, you need to connect the APP to synchronize the time and set your personal information.
4. This product supports 5ATM level waterproof, suitable for use in swimming pools and shallow water; not suitable for deep sea diving, sea swimming or sauna, hot water, tea and other corrosive liquids which are destructive to the watch, will not be able to enjoy the product warranty and free repair service.
5. Charge for no less than 2 hours before use. Please use the correct charging adapter of 5V, > 5V may damage the device.
6. If the watch cannot be turned on after a long time, please wipe the charging contacts of the charging cable clean when using it again to avoid sweat or water residue.

01 Appearance & Charging

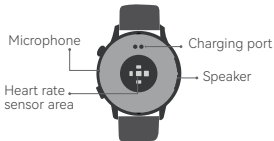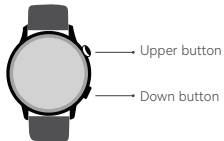



Button Functions

Item	Press once	Press twice	Long press	Revolve
Upper button	Display on / Back / Silence incoming calls	Activity log / Hang up the call	Power on / Power off / Restart	Page turning / Changing watch face / Volume adjustment
Down button	Display on / custom applications (Default exercise)	Voice assistant	SOS	/

02 How to wear

Please wear the device correctly on your wrist, about one finger from your wrist bone, and adjust it to a comfortable position.

The pictures below are for reference.

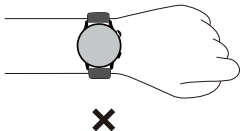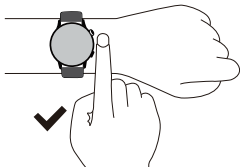

Tip: Incorrect wear may result in inaccurate health test data.

03 Download and Connect APP

03.1 Scan QR code



03.2 Install "Kstyle OS" APP



03.3 Open App, Click " Add device now " - Click to connect. - Click " Pair " to connect with Audio Bluetooth.

Tip: The above operations are performed using the iOS system, but there are slight differences when using the Android system. Please follow the connection instructions on the APP to connect.

03.4 Check connection status



- ② 1.BT / BLE disconnected, please check if the Bluetooth of your cell phone and the BT switch of your watch are on.
- ② 2.BT disconnected, can't use voice functions such as call / music / voice assistant, please check whether the Bluetooth of your cell phone and the BT switch of your watch are turned on.
- ② 3.BLE disconnect, can't connect APP, please check if your phone's Bluetooth is on.
- ② 4.BT / BLE connected.

For more information on setting up and using the watch, please visit: <https://www.kieslect.com/guide/user-manual/>

04 Parameters

Bluetooth: 5.3

Screen Size: 1.32"

Waterproof: 5ATM

Net Weight: 27g

Battery Type: Li-ion

Size: 42.5*11.2mm

Charging Voltage: 5V

Battery Capacity: 315mAh

Working Temperature: -20°C~60°C

Bluetooth:

Frequency Range: 2402-2480MHz

Maximum EIRP: 5.87dBm

BLE:

1Mbps & 2Mbps

Frequency Range: 2402-2480MHz

Maximum EIRP: 5.87dBm

05 Warranty

1. The watch and charging cable warranty is one year.
2. Defects caused to the following reasons are not free warranty services:
 - (1) Self-assemble or disassembly;
 - (2) Fall and damage during use;
 - (3) All man-made damage or due to the fault of a third party, improper use (such as: smart watch water, external force crushing, scratches in the use process, etc.);
3. For warranty services, please contact us: service@kieslect.com;
4. Please note that all functions of the product are based on physical objects.

If you need the warranty card, please go to the official website:
<https://www.kieslect.com/download-center/> to download it.