

AUTOMATIC CAT LITTER BOX EASE

ABRCT

USER MANUAL



ÄI CARE. O IN LOVE

Contents

Getting Started	1
Important Safety Instructions	2
Components List	3
Product Structure	4
Installation Steps	5-7
Adding Cat Litter	8
Controls & Indicators	9
Wi-Fi Setup	10
App Setup	11
App Overview	12
Cleaning & Safety Settings	13
Cleaning & Odor Control	14
Disassembly & Cleaning	15
Cleaning & Maintenance	16
Troubleshooting	17
Warranty & Service	18
FCC Statement	19

Getting Started

Some cats may need time to adjust to a new litter box. Follow the steps below to help support a smooth transition.

- Place a familiar item with your cat's scent near the litter box.
- Add a small amount of used litter from the previous litter box to provide a familiar scent.
- Gently introduce your cat to the new litter box. Do not force your cat to stay inside.
- Allow two to three days for your cat to adjust and become comfortable with the new litter box.



Safety: For kittens, small cats, senior cats, or cats with limited mobility, use Manual Cleaning mode and supervise each cleaning cycle.


Important Safety Instructions

- For cats under 1.5 kg, under 6 months old, or with limited mobility, use Manual Cleaning mode only and supervise the entire cleaning cycle.
- Always place the product on a firm, level surface. Do not place the four weighing feet or the waste drawer on a litter mat.
- Do not manually move the rake while it is installed.
- Keep both side drive housings at least 10 cm away from walls or other obstacles.
- Do not overfill the litter box. Do not use strip-shaped tofu litter.
- Triple-click the operation button, or select Return to Cleaning Position in the App, to move the rake to the cleaning position. Disconnect the power before disassembly or cleaning.
- Wash only the silicone liner, rake, and removable litter box parts. Allow all parts to dry completely before reassembly.
- The main body contains electronic components. Do not rinse or immerse it, and do not allow liquid to enter the main body.
- Keep the device away from direct sunlight to avoid interference with the sensors.


Components List




Right Guard × 1

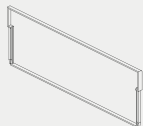


Center Guard × 1

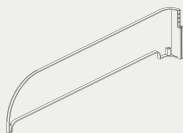


Left Guard × 1

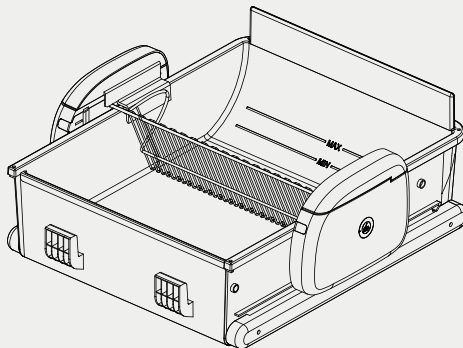

Main Unit × 1

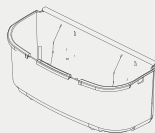


Waste Drawer × 1

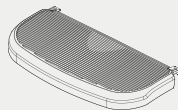

Waste Drawer Lid × 1



Waste Liner × 1



Power Adapter × 1




Deodorant × 1




User Manual × 1

Product Structure

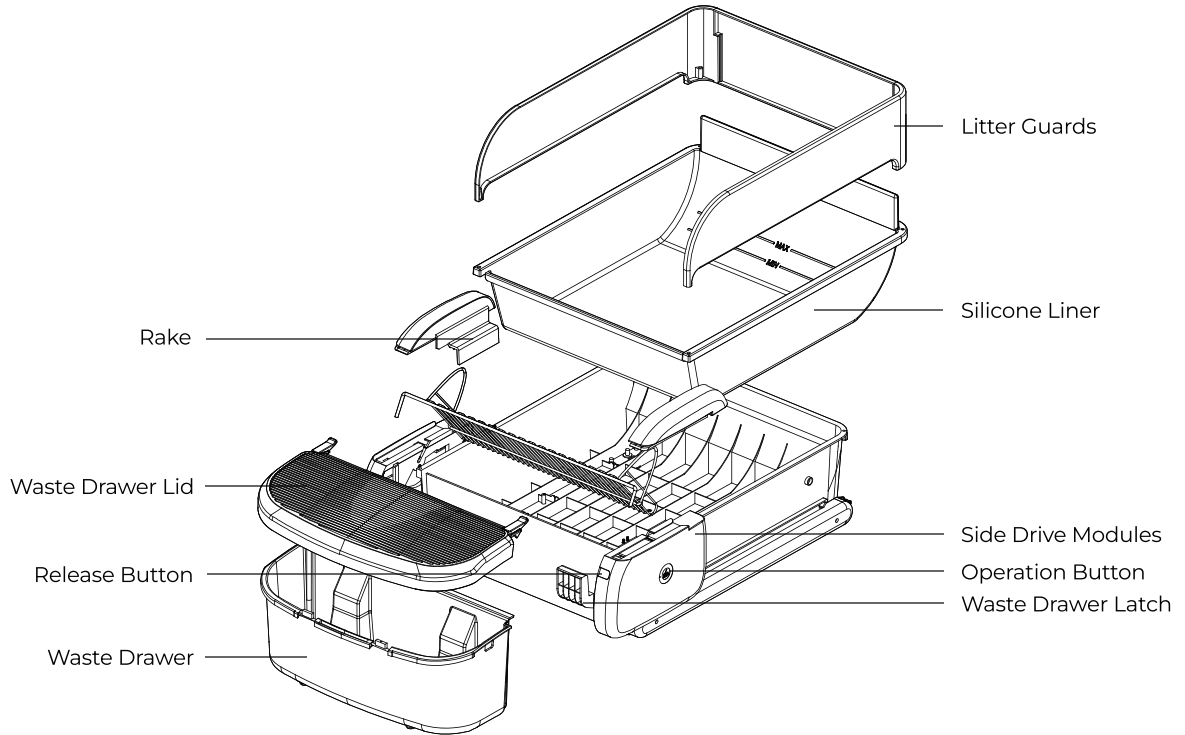


Installation Step 1


Before Assembly: Unpack the product and confirm that all listed components are included. Complete all assembly steps before connecting the product to power.

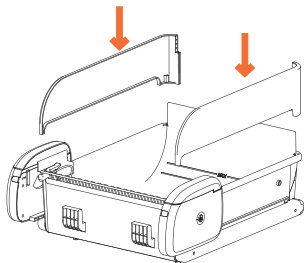


- 1** Insert the left and right guards into the corresponding side slots.

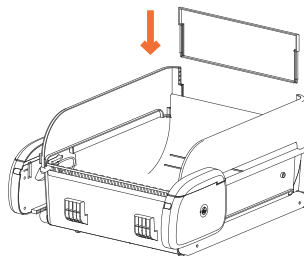

- 2** Insert the center guard into the rear slots to connect the two side guards.

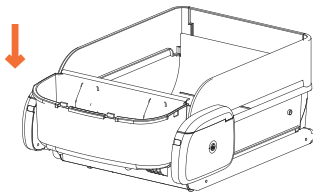


- 3** Insert the waste drawer into the rear compartment and secure it with the latch.

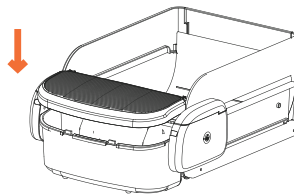

- 4** Place the waste drawer lid onto the waste drawer.

Installation Step 2


Complete product assembly. DO NOT add cat litter yet.

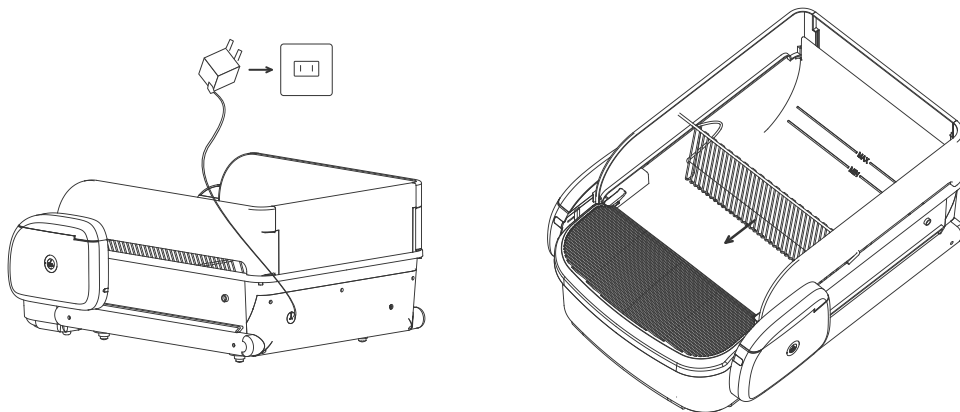


- 5 Connect the power adapter and wait for the rake to complete automatic initialization and return to its home position.

Installation Step 3


Install a waste liner.

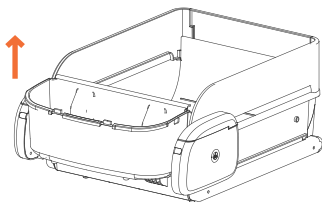

- 6** Pull out the waste drawer and remove the lid.

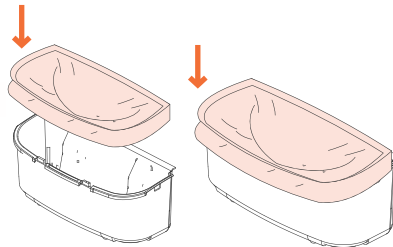


- 7** Fit the waste liner over the waste drawer.

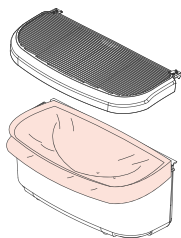

- 8** Refit the lid and smooth the liner against the inner walls of the waste drawer.

Tuck the excess liner beneath the bin and keep it away from the silicone liner.

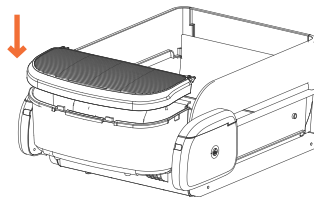

- 9** Reinstall the waste drawer into the main unit.

Adding Cat Litter

Litter selection: Use clumping litter such as bentonite, mineral, tapioca, or other non-strip clumping litter. Do not use strip-shaped tofu litter.

⚠ DO NOT use strip-shaped tofu litter.




⚠ DO NOT exceed the MAX line.
DO NOT fill below the MIN line. This may affect clumping and cleaning.

Disconnect the power adapter before adding litter.

Fill the litter box until the litter level is between the MIN and MAX marks on the silicone liner. Do not fill above the MAX line or below the MIN line, as this may affect clumping and cleaning performance.

Reconnect the power, then level the litter by hand or double-click the operation button to activate the smoothing function.

Controls & Indicators

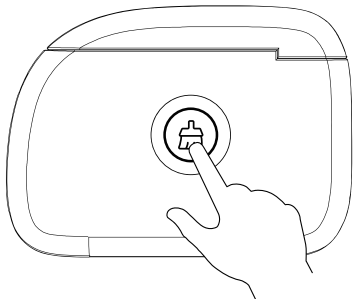

Operation Button

Single-click

Start cleaning / pause operation

Double-click

Level the litter

Triple-click

Move the rake to the cleaning position

Press and hold for 3 seconds

Reset Wi-Fi / enter pairing mode

Indicator Light



White Status Indicator

Steady: Standby or operating

Rapid flashing: Device resetting

Slow flashing: Wi-Fi pairing mode



Red Warning Indicator


Steady: A pet is detected inside

during operation, or the waste drawer is removed during operation.

Wi-Fi Setup



- Download the “HHO LOVE” App by scanning the QR code, or search for “HHO LOVE” in the App Store or Google Play.

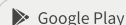

- Register an account.




- Make sure your phone is connected to a 2.4 GHz Wi-Fi network. Turn on Bluetooth and grant the required permissions.
- Make sure the litter box is in standby mode with the white indicator steadily lit and the rake in its home position.
- Press and hold the operation button for 3 seconds. The white indicator flashes rapidly while the device resets. Release the button and wait until the indicator flashes slowly, indicating Wi-Fi pairing mode.
- If necessary, reconnect the power and wait for initialization to complete.
- This product supports 2.4 GHz Wi-Fi only. Network conditions may delay App commands.

App Setup




- Open the App, tap the plus icon (+), and follow the on-screen instructions to add the device.

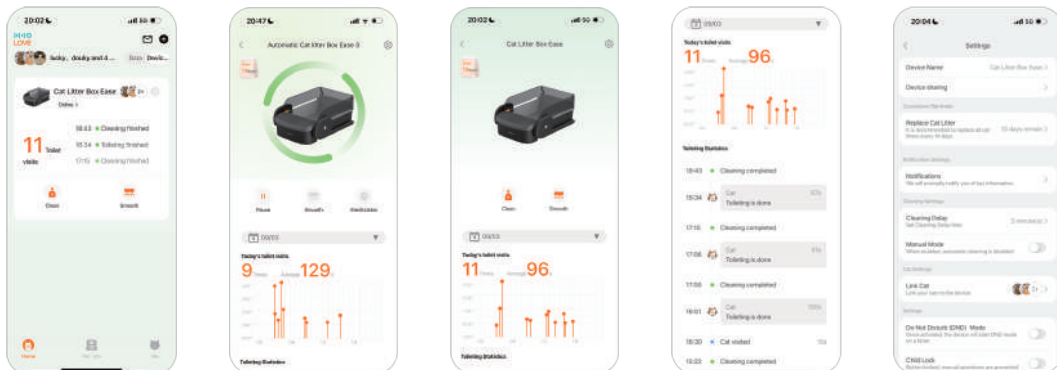


- Use the App to start cleaning or litter leveling, view your cat's daily litter box activity, and customize device settings.

App Overview

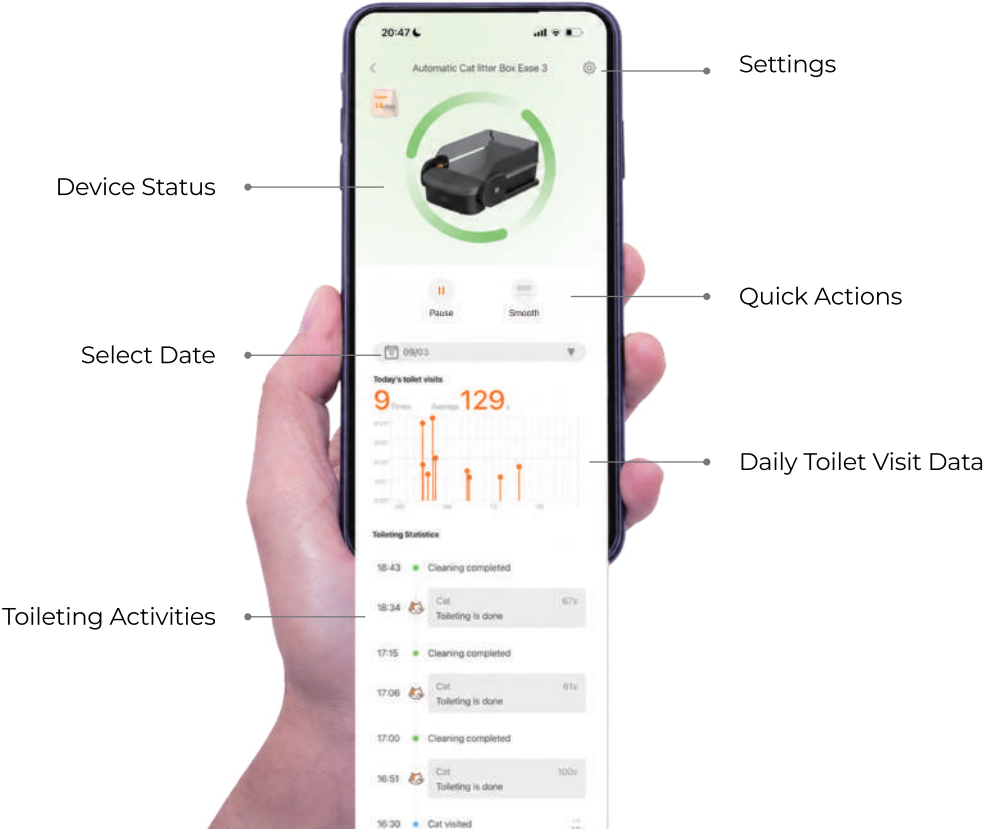

Cleaning & Safety Settings

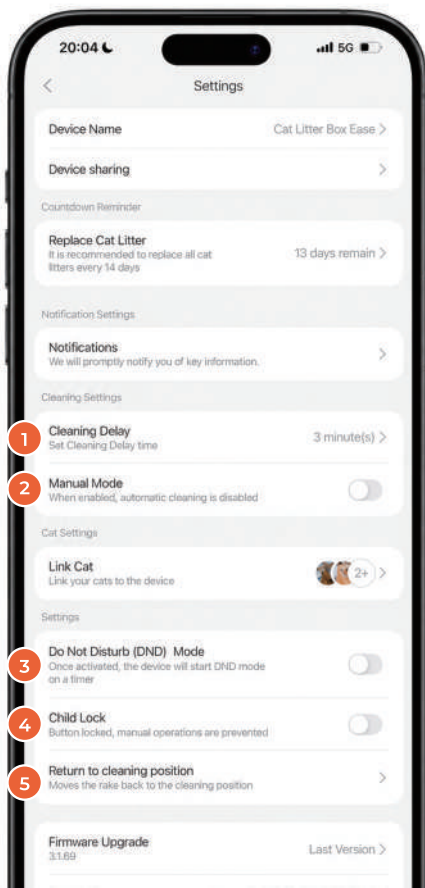

1 Cleaning Delay

Set the delayed cleaning before automatic cleaning begins after the cat leaves.

2 Manual Mode

Disable automatic cleaning. Start cleaning manually using the operation button or the App.

3 Do Not Disturb (DND) Mode

Set a time period during which automatic cleaning is disabled.

4 Child Lock


Disable manual cleaning and litter leveling on the device. These functions remain available in the App.

5 Return to Cleaning Position

Move the rake to the cleaning position. Stay beside the device until the rake stops, then unplug the device before removing the rake and silicone liner.



After cleaning and reassembly, keep the device unplugged for at least 5 seconds before reconnecting the power.

Cleaning & Odor Control

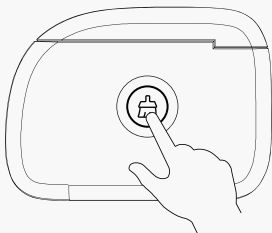

Manual Cleaning

- Press the operation button once to start cleaning. Press again to pause.
- Use Manual Mode and supervise the entire cycle for kittens, small cats, senior cats, or cats with limited mobility.

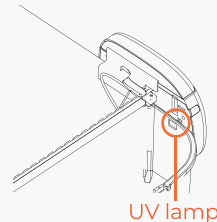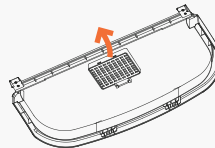

Odor Control

- Open the deodorant compartment and insert the supplied deodorant pack. Replace it every 1-2 weeks.
- A UV lamp is installed inside the waste compartment.

Automatic Cleaning & Safety

- After the cat leaves, the device waits for the preset delay and then starts cleaning automatically. The delay can be adjusted in the App.
- The device pauses if it detects a cat, a weight increase, or removal of the waste drawer. It resumes automatically once safe operating conditions are restored.
- If a weighing sensor alarm occurs, remove any objects from beneath the device and ensure all four weighing feet are resting on the same firm, level surface.


Disassembly & Cleaning

Before disassembly


Triple-click the operation button, or select Return to Cleaning Position in the App, to move the rake to the cleaning position. Then disconnect the power before disassembly or cleaning.

Cleaning Position


Move the rake to the cleaning position before removal. Once activated, the rake remains in the cleaning position. Always unplug the device before removing the rake. After cleaning, reinstall all parts and reconnect the power to reset the device.

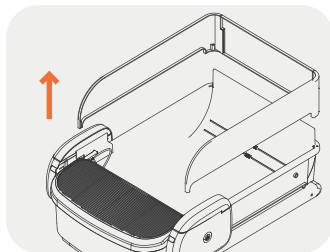


Remove all the guards.

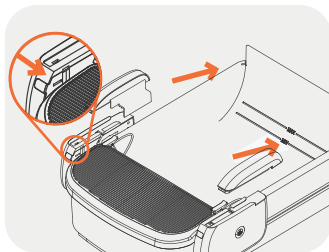


Press both side buttons and remove the cover.

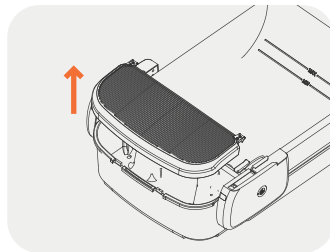


Remove the waste drawer lid.

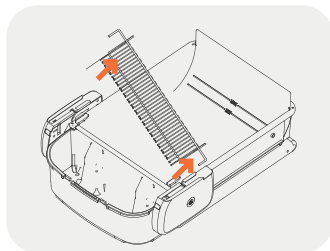

15 Lift the rake out at an angle.

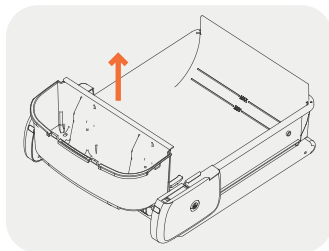


Remove the waste drawer.

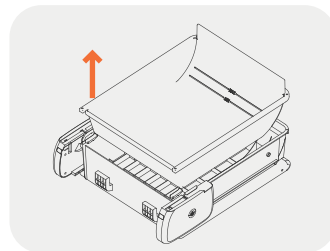

Remove the silicone liner.

Cleaning & Maintenance

- Disconnect the power supply before cleaning.
- Clean only removable washable components. DO NOT immerse or rinse the main body.
- Dry the silicone liner, rake, and all other washable parts completely before reassembly.

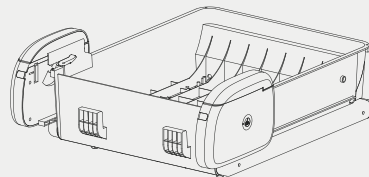

- Install the rake in the correct direction and lock both side latches after installation.
- Before removing the silicone liner, make sure no litter remains trapped inside or beneath it.
- After reassembly, reconnect power and allow the device to reset.
- Clean the waste bin every 3–4 days in summer and approximately once a week in winter, adjusting the frequency according to actual use.
- Replace the deodorant pack approximately every 1–2 weeks.

Troubleshooting

Issue	Recommended action
The cat does not use the new litter box.	Add a small amount of used litter or another familiar scent, gently introduce your cat to the new litter box, and allow 2–3 days for adaptation.
The UV lamp does not appear to operate.	Make sure the UV function is enabled in the App.
The red indicator remains on.	Check for added weight, make sure the waste drawer is installed correctly, remove any objects from beneath the device, and ensure all four weighing feet are resting on the same firm, level surface.
The litter level is too low.	Add litter when the level falls below the MIN mark. Do not fill above the MAX mark.
Clumps stick to the liner or are not removed completely.	Use a fast-clumping, absorbent litter; check whether your cat has soft stool; increase the cleaning delay in the App; and inspect the silicone liner for damage.
Which litter should be used?	Use bentonite, mineral, tapioca, or other non-strip clumping litter. Do not use strip-shaped tofu litter.
Wi-Fi pairing fails.	Make sure your phone is connected to a 2.4 GHz Wi-Fi network. Turn on Bluetooth and grant the required permissions. Press and hold the operation button for 3 seconds to reset Wi-Fi, then repeat the pairing process.

Warranty & Service



Thank you for choosing the ABRCT Automatic Cat Litter Box Ease.

Warranty service is provided in accordance with the laws and regulations applicable in the region of purchase.

The following are not covered by the warranty:

- Damage or defects caused by accidents, misuse, abuse, or improper use.
- Damage resulting from repair, maintenance, servicing, disassembly, or modification performed by unauthorized personnel.
- Any product that has been tampered with, altered, modified, or used for commercial purposes.
- Normal wear and tear of consumable parts or components subject to wear during normal use.
- Damage caused by external force or failure to follow this User Manual, including the use of an unsuitable power supply.
- After-sales service is available only for products purchased from ABRCT or an ABRCT-authorized retailer or distributor. When contacting service@hholove.com, please provide your order number.

FCC Statement

- The product complies with Part 15 of the FCC Rules and is subject to two operating conditions: it must not create harmful interference, and it must accept all received interference, including interference that may cause unintended operation.

- Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

- RF EXPOSURE INFORMATION

The product complies with FCC radiation-exposure limits for an uncontrolled environment. Install and operate it with at least 20 cm between the radiating element and the user's body.

Join the HHOLOVE community for the latest product news and giveaway information.



Instagram



YouTube



TikTok



Facebook

Product Name: ABRCT Automatic Cat Litter Box Ease

Model: CT-LBWES

Power Input: DC 12 V, 1.5 A

FCC ID: 2A5DZ-CT-LBWES



Support

<https://www.hholove.com/support>



Email

service@hholove.com

HHO (Hangzhou) Digital Technology Co., Ltd.

Address: Building 9, Haizhi Center, Cangqian Street, Yuhang District,
Hangzhou, Zhejiang, China

Made in China

