


FOOT MASSAGER
Your Foot Massager

USER MANUAL

Z26

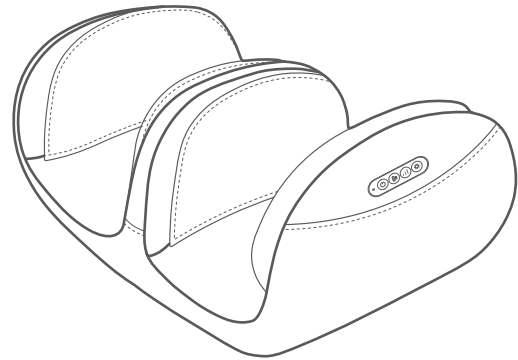

- The Product Is Subject To The Real Thing ●

Please read this manual carefully before use and keep it in a safe place for future reference.

CONTENTS



01	•	Name of each part
02-03	•	Instructions for use
04-06	•	Precautions / Common Failures / Solutions
07-08	•	Product maintenance and cleaning methods

Name of each part

Product Information

Product Name: Foot Massager

Rated Input Power: 10W

Model: Z26

Rated Working Time: 15 minutes


Rated Voltage (Charging Voltage): 5V 

Net Weight: 1.4 kg


Product Dimensions: 365 × 190 × 255 mm

Note: Slight variations in weight may occur due to manufacturing tolerances.

Product Description

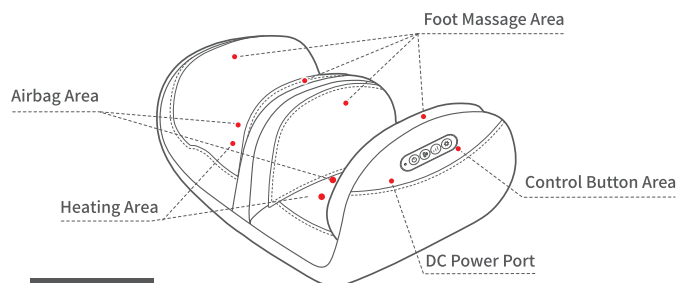

Basic Accessories

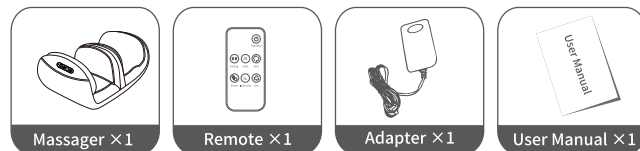


Instructions for use

Preparation Before Use

Check if the adapter plug is intact. Place the product with massage heads aligned to your feet. Connect the DC plug to the adapter, then plug the adapter into a power outlet.

Remote Control Buttons

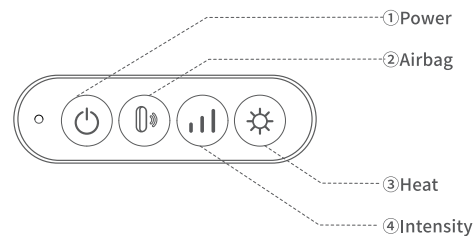

1. Power Button

Long press: Turns on/off. Defaults to Auto Mode 1 with 15-minute timer.

Red indicator = heat on; Green = heat off.

Short press: Cycles through reverse massage → heat only (massage off, default medium heat) → forward massage.

2. Airbag Button

Short press to switch among Mode 1, Mode 2 and Airbag Off.

3. Heat Button


3 heat levels (Low/Med/High). Defaults to Low. Press to cycle: Med → High → Off.

4. Intensity Button

3 intensity levels (Low/Med/High). Defaults to Med. Press to cycle: High → Low → Med.

Instructions for use

Remote Control Buttons

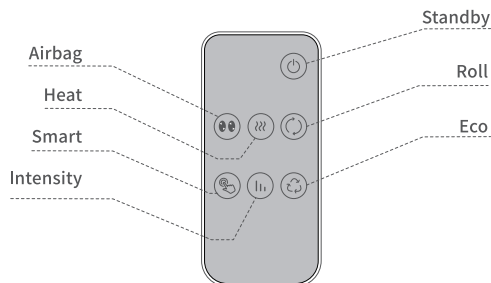

The remote has 7 buttons:

1. Standby Button

Power on with Auto Mode 1, 15-minute timer. Red indicator = heat on; Green = heat off.

2. Reverse/Forward Button

Short press to cycle: reverse message → heat only (massage off, default medium heat) → forward message.

3. Airbag Button

Short press to cycle: Mode 1 → Mode 2 → Airbag off.

4. Heat Button

Default low heat. Short press to cycle: medium → high → off.

5. Intensity Button

Default medium. Short press to cycle: high → low → medium.

6. Energy Saving Button

Activate energy-saving mode: heat switches to low, massage intensity unchanged.

7. Smart Button

Cycle through smart massage modes: Mode 1 → Mode 2 → Mode 3.

Precautions / common failures / solutions

Safety Instructions

(1) To prevent burns, scalds, electric shocks and other hazards due to improper use, please observe the following:

1. Unplug the product after use and before cleaning.
2. If the product falls into water, do not reach for it; unplug it first.
3. Do not use while bathing or showering.
4. Do not place or store where it may get wet.
5. Do not submerge in water or other liquids.
6. Do not use sharp objects on the product.
7. Keep dry; do not use in damp environments.
8. Unplug when unattended.
9. Keep away from children to avoid play.
10. Do not use if cord/plug is damaged, malfunctions, or has been dropped in water.
11. Keep power cord away from hot surfaces; do not place near fire or flammables.
12. This product is stimulating; do not use while sleeping.
13. Do not insert or drop objects into openings.
14. Do not operate where sprays or flammable substances are present.
15. Do not place under blankets or pillows to avoid overheating, fire or injury.
16. Do not move by pulling the cord or use it as a handle.
17. Turn off the product before unplugging to prevent damage.
18. Not intended for medical use.
19. Avoid strong impacts.
20. Use only manufacturer-supplied accessories; use as instructed. Damaged cord must be replaced by manufacturer, service personnel or qualified professionals to avoid danger.



Attention

Please unplug the product after using it in the case of bed, sofa and couch. Unplug the power supply to avoid danger or loss of personal property, etc.

Precautions / common failures / solutions

People not suitable for use

- If you have the following conditions, please consult a doctor before using this product
- During pregnancy, during menstruation or shortly after parting of the night
 - Those who use medical electronic devices such as cardiac pacemakers that are implanted in thebody
 - People with blood circulation disorders or thrombosis-Have osteoporosis
 - Skin infections
 - High fever-Traumatic injuries or superficial diseases-Doctor's orders to recuperate or feel unwell
 - The surface of the product will be hot during use, so people who are not sensitive to heat must be careful when using the product.

Safety matters

1. Each use time of no more than 15 minutes (the product automatically turns off after completing 15minutes of massage program), the use of too long may lead to overheating, thereby shortening the product life, such as the product overheating, please immediately stop using, first cool the product before the next operation.
2. In order to reduce the impact of the hedge current on the product, please do not frequently switch the power supply within a short period of time to extend the life of the product.
- 3, Please use the power adapter configured for this product, using other power adapters may cause damage
- 4,Do not use the damaged power supply or tamper with the circuit of this product.
- 5, If a power failure should be unplugged to avoid the sudden restoration of power to cause injury.
6. If you feel physical abnormalities during the use of this product, please stop using it immediately and consult a doctor.
7. This product is not recommended for people with physical disabilities, sensory or neurological deficiencies or lack of experience and common sense (including children, the mentally ill, thephysically paralyzed, etc.) to use, if necessary, must be used under the supervision and guidance oftheir guardians.

Failure phenomenon	Solution
Cannot start the massager	Please confirm that the power plug is correctly inserted into the socket. Please confirm that the socket switch has been turned on. Please confirm that the massager switch button has been pressed.
Massage suddenly stop in progress	Please check whether the power plug is unplugged from the socket or loose at the power The 15 minutes set by the automatic timing device has arrived. Overheating protection device to start, please turn off the main power supply, and wait for the massager to cool down.

Note: If the problem persists, stop using the product immediately and contact our after-sales service. Do not disassemble or repair the product by yourself.
Product color and specifications are subject to the actual item.
Although this manual has been strictly checked, typographical or printing errors may still exist. Your understanding is appreciated.



Product care and cleaning method

Maintenance method

- 1. Turn off the device after use and store it in a safe, dry, and cool place.
- 2. Avoid contact with sharp objects to avoid puncturing or damaging the appearance of the product.
- 3. Please do not store the product in high temperature, near flame or direct sunlight, otherwise it will cause fading and damage.
- 4. Avoid contacting the product and accessories with benzene, thinner or any other corrosive liquid.
- 5. When storing the product, do not store or hang the product by its charging cable

Cleaning method

- 1. Before cleaning, make sure the device is turned off and disconnected from the charging cable.
- 2. The product must not be immersed in any liquid, not directly rinse with water or any liquid directly.
- 3. Do not use sharp brushes, gasoline, kerosene, furniture cleaning fluid, etc. to wipe the product

Certificate


Product Name: Foot Massager

Product Model: Z26

Quantity: 1

Factory Date: _____

Inspector: _____

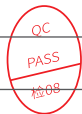

This product has been tested to meet the quality standards set by the commission, approved to leave the factory.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

